

Version 1:20



4465 West Sam Houston Parkway N. Houston, Texas 77041 WWW.TREEFROGSSHOWROOMS.COM © 2018 KID STRUCTURES INC. Sections

Section 1: Cover & Liability Info Section 2: Product Parts Section 3: Sub-Assemblies Section 4: Main Assebmly Section 5: Roof Options

IMPORTANT - PLEASE READ

As fresh lumber acclimates to its new environment, the natural tendencies of the tree can show itself in the form of checks, or "cracks" in the lumber. In almost all cases this is normal and it will not affect the structural integrity of your play set.

Cosmetic defects that do not affect the structural integrity of the product, or natural defects of wood such as warping, checking or any other physical properties of wood that do not present a safety hazard, are not covered by this warranty.

Defects that develop because the product is exposed to extreme climate conditions are not covered by this warranty. Defects that develop as a result of faulty or improper installation of the product are also not covered by this warranty.

Most cracks are not warrantable, however if you believe that the integrity of your play set is compromised by this natural occurrence, please contact the Tree Frogs Swing Set Dealer that you purchased your swing set from.

We appreciate your purchase and know that you will enjoy your play system for many years to come.

Tools Needed for Assembly			
be Measure	24" Level	Angle Square	
illips Screw Driver	3/8" Cordless Drill or Electric Drill	3/8" Drive Ratchet or Electric Impact Gun	
w Hammeror Rubber Mallet	Pliers or Vise Grips	7/16" Deep Well Socket	
6" Deep Well Socket	3/4" Deep Well Socket	1/8", 1/4", and 9/16" Drill Bits	
illips Head Screw Bits	An Adult with two Adult Helpers		
ase familiarize yourself with the in	An Adult with two Adult Helpers stall manual, parts/components and general co bly time: 6 to 8 hours. 6 foot unobstructed safe		

Pre-Assembly Hints

- Depending on your experience, assembly of our play sets can take as little as 6 hours up to 24 hours, depending on size, after inventory of parts; therefore, we recommend you set aside a full two days for assembly.
- Identify all of the parts for your play set. Empty each box and lay out boards so you can see each part. Your instruction book will
 have detailed drawings that will make it easy for you to recognize individual parts. Keep all hardware and metal parts separate
 from wooden pieces.
- After everything is laid out, check carefully to ensure all parts are present. Make sure there are no broken boards.
- Find an area to sort your hardware. It is best to open the hardware on a solid surface so that you do not lose any pieces in the grass.

This will save time and familiarize you with all the different pieces in the hardware bag.

Important note: Wood has some natural defects such as knots, surface cracks, etc... We reject parts that are structurally defective. We use a high quality lumber in our structures; however, you should inspect each part for splinters or rough spots and sand them smooth to prevent injury.

- After familiarizing yourself with all of the components, read all instructions thoroughly. Reading instructions after you have studied the parts will help you understand more clearly the installation process, and help to eliminate unnecessary mistakes.
- Pay close attention to the diameter and length of each bolt and screw.
- Never tighten hardware completely at first. It helps to have some adjustment for bolt alignment while you are attaching parts together. After everything is square, tighten each joint.
- After the main unit is assembled it is critical that the floor is level and square. If the main frame is not level, the walls and floor will be out of square.
- After you complete installation, make sure every bolt, screw, and nut is tight, and every board is secure. Wood will expand and contract with the seasons.
- Place the set on level ground, not less than 6ft from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- All 1/4" and 3/8" lag bolts must have pre-drilled holes 1-1/2" to 2" deep. Use a 1/8" drill bit for the 1/4" lag bolts and 1/4" drill bit for 3/8" lag bolts. Use pre-drilled holes in facias as a reference for placing lag bolt pilot holes.
- If a board lifts or rises causing a gap between boards when running in lag bolts or screws, back out the screw or lag bolt and press
 or apply pressure (but not enough to crack or break board) while re¬running in the lag bolt or screw in the same hole.
- Do not over tighten bolts, lag bolts or screws. You can damage boards, break hardware, and/or strip out the hardware.
- When using hammer do not beat on the hardware, but gently tap it in. Never beat on the wood as it will leave marks.

Leveling Your Swing Set During Assembly

- Complete the steps which will be the basic frame of the fort {i.e. four corner posts with base (sand box boards) and deck supports}
- Position in the most level area chosen for the play set, keeping in mind the location and size of the swing beam, ladder, slides, etc. that extend off the fort.
- Once the frame is in the final position, check for vertical and horizontal levelness to determine which side(s) will need to be dug into the ground to level the play set.
- With a shovel, score the ground around the outside edges of the sandbox boards on the 'high' side of the fort. This is the area that will be dug in. Make sure to score deep enough; the scored lines will be your digging template.
- Push the frame off and away from the scored area, far enough to dig and remove dirt to reach the appropriate depth.
- Dig a channel along the scored line(s) for the base of the fort (corner post and sandbox boards) to rest into. Dig the channel(s) to the same level depth. The bottom of the channel(s) should be level to each other so your frame doesn't teeter or rock because the channel(s) are uneven.
- Once you have removed enough grass and dirt, slide/push the frame into the channel(s). Place a level on the vertical and horizontal boards of the frame to determine if enough soil, or too much, was removed.
- Repeat this process until the basic frame is plumb and level and in its final position before completing the rest of the assembly.
- Measure to make sure fort is square.
- ** Important: if you require a channel depth of more than 6", then we recommend you have your play set area professionally graded before completing assembly. **

Choosing A Location For Your Playset

When choosing a location for your swing set, always keep your child or children's safety in mind. Here are some recommendations to help you locate and install a safe play area.

- This play set is designed for the use of 4 occupants who have a combined weight not exceeding 800 pounds on the elevated floor; 3 occupants who have a combined weight of 525 pounds on the swing area; for a total Unit capacity of 5 occupants who have a combined weight of 1325. (this weight is not including the picnic table area)
- On-site adult supervision is required.
- The swing set should be located on level ground. The stationary components such as ladders and slides are required to be a minimum of six feet from any structure or obstruction such as a fence, garage, house, tree, overhanging branches, electrical wires, clotheslines, etc. Any swinging equipment is also required to be a minimum distance twice the height of the swing beam away from these obstructions or structures as well. The swing set should be located a safe distance from any water hazards, such as a lake, river, bayou, swimming pool, etc.
- Do not install this residential swing set in a commercial setting. This swing set is not manufactured for commercial usage and will void all warranties. Tree Frogs Wooden Swing Set Factory is not responsible for any damages or injuries resulting from this swing set being used in a commercial setting.
- Never install this swing set indoors; or over concrete, asphalt, packed earth, grass, carpet or any other hard surface. A fall onto a hard surface can result in serious or fatal injury.
- The U.S. Consumer Product Safety Commission (CPSC) recommends that you install and maintain a resilient surface under your swing set. The CPSC's Consumer Information Sheet for Playground Surfacing Materials is on the next page. A resilient surface, should be installed after the swing set has been completely assembled according to these instructions. The swing set must rest on solid ground. Please note that this swing set has a maximum fall height of 7'.

Maintaining Your Swing Set

Here are some maintenance tips required to insure safe play on your swing set for years of fun.

• At the beginning of each usage season and every two weeks during, check: nuts and bolts and tighten as needed, swing seats, chains, ladders, slides, rope and wood components for sign of deterioration and replace if necessary.

• On a yearly basis, we recommend that you coat your swing set with a sealant or preservative. You may also wantto spot sand any areas prior to sealing.

** Special note: Although we recommend that you reseal your swing set annually, you may have to touch up the high traffic areas and/or areas that have a high exposure to direct sunlight.**

• Be sure that the sealant you select is non-toxic and child safe. Your local Tree Frogs Wooden Swing Set Factory dealer may offer a complete power wash and reseal and maintenance program.

• Do not use line trimmers or "weed eaters" around your swing set. The line will remove both paint and wood from uprights and base pieces. Any damage resulting from this type of abuse is not covered under our limited warranty.

• Remove plastic swing seats and take in doors or do not use when temperature drops below 0°F.

Please keep this install manual for future reference.

To insure SAFE PLAY adults must teach children:

- Not to walk close to, in front of, behind, or between moving items.
- Not to swing empty swing seats.
- Not to swing sideways into the path of adjacent swings.
- Not to use the swing set in a manner other than that for which it is intended.
- Not to get off the equipment while it is in motion.
- Not to jump off the tower.
- Not to stand in the swing seats.
- Not to swing so high that chains become slack, or above the height of the swing support.
- Not to jump on a slide.
- Not to climb on top of the swing support.
- Not to attach to the swing set any item that is not specifically designed for use with the equipment, such as (but not limited to) jump ropes, clotheslines, pet leashes, cables, and chains. These may become strangulation hazards.
- To hold on to swings and climbers with both hands.
- To slide feet first, never head first.
- To watch for other children while swinging or playing near the swing set.

To also insure SAFE PLAY adults must:

- Limit climbing and swinging heights to each child's ability.
- Verify that suspended climbing ropes are secured at both ends.
- Verify that suspended climbing ropes cannot be looped back on themselves.
- Dress children appropriately for play. Use well-fitted shoes that do not have slippery soles.
- Avoid ponchos, scarves, hoods, loose fitting clothing, neckties, and any clothing with a drawstring. Serious injury could result should any part of the children's clothing become entangled in the swing set.
- Do not allow children to play wearing helmets.
- Remember that children are inventive. When they develop games that are unsafe, be alert and change the rules.

Weight limits for Treefrogs Swingsets

Fort Platform: 800 Lbs.Total Weight.	<u>Swing Belts</u> : 175 Lbs.
<u>Trapeze</u> : 125 Lbs.	Full Bucket Swing: 50 Lbs.
Toddler Bucket Swing: 50 Lbs.	<u>Tire Swing</u> : 125 Lbs. Total Weight
<u>Rope Ladder</u> : 75 Lbs.	<u>Rock Wall</u> : 150 Lbs.

<u>All Slides</u>: 125 Lbs.

Tree Frogs recommends that the weight limits for all components must not be exceeded. Failure to adhere to these and other safety guidelines could result in damage to the swing set. and/or injury to the users.

CONSUMER INFORMATION SHEET FOR PLAYGROUND SURFACING MATERIALS

The U.S. Consumer Product Safety Commission (CPSC) estimates that about 100,000 playground equipment related injuries resulting from falls to the ground surface are treated annually in U.S. hospital emergency rooms. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries, and have the potential to be fatal, particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury-causing potential of a fall. It is self-evident that a fall onto a shock-absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. However, it should be recognized that some injuries from falls will occur no matter what playground surfacing material is used.

Playground equipment should never be placed on hard surfaces such as concrete or asphalt. Grass may appear to be acceptable, but can turn to hard packed earth in areas of high traffic. Shredded bark mulch, wood chips, or fine gravel are considered to be acceptable shock absorbing surfaces when installed and maintained at a sufficient depth under and around play equipment.

MATERIAL	UNCOM	IPRESSE	D DEPTH	COMPRESSED DEPTH
	6 Inch	9 Inch	12 Inch	9 inch
Wood Chips	7	10	11	10
Double Shredded Bark Mulch	6	10	11	7
Engineered Wood Fibers	6	7	>12	6
Fine Sand	5	5	9	5
Coarse Sand	5	5	6	4
Fine Gravel	6	7	10	6
Medium Gravel	5	5	6	5
Shredded Tires**	10-12	N/A	N/A	N/A

TABLE 1 -CRITICAL HEIGHTS (in feet) OF TESTED MATERIAL

** This is data from tests conducted by independent testing laboratories on a 6 inch depth of uncompressed shredded tire samples produced by four manufacturers. The test reported critical heights, which varied from 10 feet to greater than 12 feet. It is recommended that persons seeking to install shredded tires as a protective surface request test data from the supplier showing the critical height of the material when it was tested in accordance with ASTM F1292.

Table 1 should be read as follows: If, for example, uncompressed wood chips are used at a minimum of 6 inches, the Critical Height is 7 feet. If 9 inches of uncompressed wood chips are used, the Critical Height is 10 feet. It should be noted that, for some materials, the Critical Height decreases when the material is compressed. It is recommended that a shock absorbing material should extend a minimum of 6 feet in all directions from the perimeter of stationary equipment such as climbers and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of 2 times the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.

This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for your equipment. The choice of a material depends on the type and height of the playground equipment, the availability in your area, and its cost.

This information has been extracted from the CPSC publications "Playground Surfacing-Technical Information Guide" and "Handbook for Public Playground Safety." Copies of these reports can be obtained by sending a postcard to:

Office of Public Affairs U.S. Consumer Product Safety Commission Washington, D.C. 20207 Toll-free Hotline: 1-800-638-2772 or at http://www.cpsc.gov

2018 TREE FROGS Limited Lifetime Warranty Limited 10-Year Warranty, Limited 5-Year Warranty

Tree Frogs Warranties all Jaguar Playcenter Series, Bengal Forts Series, MegaDeck Fort Series Redwood components and Cedar components against structural failure due to warping, wood rot, insect infestation (excluding Carpenter Bees) or decay for the period of 10 Years from the date of original purchase. This warranty does not cover cracks, fissions, checks, fading, knots and weathering that are normal natural characteristics of wood, that do not affect the structural integrity of the product. The Redwood and Cedar components warranty is extended to a Limited Lifetime Warranty to the original owner upon registering this warranty within 90 days of purchase at www.treefrogsswingsets.com.

Tree Frogs Warranties all Parrot Island Fort Series, Parrot Island Playcenter Series, Rainforest Cottage Series Cedar components against structural failure due to warping, wood rot, insect infestation (excluding Carpenter Bees) or decay for a period of 10 Years from the date of original purchase. This warranty does not cover cracks, fissions, checks, fading, knots and weathering that are normal natural characteristics of wood, that do not affect the structural integrity of the product.

Tree Frogs Warranties all Toucan Fort Series, Toucan Playcenter Series, Orangutan Fort Series, Stand Alone Swings Cedar components against structural failure due to warping, wood rot, insect infestation (excluding Carpenter Bees) or decay for a period of 5 Years from the date of original purchase. This warranty does not cover cracks, fissions, checks, fading, knots and weathering that are normal natural characteristics of wood, that do not affect the structural integrity of the product.

In addition, a 10-Year Limited Warranty applies to all roto-molded slides, ductile iron swing hangers, tire swivels, metal climbing rungs and swing beam brackets against failure due to rust or failure in defect in material. Surface rust, fading, weathering, cracks/chips in coatings and corrosion that do not affect structural integrity are not covered by this warranty. Furthermore, a 5-Year Limited Warranty applies to all components & accessories including all swings, chain ladders, gliders, handles, brackets, bubble panels, tarps, steering/ships wheels, telescopes, binoculars, buoy ball, blow molded slides and disc seat that are not covered under the 10-Year Warranty to be free from defects in material and workmanship. Surface rust, fading, weathering, cracks/chips in coatings and corrosion that do not affect structural integrity are not covered by this warranty.

And for a period of 1-Year Tree Frogs warranties all ropes, structural foam molded slides to be free of defects in material and workmanship. Fading is not considered a defect and may occur with seasonal and geographical conditions.

**10-Year Warranty Exclusion: Toucan Fort Series, Toucan Playcenter Series, Orangutan Series, Stand Alone Swings (Limite 5Yr/5Yr/1Yr WARRANTY).

This warranty is limited to a repair or replacement of the defective part. Product covered under this warranty will be shipped at the customer's expense. Tree Frogs is not responsible for any expense associated with freight, or delivery and installation of the warranted part(s). Tree Frogs reserves the right to inspect all warranty claim parts for which a claim has been made.

This limited warranty applies only to the original retail purchaser and for residential use only, non-residential use voids warranty. These warranties void when product is transferred or sold or no longer in possession by original owner. A copy of the original invoice must be presented to initiate warranty claim. This limited warranty does not cover damage from abuse, acts of God, vandalism, maintenance guideline neglect, alterations, normal wear & tear, use other than residential, unauthorized modification, damage due to moving of product or improper installation and or use. Any modification could damage the structural integrity of the play system and voids all warranties.

This warranty is exclusive and expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use. Tree Frogs does not assume, or authorize any person to assume for us, any other liability in connection with the sale of our products.

This warranty gives you specific legal rights, and you also may have other rights that vary from state to state. Register your play system's warranty at www.treefrogsswingsets.com.

Tree Frogs reserves the right at any time to change product specifications or substitute similar components.

See your instruction manual for guidelines on regular maintenance. http://treefrogsshowrooms.com/installation-manuals/ . Your child's play system & perimeter play zone should be inspected regularly for any wear & safety hazards.

KSI-462- 6.5 Jaguar Playcenter Lumber	Description	QTY.
	462-1 43 7/8" Rockwall Board- Slim	1
	(CC-071) 462-2 43 7/8" Rockwall Board w/ Hole	1
	(CC-068) 462-3 43 7/8" 1- Rock Rockwall Board	7
	(CC-069) 462-4 43 7/8" 2- Rock Rockwall Board	4
	(CC-070) 462-5 43 7/8" Blank Rockwall Board	4
	(CC-133) 462-6 16 1/2" Ladder Step	6
	(CC-088) 462-7 27 1/2" Rail Spindle	15

KSI-462- 6.5 Jaguar Playcenter Lumber	Description	QTY.
	(CC-100) 462-8 25" Rail Bottom	6
	(CC-099) 462-9 25" Rail Top	3
	(CC-103) 462-10 28" Rope Rung	7
	(CC-104) 462-11 30" Deck Runner	4
	(CC-116) 462-12 60 3/4" Center Tarp Board	1
	(CC-118) 462-13 67 1/2" Tarp Board	2
	(CC-134) 462-14 54" Deck Board- Slim	4

KSI-462- 6.5 Jaguar Playcenter Lumber	Description	QTY.
	(CC-135) 462-15 30" Center Support Deck	2
	(CC-124) 462-16 54" Deck Board	8
	(CC-240) 462-17 7 7/8" Small A-Frame Block	1
	(CC-143) 462-18 9" Rope Block	1
	(CC-244) 462-19 13 3/8" A-Frame Block w/ Sinks	1
	(CC-243) 462-20 13 3/8" A-Frame Block	1
	(CC-149) 462-21 19" Left Gusset	5

KSI-462- 6.5 Jaguar Playcenter Lumber	Description	QTY.
	(CC-148) 462-22 19" Left Gusset	5
	(CC-142) 462-23 25" Entrapment Block	1
	(CC-173) 462-24 38 7/8" Corner Post	4
0	(CC-174) 462-25 70" Ground Runner	1
	(CC-175) 462-26 80 5/8" Center Post	2
	(CC-176) 462-27 100" Upper Rope Arm	1
	(CC-177) 462-28 100" Trapeze Arm	1

KSI-462- 6.5 Jaguar Playcenter Lumber	Description	QTY.
	(CC-178) 462-29 10 1/16" Lower Rope Runner	1
	462-30 119 1/2" Top Joist	1
	462-31 119 1/2" Swingbeam Top Joist	1
	(CC-188) 462-32 16" Left Gusset	2
	(CC-189) 462-33 16" Right Gusset	2
	462-34 88 1/2" Left Rockwall Leg	1
	462-35 88 1/2" Right Rockwall Leg	

KSI-462- 6.5 Jaguar Playcenter Lumber	Description	QTY.
	462-36 88 1/2" Left Step Ladder Leg	1
	462-37 88 1/2" Center Pipe & Step Ladder Leg	1
	462-38 88 1/2" Right Pipe Ladder Leg	1
	(CC-245) 462-39 88" A-Frame Crossmember	1
	462-40 107" Mainbeam	2
	(CC-184) 462-41 132 5/8" Jaguar Universal Swingbeam	1
	`(CC-246) 462-42 143" A-Frame Leg	2

KSI-456 JPC Wood Roof	Description	QTY.
0	456-1 15 3/8" Short Fan Board	4
	456-2 19" Wood Roof Support	2
	456-3 20 1/4" Center Fan Board	2
(i) (i) (i) (i) (i) (i) (i) (i) (i) (i)	456-4 21" Long Fan Board	4
	(CC-020) 456-5 25" Wood Roof Support	4
	456-6 69 3/4" Bottom Fan Board	2
	(CC198) 456-7 14" Center Fan Board	2

KSI-456 JPC Wood Roof	Description	QTY.
	456-8 67 1/2" Wood Roof Tarp Board	1
	456-9 73 3/8" Left WR Runner	2
	456-10 73 3/8" Right WR Runner	2
·	456-11 67 1/2" Wood Roof Board -Ripped	2
· · · ·	456-12 67 1/2" Wood Roof Board	34


KSI-457 JPC Treehouse Panel	Description	QTY.
	457-1 24 13/16" Panel Support	6
	457-2 4 1/2" Upper Panel Board #9	12
	457-3 7 13/16" Upper Panel Board #2	4
	457-4 10 1/4" Upper Panel Board #12	4
	457-5 10 5/16" Upper Panel Board #3	4
	457-6 16 3/4" Upper Panel Board #5	4
	457-7 18" Window Arch	4

KSI-457 JPC Treehouse Panel	Description	QTY.
	457-8 19 1/4" Upper Panel Board #6	4
	457-9 19 13/16" Upper Panel Board #7	4
	457-10 42 1/2" Upper Inside Panel Support	4
· · · ·	457-11 23" Upper Panel Board #11	4
°	457-12 6 15/16" Upper Panel Board #1	4
	(CC-057) 457-13 14" Left Treehouse Shutter	4
	(CC-058) 457-14 14" Right Treehouse Shutter	4

KSI-457 JPC Treehouse Panel	Description	QTY.
	457-15 14 1/4" Upper Panel Board #4	4
	457-16 23" Upper Panel Board #10	4
	457-17 23 1/16" Upper Panel Board#8	4
	(CC-089) 457-18 27 1/2" Lower Panel Filler Board	12


KSI-462- 6.5 JAGUAR PLAYCENTER HARDWARE

INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

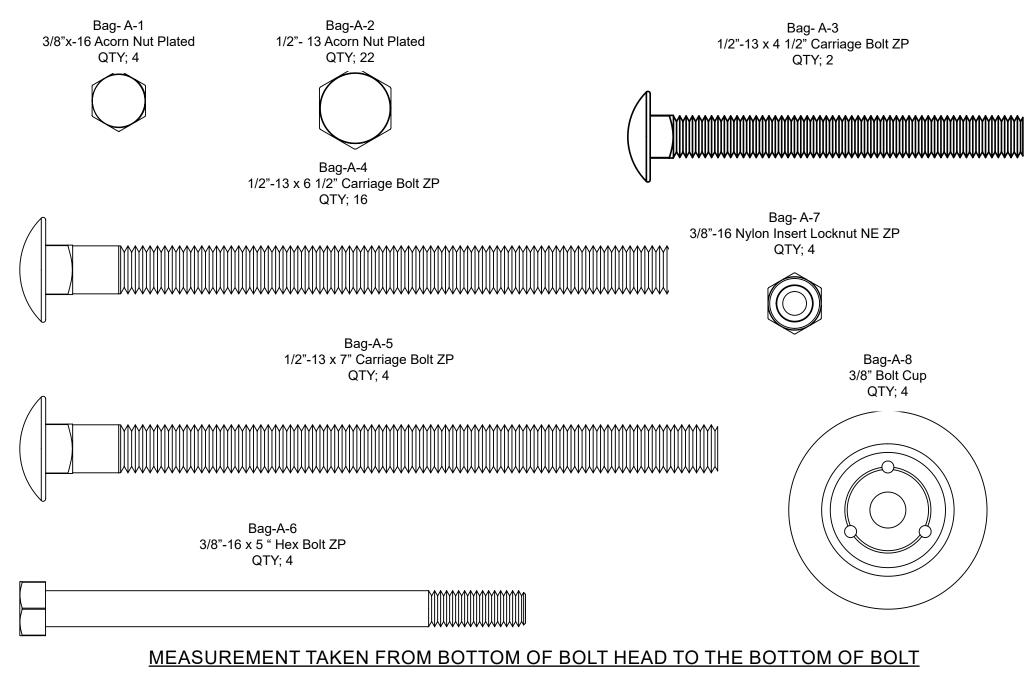

KSI-462- 6.5 JAGUAR PLAYCENTER HARDWARE


INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

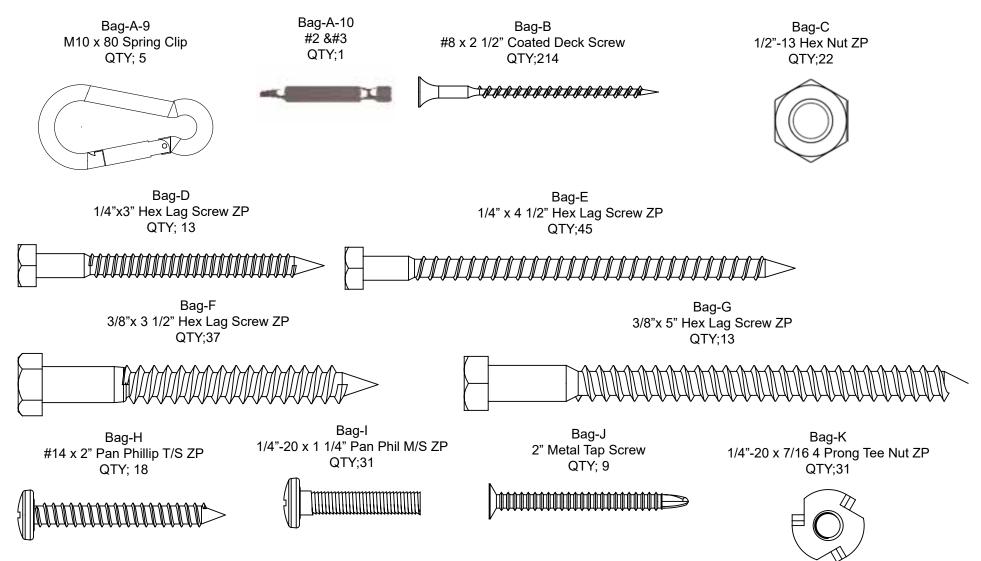

MEASUREMENT TAKEN FROM BOTTOM OF BOLT HEAD TO THE BOTTOM OF BOLT

KSI-462- 6.5 JAGUAR PLAYCENTER HARDWARE


INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

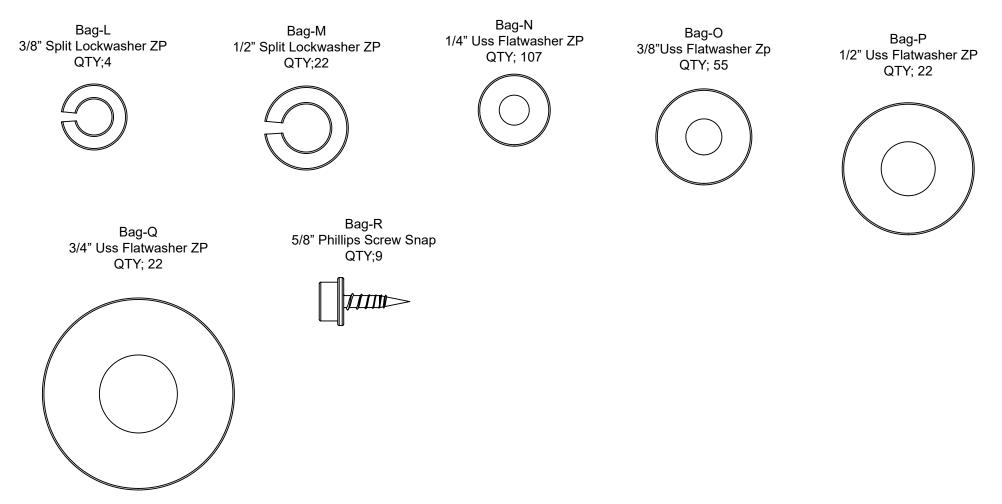

MEASUREMENT TAKEN FROM BOTTOM OF BOLT HEAD TO THE BOTTOM OF BOLT

KSI-462-SWINGBEAM HARDWARE


INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

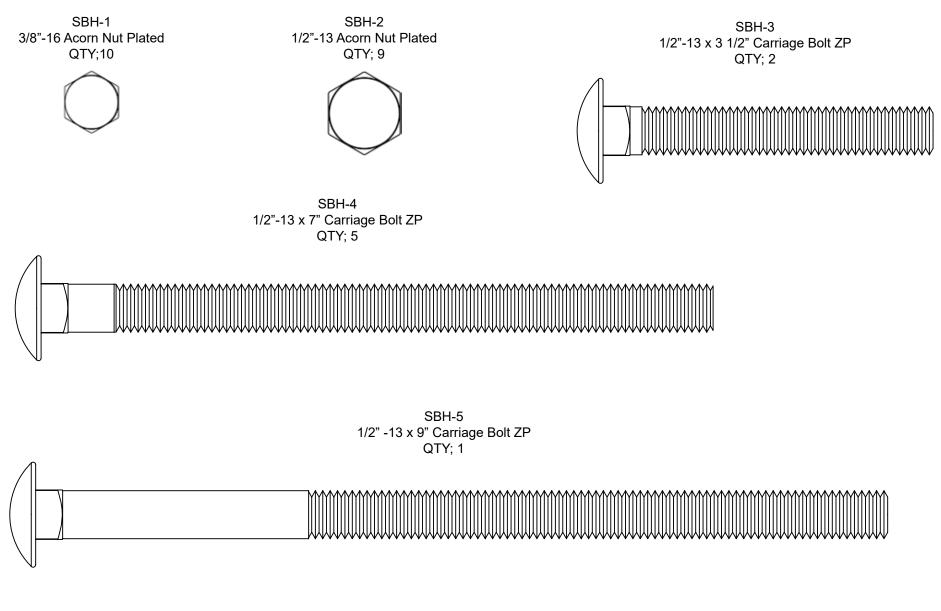


MEASUREMENT TAKEN FROM BOTTOM OF BOLT HEAD TO THE BOTTOM OF BOLT

KSI-462-SWINGBEAM HARDWARE


INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

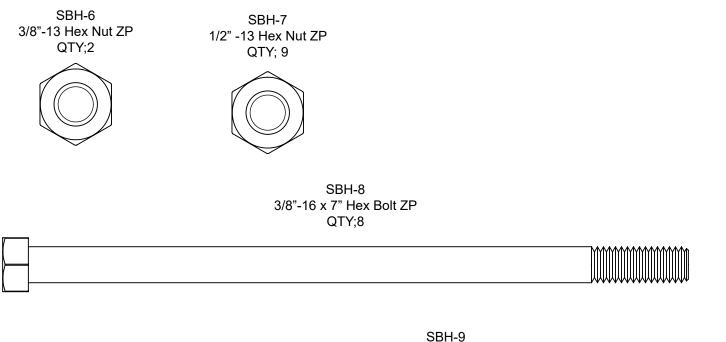

3/8"-16 x 10" Hex Bolt ZP- w/6" of Thread QTY; 2




SBH-10 1/2"- 13 x12 Hex Bolt ZP- w/6" of Thread



MEASUREMENT TAKEN FROM BOTTOM OF BOLT HEAD TO THE BOTTOM OF BOLT


KSI-462-SWINGBEAM HARDWARE

INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

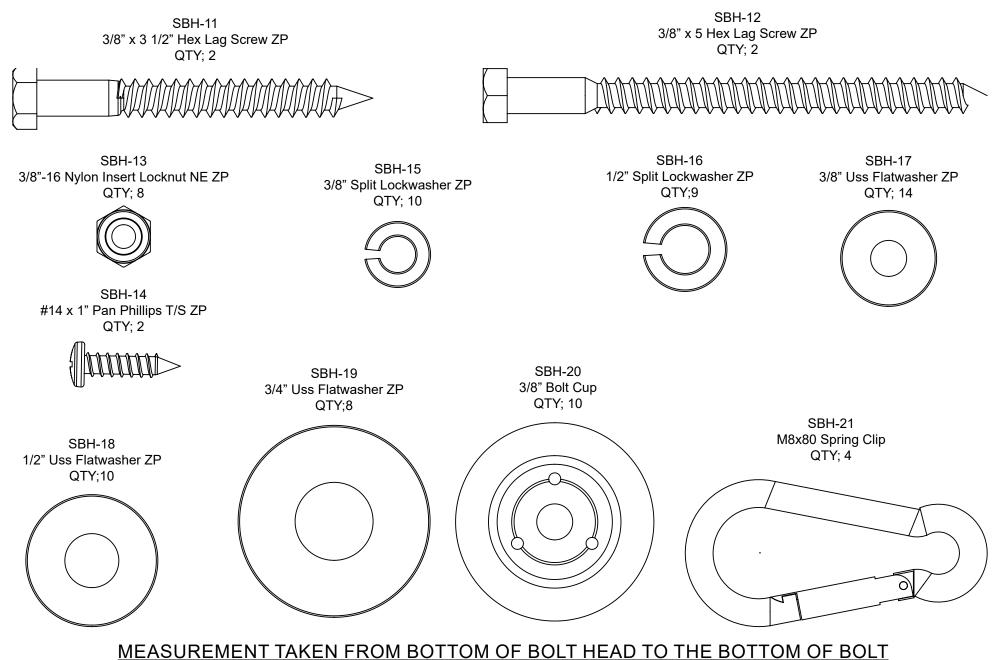

KSI-456 -WOOD ROOF HARDWARE

INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

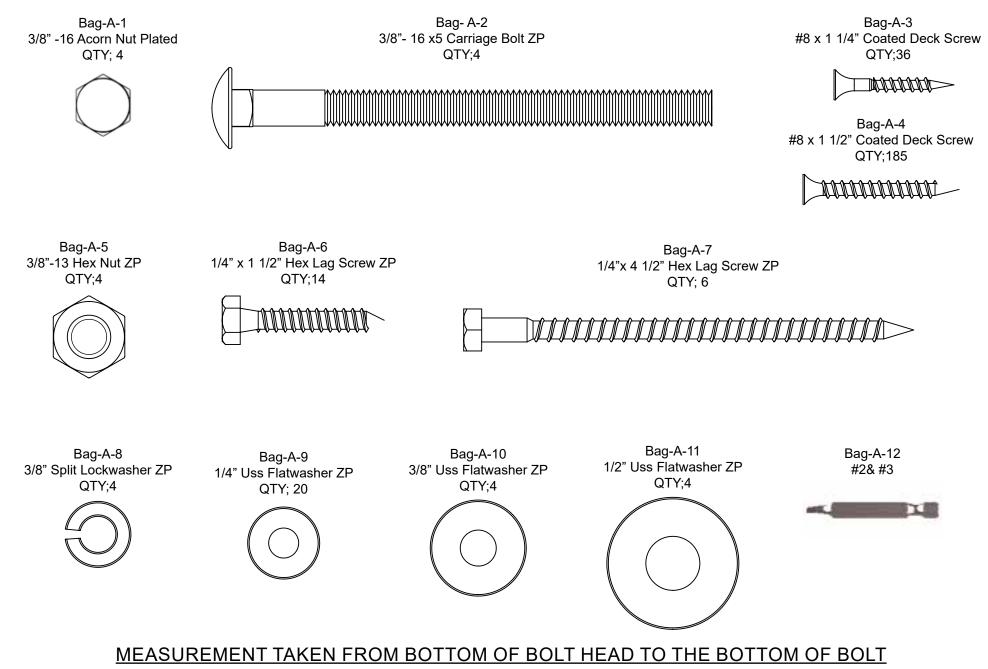


457-TREEHOUSE PANELS- HARDWARE

INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

Bag- A-1 #8 x 1 1/2" Coated Deck Screw QTY; 216

Bag-A-2 #8 x 2" Coated Deck Screw QTY; 108



Bag-A-3 #2 & #3



MEASUREMENT TAKEN FROM BOTTOM OF BOLT HEAD TO THE BOTTOM OF BOLT

Picture	Description	QTY.
	462-A 48" Plastisol Coated Chain	3
	462-B Tire Swivel	1
	462-C Large Rocks	15
	462-D 19" Ship's Wheel	1
	462-E 80" Chained Belt Swing	2
	462-F 20" Trapeze-Bar w/ Rings-60"Chain	1
	462-G 1"x 16' Polyester Rope W/Rope Caps	2

Picture	Description	QTY.
	462-H 1"x18' Polyester Rope W/Rope Caps	3
	462-I 21"x 63" Chain Ladder	1
	462-J 1 1/4"Dia x 16 ga x 25" PlayGrip Tube,PC Coated	2
	462-K 1 1/4"Dai x 16ga x 44" PlayGrip Tube,PC Coated	1
	462-L Ductile Iron Swing Hanger	6
	462-M 1 1/4" x 10" PlayGrip Safety Handle	4
	462-N 1 1/4" x 65.5 PlayGrip Ladder Handle	3

Picture	Description	QTY.
	462-O Swingbeam T Bracket	1
	462-P Swingbeam 45 Degree Bracket	2
	462-Q Heavy Duty Tire Eye Bolt	3
	462-R Disc Swing	1
	462-S Telescope	1

6.5 Rockwall Board Assembly


PARTS NEEDED


CC-068-1-Rock Rockwall Board-
CC-069-2- Rock Rockwall Board-
462-C- Large Rocks-


(7) (4) (13)

HARDWARE NEEDED

I- 1/4"-20 x 1 1/4" Pan Phil M/S ZP-	(26)
K- 1/4"-20 x 7/16 4 Prong Tee Nut ZP-	(26)
N- 1/4" Uss Flatwasher ZP-	(26)

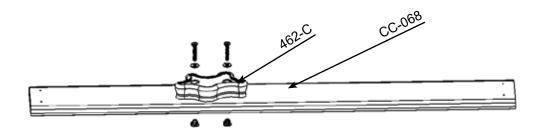

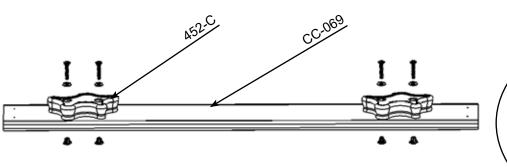

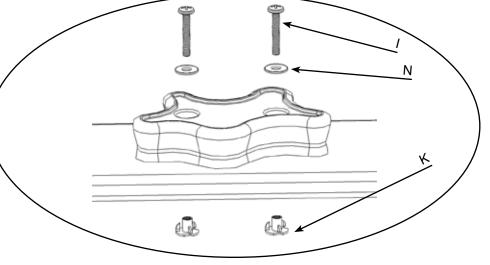

6.5 Rockwall Assembly

(1) (1)

PARTS NEEDED


(1)


(4) (1)

CC-071- Rope Hole Rockwall Board-CC-070- Rockwall Board -Blank-462-35- Right Rockwall Leg462-1- Rockwall Board -Slim-462-34- Left Rockwall Leg-

HARDWARE NEEDED

B- #8 x 2 1/2" Coated Deck Screw (68)

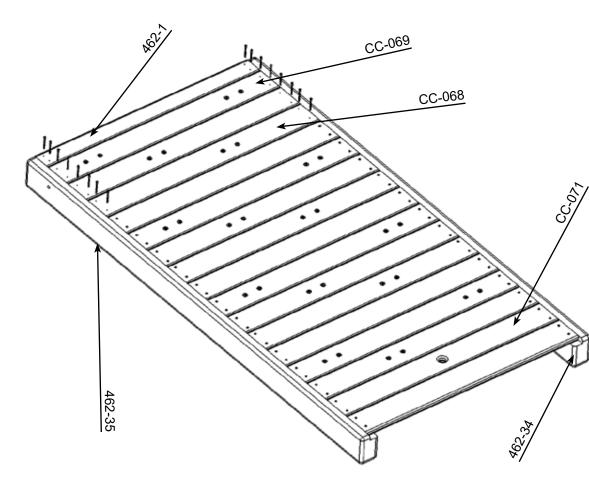

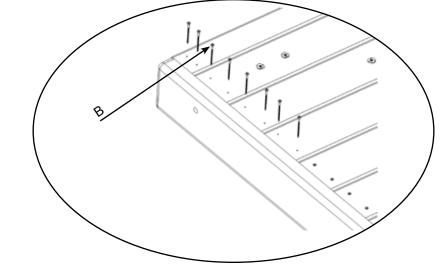

6.5 Combo Ladder Assembly

(6)

PARTS NEEDED


CC-133- Wood Step-
462-37- Center Step & Pipe Ladder Leg-
462-36- Left Step Ladder Leg-
462-38- Right Pipe Ladder Leg-
462-I- 21"x 63" Chain Ladder-
462-J- 1 1/4" x 25" PlayGrip Tube-
462-K- 1 1/4" x 44" PlayGrip Tube-

 \overline{O}

CC. 733

HARDWARE NEEDED

E- 1/4" x 4 1/2" Hex Lag Screw ZP (20) (20) N- 1/4" Uss Flatwasher ZP

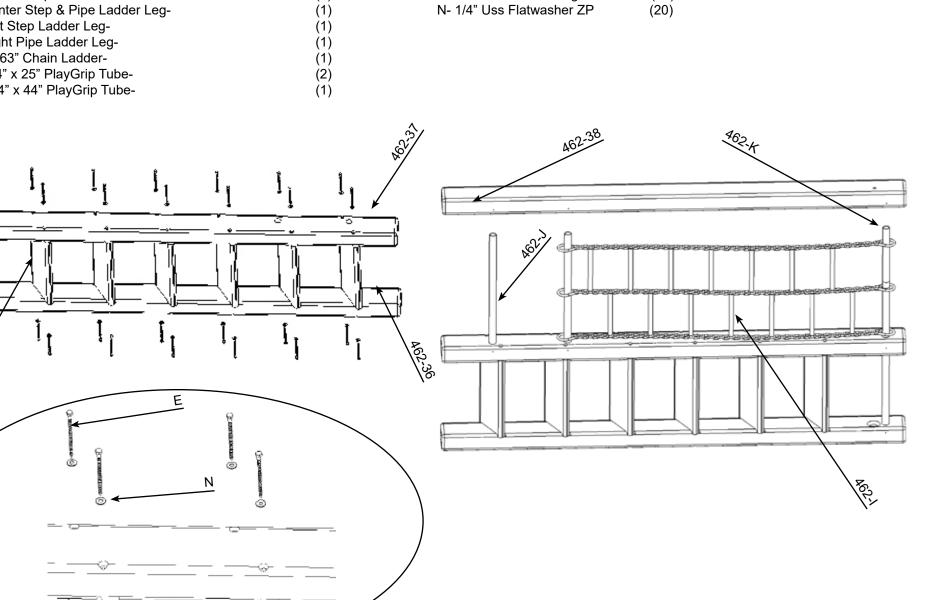



6.5 Combo Ladder Assembly

HARDWARE NEEDED

J- Metal Tap Screw-

(7)

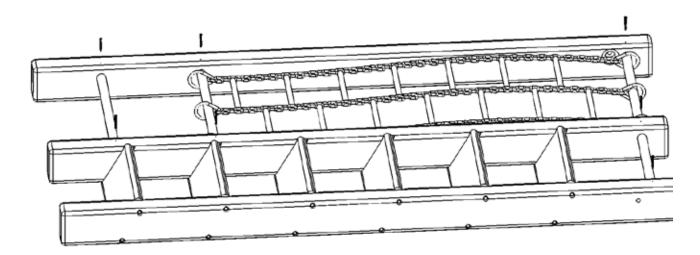

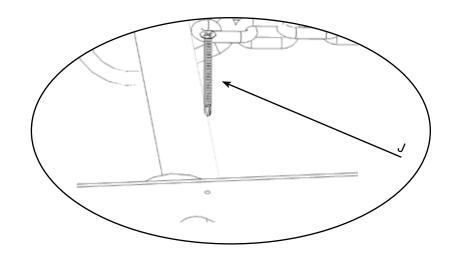


Deck Assembly

PARTS NEEDED

CC-104- Deck Runner-	(4)
CC-134- Deck Board Slim-	(4)
CC-135- Center Deck Support-	(2)
CC-124- Deck Board-	(8)

Make 2 of these Assembly

CC-104 CC-135 CC-124 CC-134 CC-134 3318

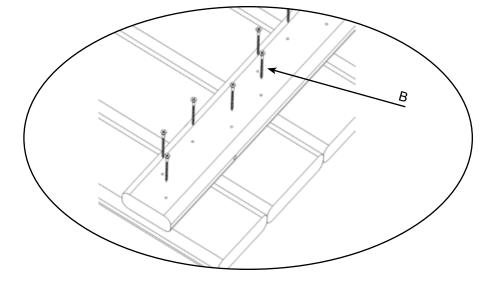

HARDWARE NEEDED B- #8 x 2 1/2" Coated Deck Screw-

(72)

6.5 Swingbeam Assembly

PARTS NEEDED

CC-240- Center A-Frame Block-
CC-243- A-Frame Block-
CC-244- A-Frame Block Sinked-
CC-246- A-Frame Leg-
462-P- Swingbeam 45 Degree Bracket-


SBH-1- 3/8" Acorn Nut Plated-
SBH-6- 3/8" Hex Nut-
SBH-15- 3/8" Split Lockwasher-
SBH-17- 3/8" Uss Flatwasher-
SBH-20- 3/8" Bolt Cup-
SBH-10- 1/2" x 12 Hex Bolt-

HARDWARE NEEDED


- (1)
 SBH-2- 1/2" Acorn Nut Plated (1)

 (1)
 SBH-7 1/2" Hex Nut (1)

 (1)
 SBH-16- 1/2" Split Lockwasher (1)
- (1) SBH-18- 1/2" Uss Flatwasher- (2)
- (1) SBH-9- 3/8" x 10" Hex Bolt- (1)
- (1)

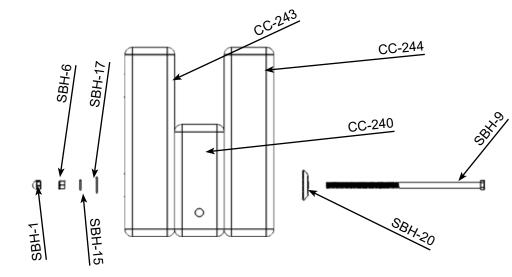

(1)
(1)
(1)
(2)
(2)

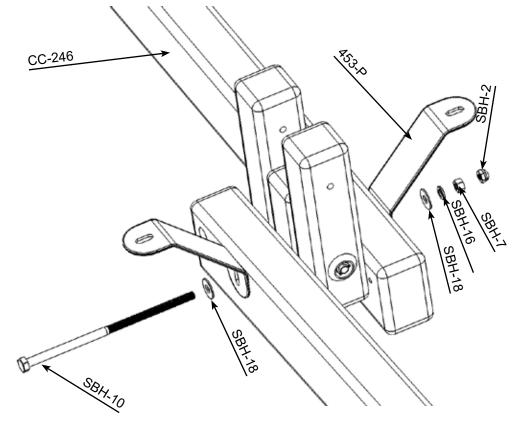

6.5 Swingbeam Assembly

SBH-1- 3/8"-16 Acorn Nut Plated-

SBH-8- 3/8"-16 x 7" Hex Bolt-

SBH-20- 3/8" Bolt Cup-

SBH-15- 3/8" Split Lockwasher-

PARTS NEEDED

(1) (4)


CC-184- Jaguar Universal Swingbeam-

453-L- Ductile Iron Swing Hanger-


HARDWARE NEEDED

- (8) SBH-6- 3/8"-13 Hex Nut(8) SBH-13- 3/8" Nylon Insert-
- (8) SBH-17- 3/8" Uss Flatwasher-
- (8)

(8) (8) (8)

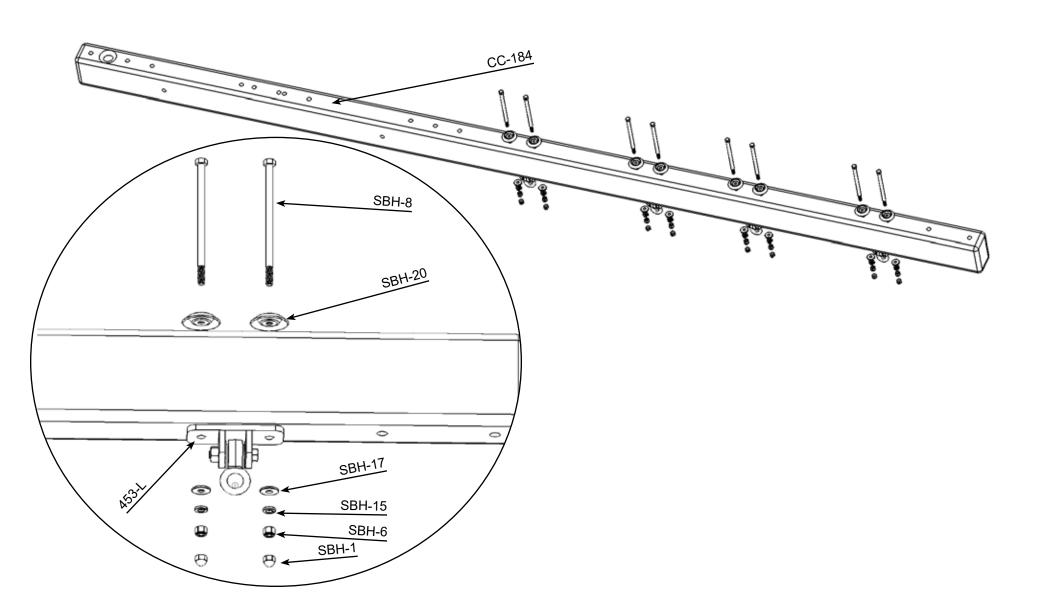

6.5 Swingbeam Assembly

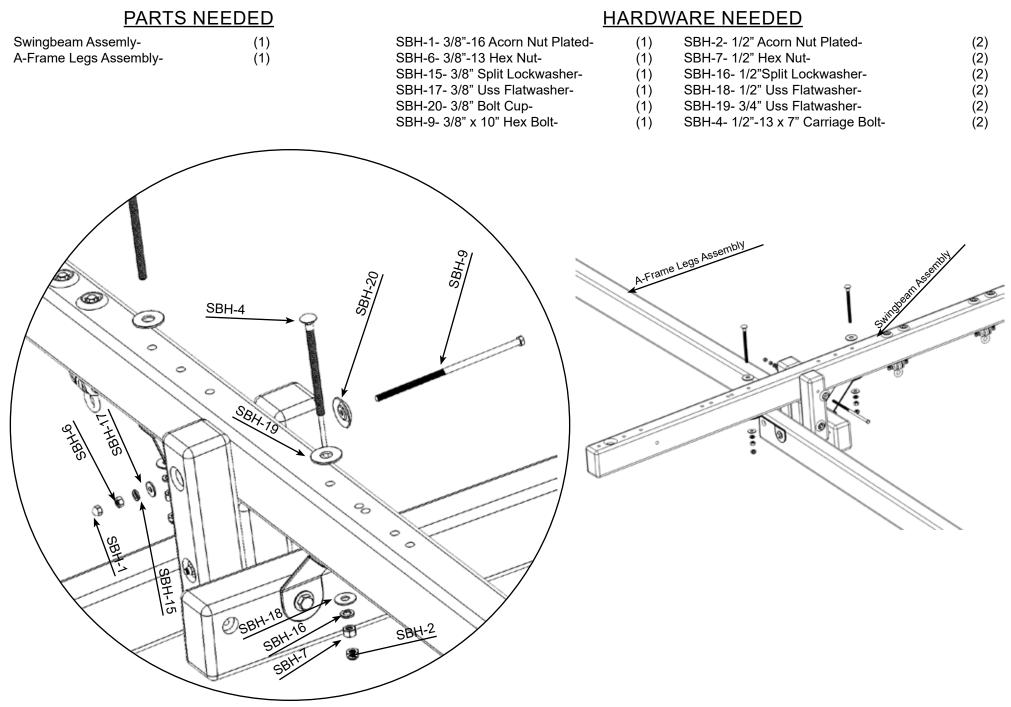


PARTS NEEDED


(1)
(1)
(2)
(2)
(1)
(1)


Rockwall Assembly-
Ladder Assembly-
CC-149- Left Gusset-
CC-148- Right Gusset-
CC-174- Ground Runner-
CC-178- Lower Rope Runner-

HARDWARE	NEEDED

F- 3/8" x 3 1/2" Hex Lag Screw-	(8)
G- 3/8"x 5 " Hex Lag Screw-	(5)
O- 3/8" Uss Flatwasher-	(13)

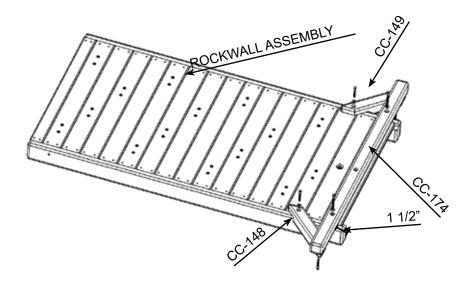

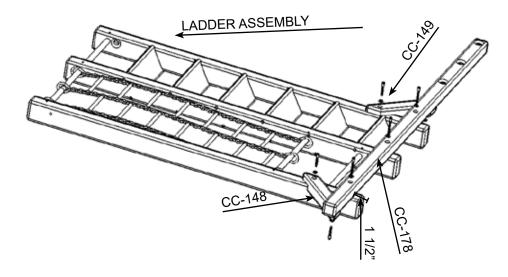

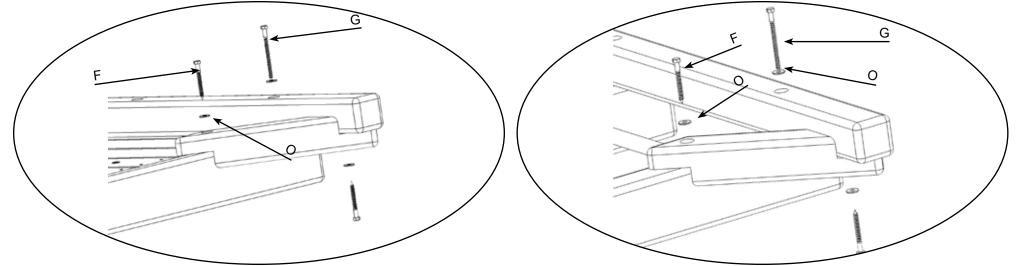


PARTS NEEDED

Rockwall Assembly-Ladder Assembly-462-40- Mainbeam-

(1) (1) (2)

A-5- 1/2" x 7" Carriage Bolt-C- 1/2" Hex Nut-P- 1/2" Uss Flawasher-

- (4) (4) (4) (4) A-2- 1/2" Acorn Nut Plated-(4) M- 1/2" Split Lockwasher-
- (4) Q- 3/4" Uss Flatwasher-

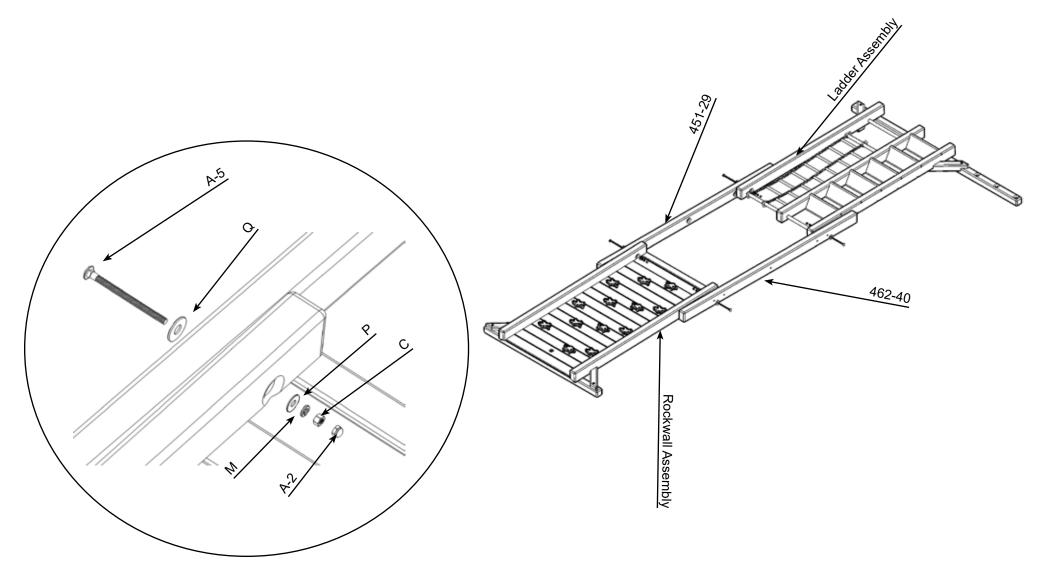


PARTS NEEDED


CC-188- Left Gusset-

CC-189- Right Gusset-

(2) (2)

F- 3/8" x 3 1/2" Hex Lag Screw-	(16)
O- 3/8" Uss Flatwasher-	(16)

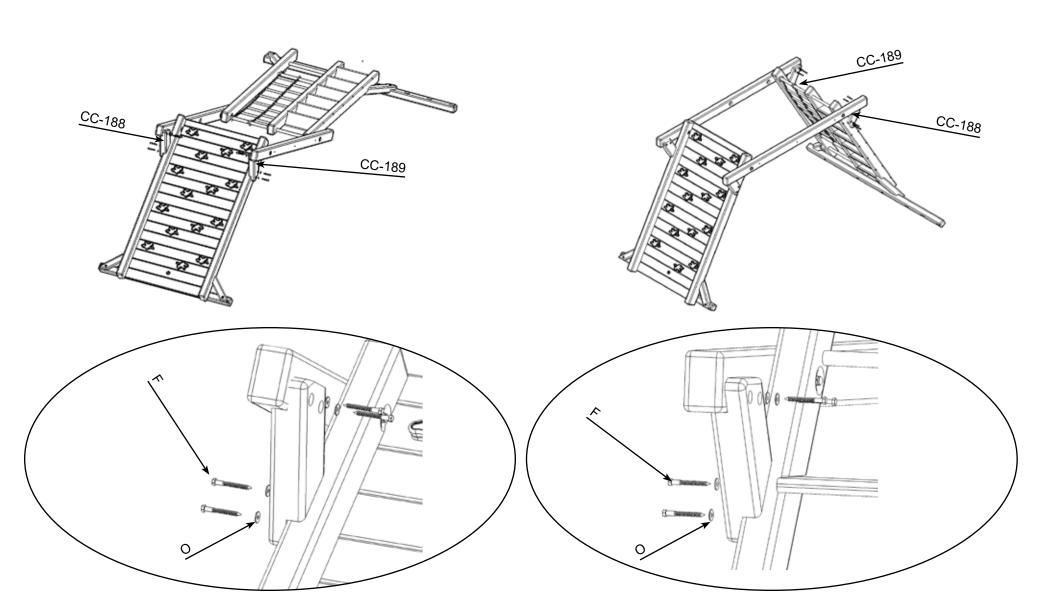

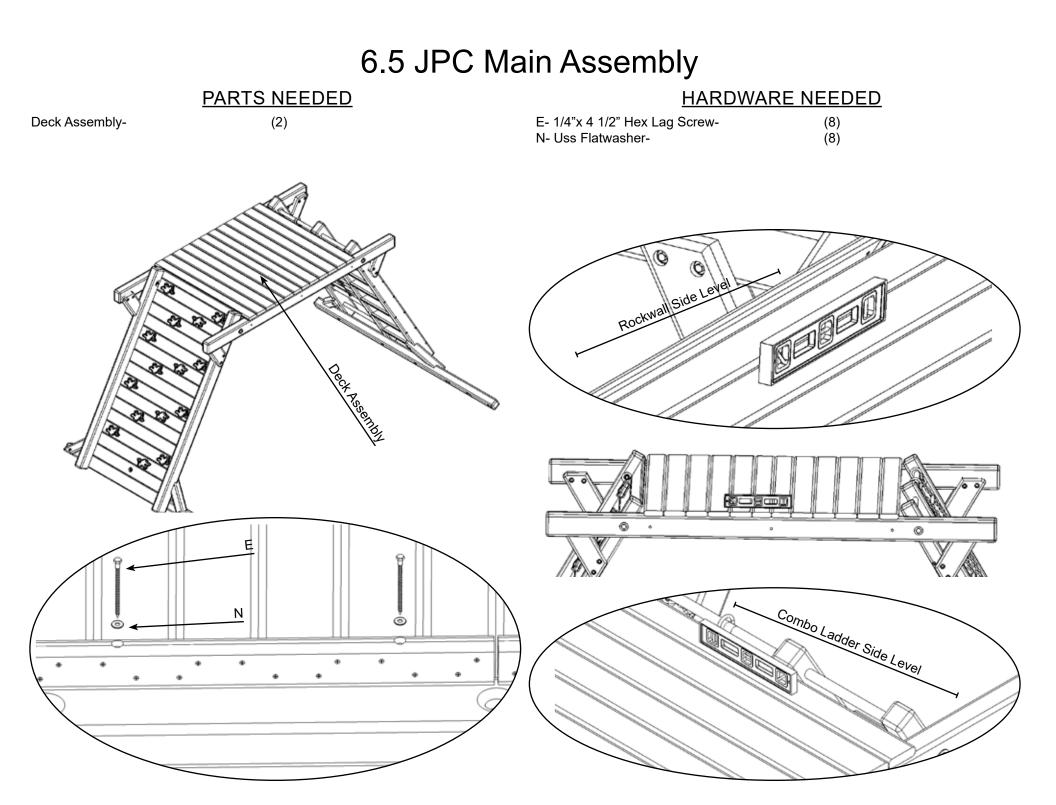


PARTS NEEDED

HARDWARE NEEDED

453-B- Tire Swivel-

(1)

- A-3- 1/2" x 4 1/2" Carriage Bolt-C- 1/2" Hex Nut-P- 1/2" Uss Flawasher-
- (2) (2) (2) (2) A-2- 1/2" Acorn Nut Plated-
- (2) M- 1/2" Split Lockwasher-(2) Q- 3/4" Uss Flat Washer-

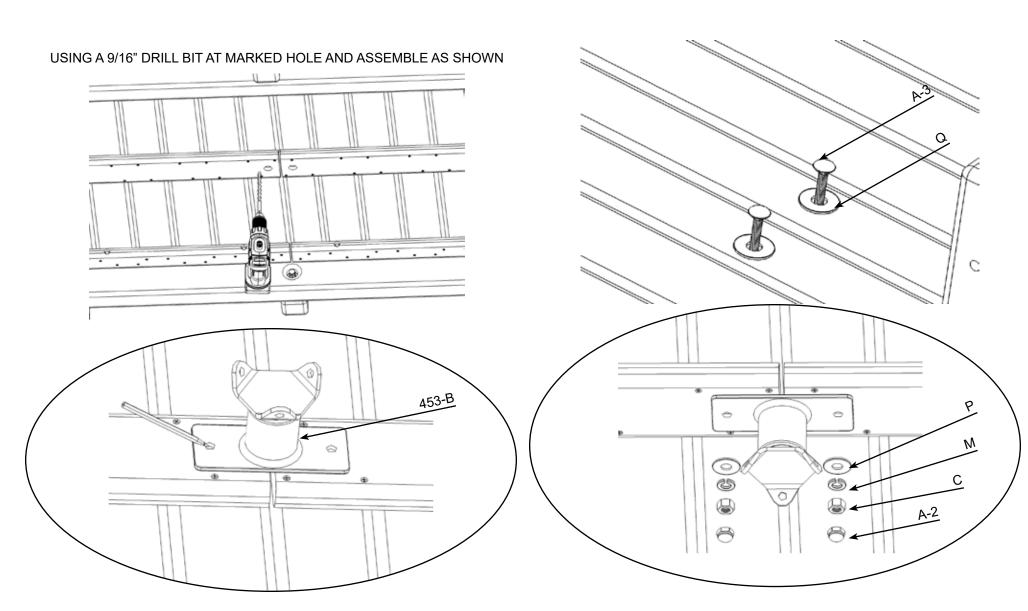

A-4- 1/2" x 6 1/2" Carriage Bolt-

C- 1/2" Hex Nut-P- 1/2" Uss Flawasher-


PARTS NEEDED

CC-173- Corner Post-

CC-175- Center Post-

(4) (2)

(6)	A-2- 1/2" Acorn Nut Plated-	(6)
(6)	M- 1/2" Split Lockwasher-	(6)
(6)	Q- 3/4" Uss Flat Washer-	(6)

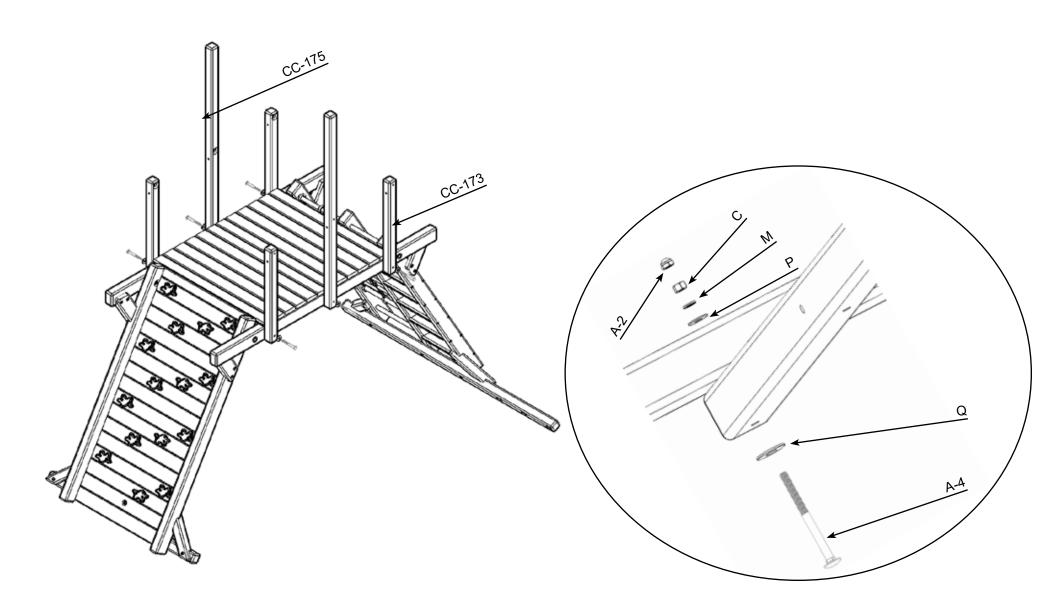

A-4- 1/2" x 6 1/2" Carriage Bolt-

C- 1/2" Hex Nut-

P- 1/2" Uss Flawasher-


PARTS NEEDED

462-30- Top Joist-

462-31- Top Joist -SB-

(1) (1)

(6)	A-2- 1/2" Acorn Nut Plated-	(6)
(6)	M- 1/2" Split Lockwasher-	(6)
(6)	Q- 3/4" Uss Flat Washer-	(6)

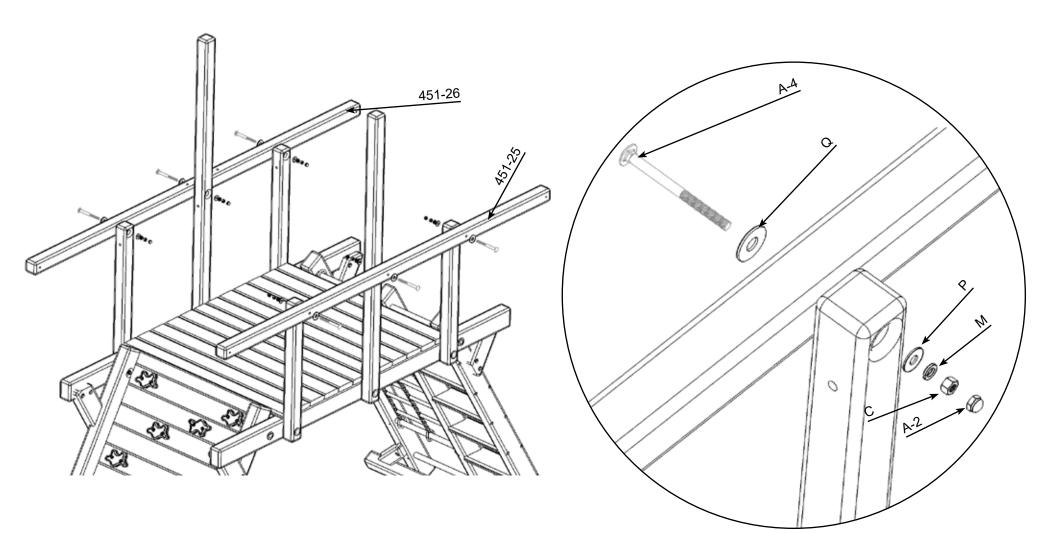

PARTS NEEDED

CC-176- Upper Arm-	(1)
CC-177- Trapeze Arm-	(1)
462-L- Ducile Iron Swing Hanger-	(2)

A-4- 1/2" x 6 1/2" Carriage Bolt-
C- 1/2" Hex Nut-
P- 1/2" Uss Flawasher-
G- 3/8" x 5" Hex Lag Screw-
A-1- 3/8" Acorn Nut Plated-

- A-7- 3/8 Nylon Insert Locknut-
- L- 3/8" Split Lockwasher-


- (4) A-2- 1/2" Acorn Nut Plated-(4) (4)
 (4)
 (8)
 (4)
 (4)
 (4)
- (4) M- 1/2" Split Lockwasher-
- Q- 3/4" Uss Flat Washer-(4)
- (4) O- 3/8" Uss Flatwasher-
- (4) A-6- 3/8"-16 x 5" Hex Bolt-(4)
- A-8- 3/8" Bolt Cup-(4)
- cc.770 ¥/ \cap I. \leq 10 סו A-6 A-6 A-8 462-L 0 A-7 A-1 ш

6.5 JPC Main Assembly PARTS NEEDED HARDWARE NEEDED (3) (3) (12) (12) CC-149- Left Gusset-F- 3/8" x 3 1/2" Hex Lag Screw-O- 3/8" Uss Flatwasher-CC-148- Right Gusset-CC-149 \cap CC.148 CC-149 сć > 7₀0

PARTS NEEDED

(3) (1) (1)


CC-100- Rail Bottom-	
CC-143- Rope Block-	
CC-142- Entrapment Block-	




HARDWARE NEEDED

(4) O- 3/8" Uss Flatwasher(6) N- 1/4"Uss Flatwasher-

(4) (6)

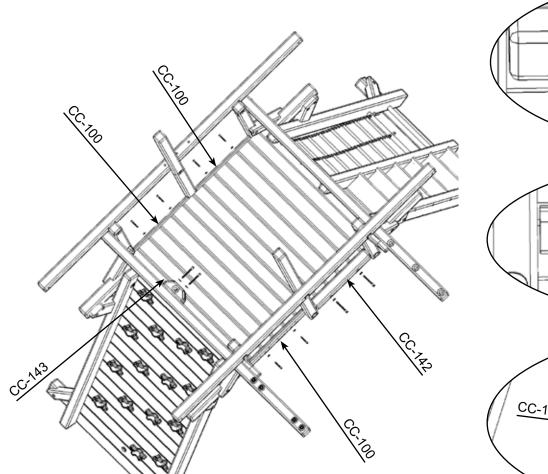


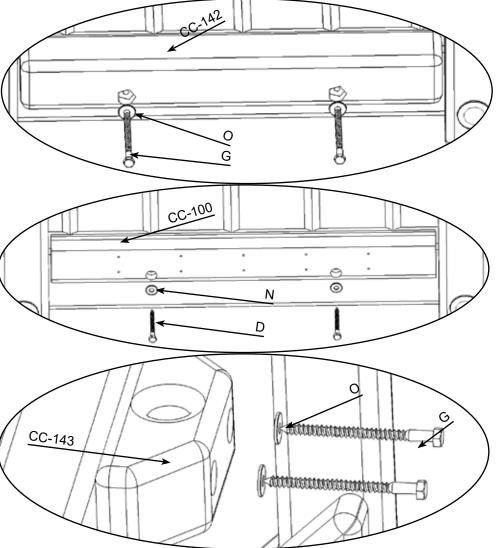

PARTS NEEDED

(7) (1) (3)

CC-103- Rope Rung-	
462-G- 16' Rope w/Rope Caps-	
462-H- 18' Rope w/Rope Caps-	

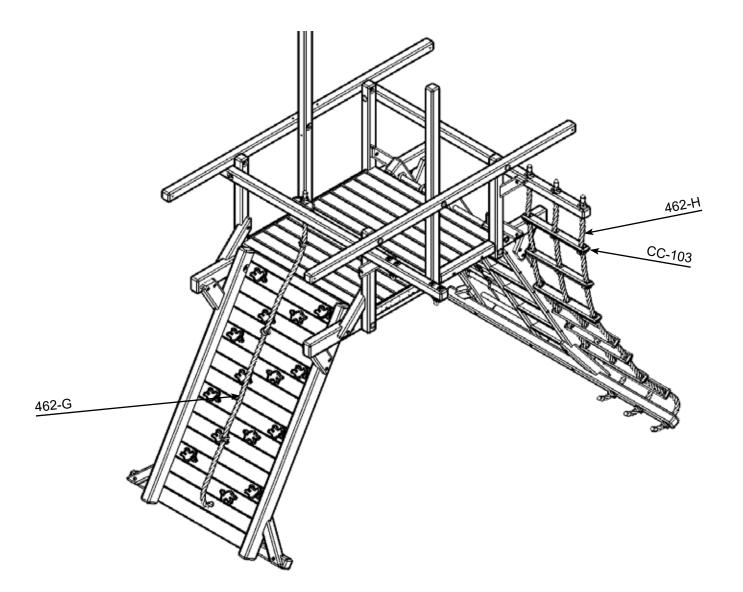


Н

Ν

Н

PARTS NEEDED HARDWARE NEEDED (12) (12) 462-M- Safety Handle-(4) (3) H- #14 x 2" Pan Phillip T/S-462-N- PlayGrip Ladder Handle-N- 1/4" Uss Flatwasher-462.M Koj. 462-M 462-M ACS.N

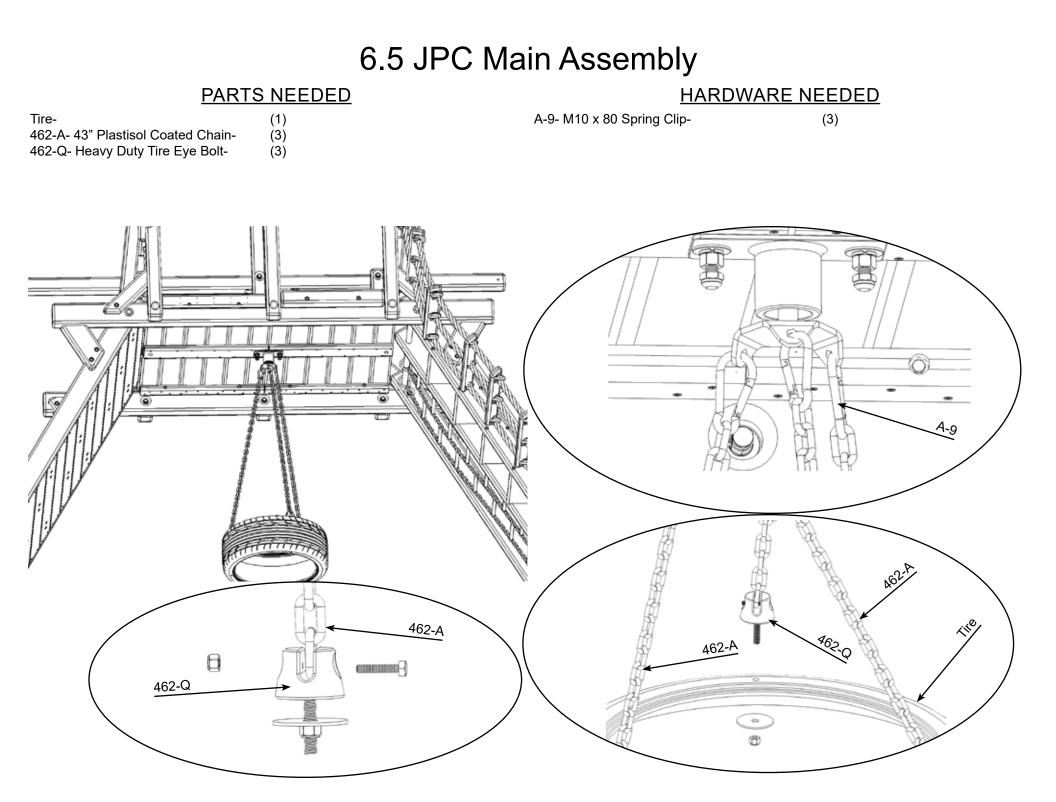

PARTS NEEDED HARDWARE NEEDED (2) (3) (3) Slide-(1) (1) A-9-8 x 80mm Spring Clip-462-E- 20" Trapeze Bar W/ Ring-43" Chain-H- #14 x 2" Pan Phillip T/S-N- 1/4" Uss Flatwasher-17:20 2015 Slide Slide Base 6 6 A-9

SBH-7- 1/2" Hex Nut-

PARTS NEEDED

(1) (1) (1)


462-D- 19" Ship's Wheel-

462-S- Telescope-

462-O- Swingbeam T Bracket-

HARDWARE NEEDED

(2) (2) (2) SBH-2- 1/2" Acorn Nut Plated-(2) SBH-3- 1/2" x 3 1/2" Carriage Bolt-(2) SBH-16- 1/2" Split Lockwasher-SBH-18- 1/2" Uss Flatwasher-(2) SBH-19- 3/4" Uss Flat washer-

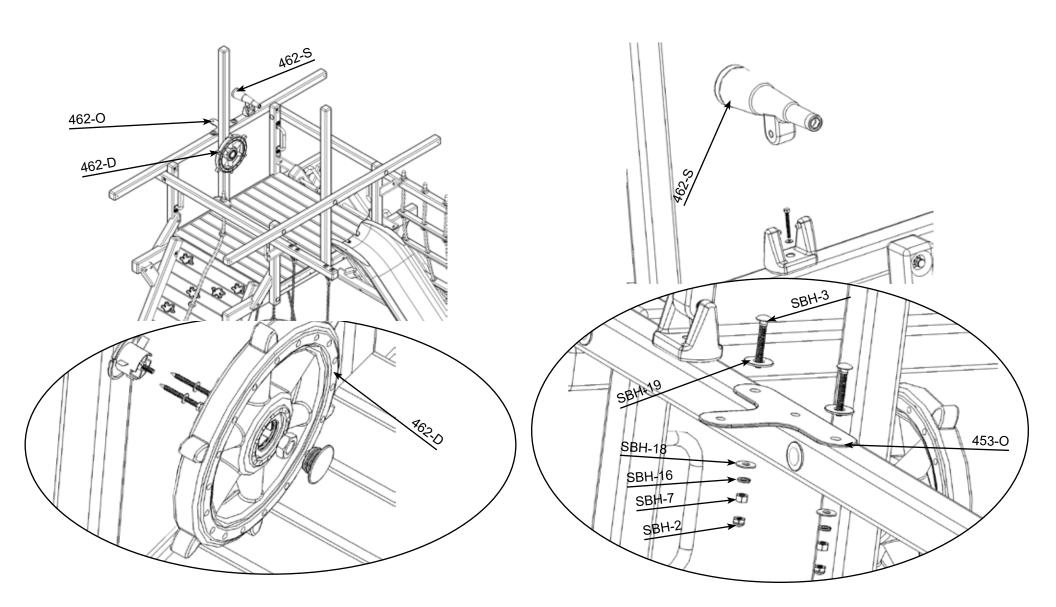


PARTS NEEDED

(1)

Swingbeam Assembly-

- SBH-2- 1/2" Acorn Nut Plated-SBH-5- 1/2" x 9 Carriage Bolt-SBH-16- 1/2" Split Lockwasher-SBH-19- 3/4" Uss Flat washer-
- HARDWARE NEEDED
 - (2) SBH-4- 1/2"-13 x 7" Carriage Bolt-
 - (1) SBH-7- 1/2" Hex Nut-
 - (2) SBH-18- 1/2" Uss Flatwasher-(2)

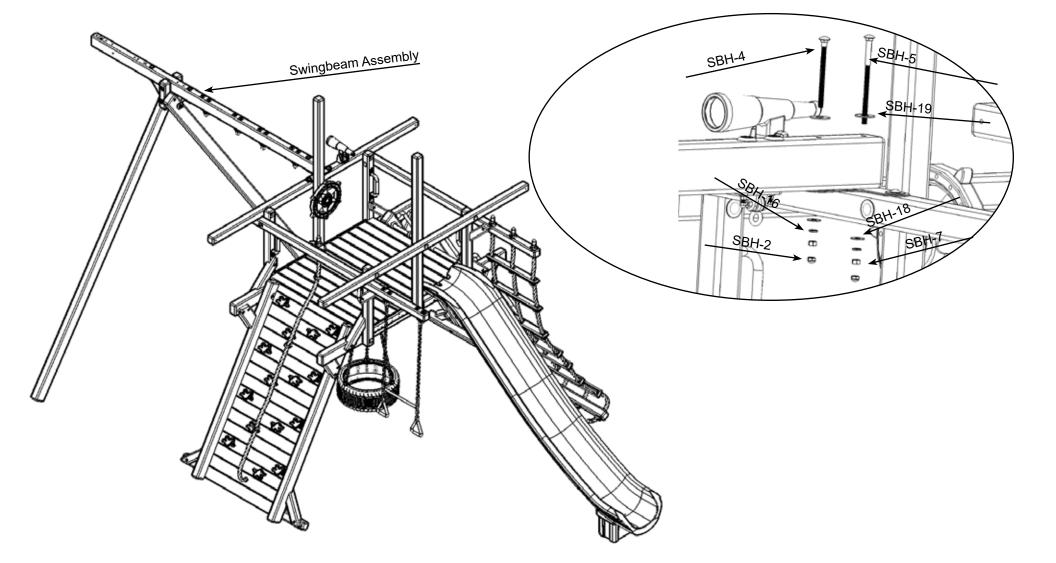

(1) (2) (2)

PARTS NEEDED

HARDWARE NEEDED

CC-182- A-Frame Crossmember-


(1)


SBH-2- 1/2" Acorn Nut Plated-SBH-7- 1/2" Hex Nut-SBH-18- 1/2" Uss Flatwasher-

(2)	SBH-4- 1/2" x 7" Carriage Bolt-	(2)
(2)	SBH-16- 1/2" Split Lockwasher-	(2)

(2) SBH-19- 3/4" Uss Flat washer- (2)

USING A 9/16" DRILL BIT AT MARKED HOLE AND ASSEMBLE AS SHOWN

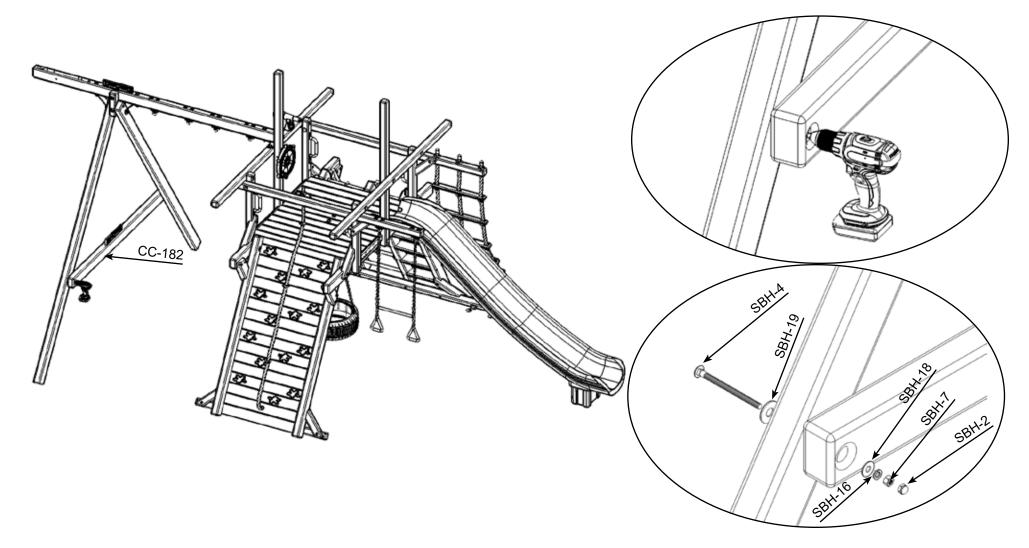

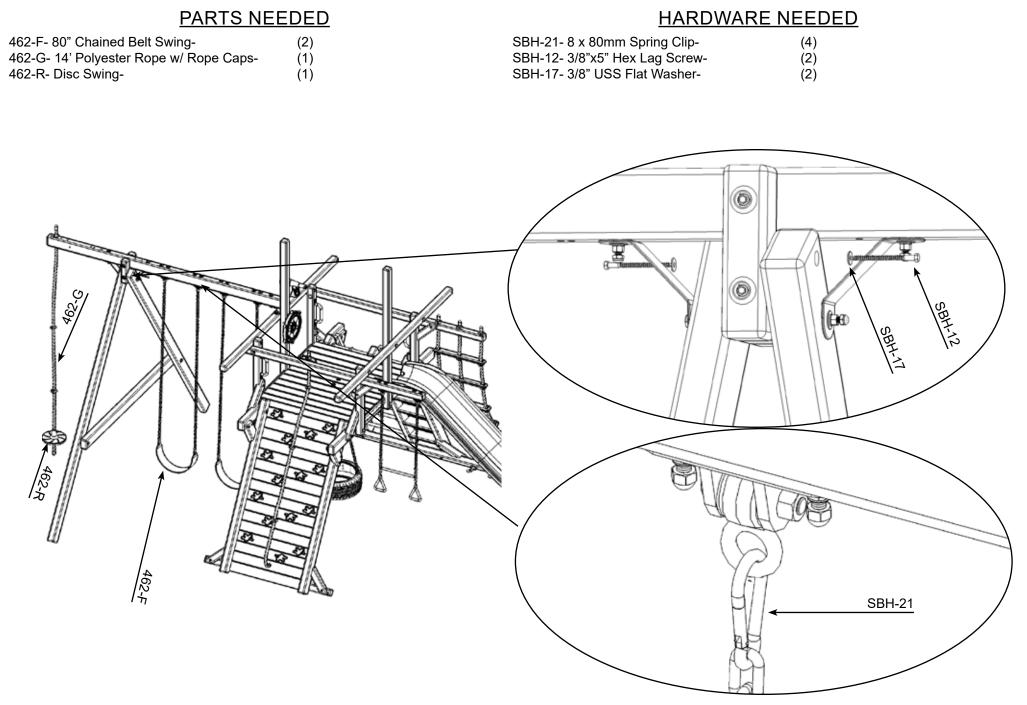

Tarp Option

PARTS NEEDED

(1) (2) (1)


CC-116- Center Tarp Board-	
CC-118- Tarp Board-	
Tarp-	

E- 1/4" x 4 1/2" Hex Lag Screw-R- Phillips Screw Snap-


- HARDWARE NEEDED
 - (6) N- 1/4" Uss Flatwasher-(8)

(6)

MARK THE PLACEMENT OF THE TARP SNAPS

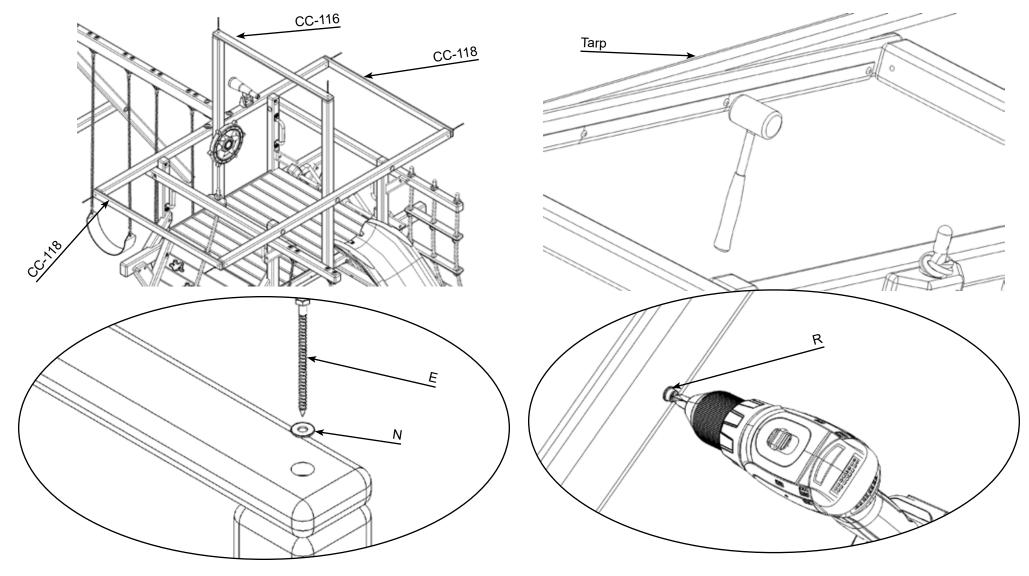

Tarp Option

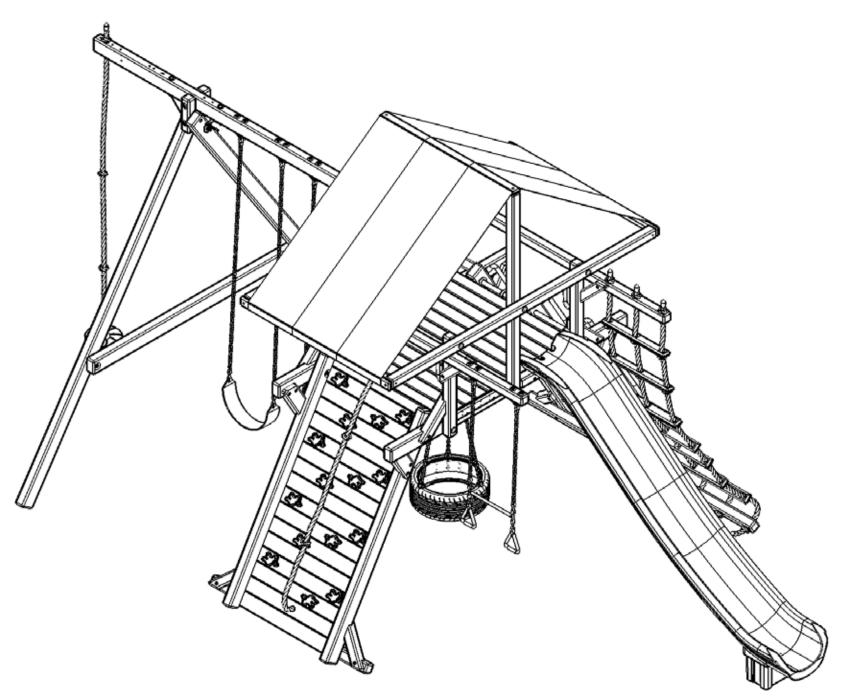

Wood Roof Option


PARTS NEEDED


456-8- Wood Roof Tarp Board-	
456-9- Left WR Runner-	
456-10- Right WR Runner-	

A-1- 3/8" Acorn Nut Plated-
A-5- 3/8-13 Hex Nut-
A-10- 3/8" Uss Flatwasher-
A-7- 1/4" x 4 1/2" Hex Lag Screw-

(1) (2) (2)

- HARDWARE NEEDED
 - A-2- 3/8" x 5" Carriage Bolt-(4) (4)
 - A-8- 3/8" Split Lockwasher-(4) (4)
 - A-11- 1/2" Uss Flatwasher-
 - (4) (4) (6) (6) A-9- 1/4" Uss Flatwasher-

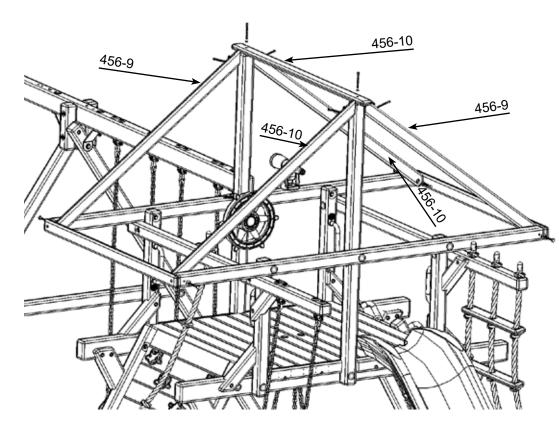

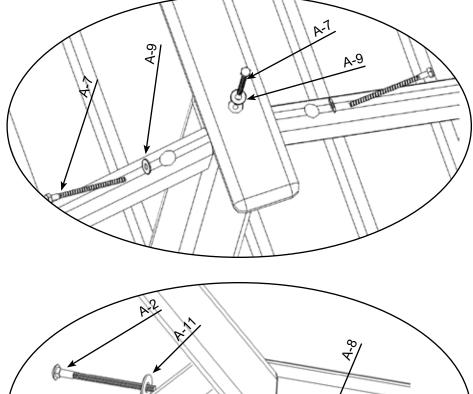

A-10

-0

4.5

0

£

A-1

Wood Roof Option


PARTS NEEDED


456-2- Wood Roof Support-
CC-020- Wood Roof Support-
456-11- Wood Roof Board-Ripped-
456-12- Wood Roof Board-


(2) (4) (2) (32)

HARDWARE NEEDED

A-3- 1 1/4" Coated Deck Screw-	(36)
A-4- 1 1/2" Coated Deck Screw-	(136)

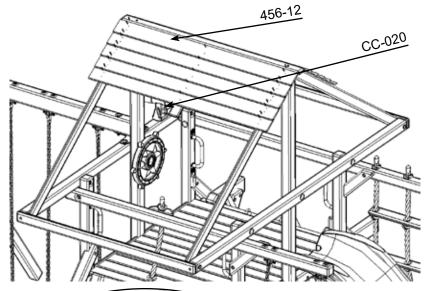

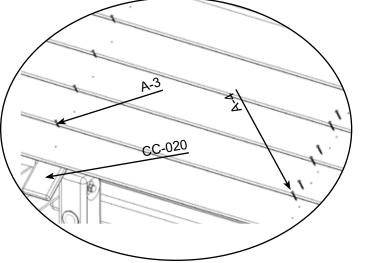

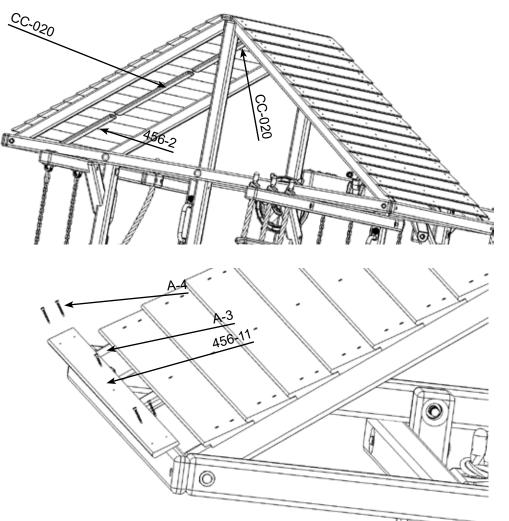

III LA INC

Wood Roof Option

PARTS NEEDED


(4)
(2)
(4)
(2)
(2)

456-1- Short Fan Board-	
456-3- Center Fan Board-	
456-4- Long Fan Board-	
456-6- Bottom Fan Board-	
456-7- Center Fan Board-	


A-4- 1 1/2" Coated Deck Screw-A-9- 1/4" Uss Flatwasher-

HARDWARE NEEDED

(136) A-6- 1/4" x 1 1/2" Hex Lag Screw- (14) (14)

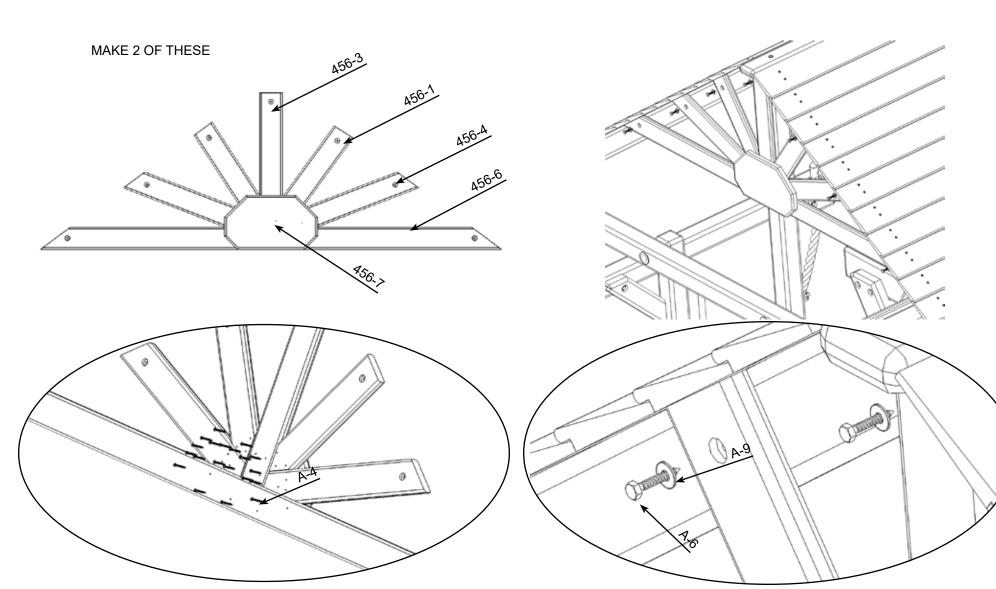

WOOD ROOF

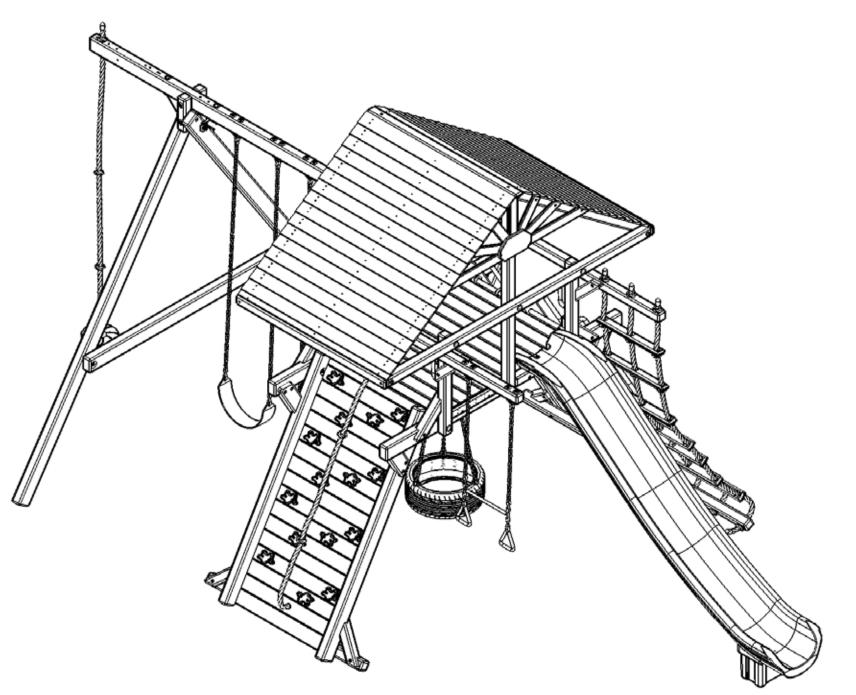

Open Rail

PARTS NEEDED


(15) (6) (6)

HARDWARE NEEDED


B- 2 1/2" Coated Deck Screw-

(60)

CC-088- Rail Spindle-CC-100- Rail Bottom-CC-099- Rail Top-

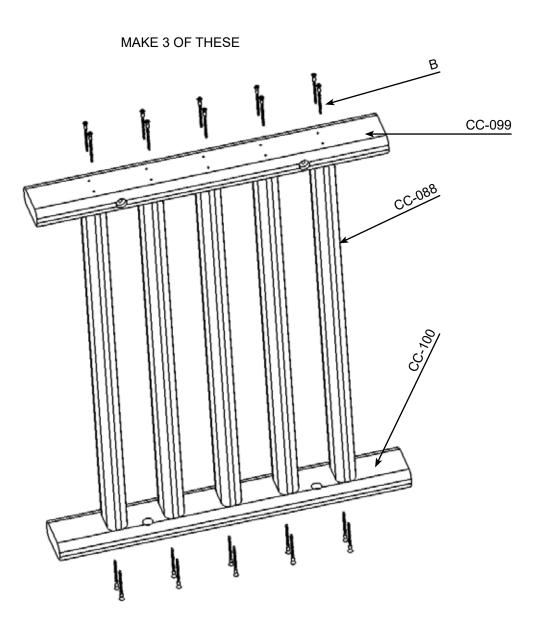

Open Rail Install

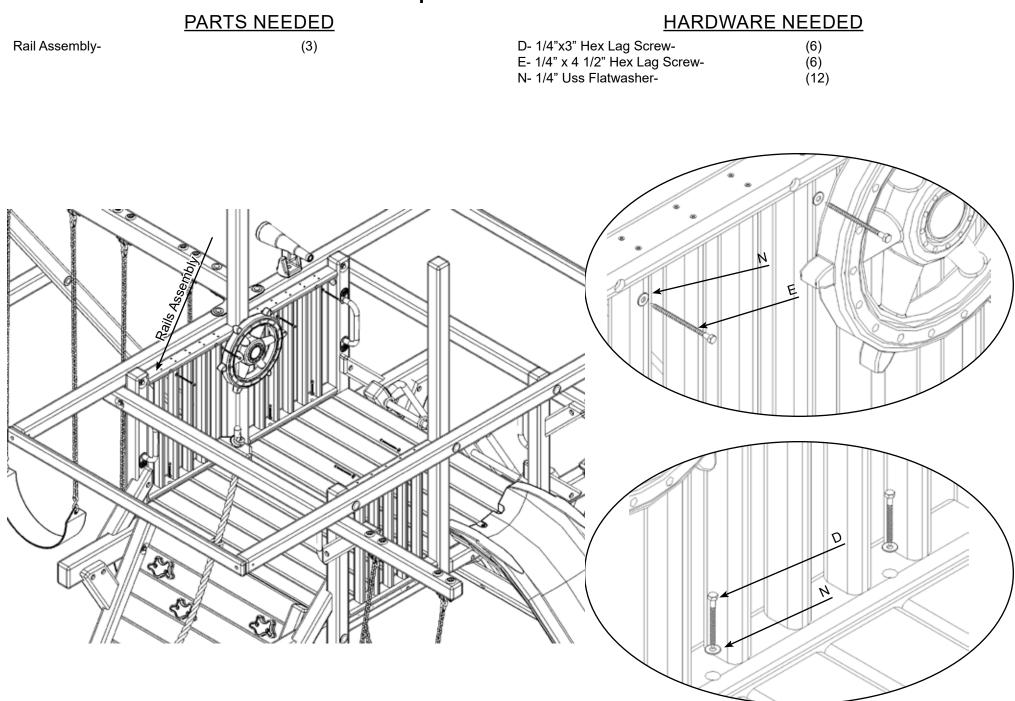

Closed Panel

PARTS NEEDED (15)

(3) (3)


CC-088- Rail Spindle-


CC-100- Rail Bottom-CC-099- Rail Top-

457-1- Panel Support-

HARDWARE NEEDED

B- #8 x 2 1/2" Coated Deck Screw (30) A-4 #8 x 1 1/2" Coated Deck Screw (108)

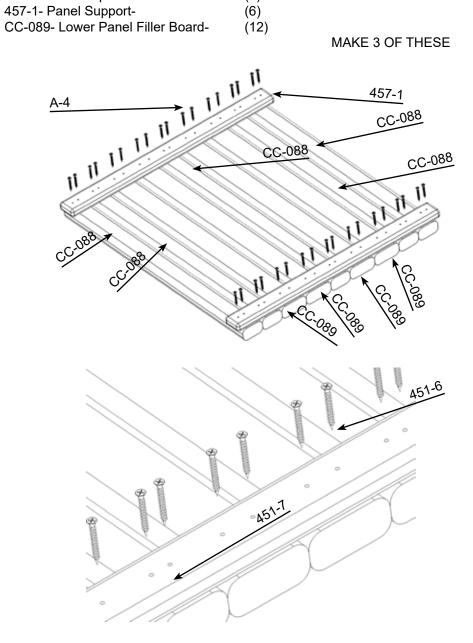

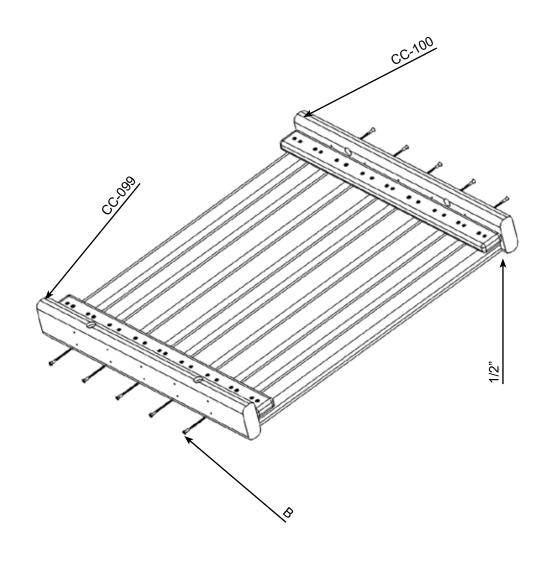


Closed Panel Install

PARTS NEEDED

Solid Rail Assembly-

(3)

D- 1/4" x 3" Hex Lag Screw-	(6)
E- 1/4" x 4 1/2" Hex Lag Screw-	(6)
N- 1/4" Uss Flatwasher-	(12)

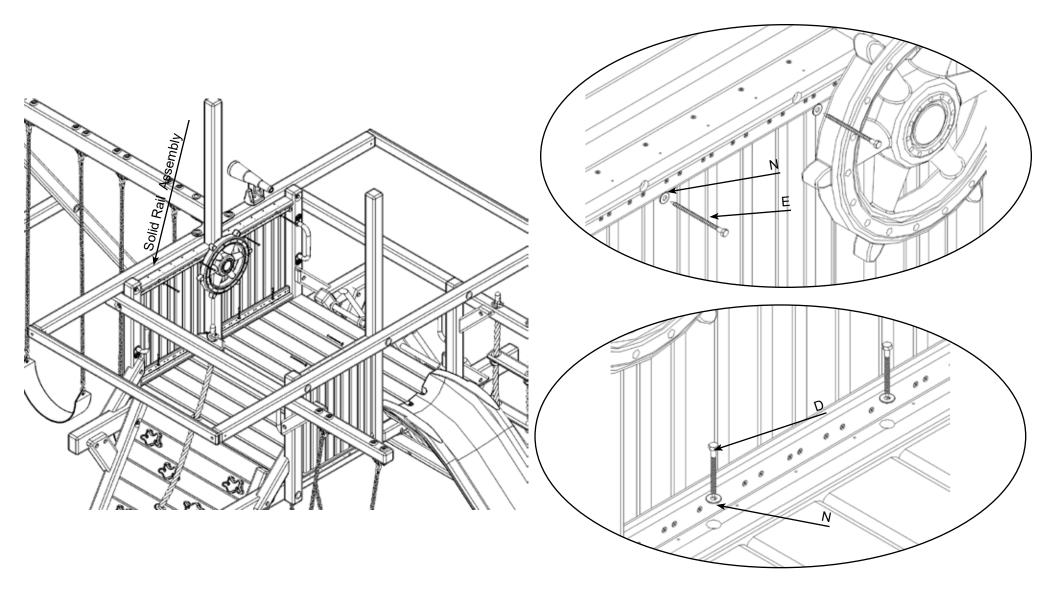

Treehouse Panel Install

PARTS NEEDED


- 457-7- Window Arch-(12)
- (4) CC-057- Left Treehouse Shutter-
- CC-058- Right Treehouse Shutter-
- 457-17- Upper Panel Board #8-

457-11- Upper Panel Board #11-

457-2- Upper Panel #9-

- (4) (4)
- 457-16- Upper Panel Board #10-
- (4) (4) (4)

- A-1- 1 1/2" Coated Deck Screw-
- (64)

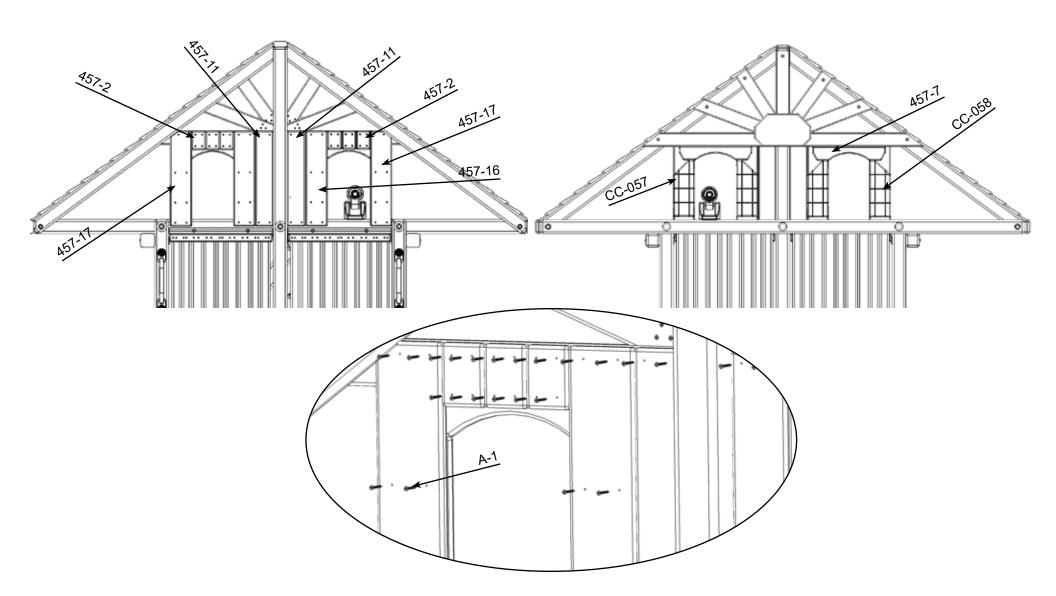

Treehouse Panel Install

(4)

PARTS NEEDED

457-3- Upper Panel Board #2-

- (4) 457-4- Upper Panel Board #12-
- (4) 457-6- Upper Panel Board #5-


HARDWARE NEEDED


(104)


A-1- 1 1/2" Coated Deck Screw-

457-5- Upper Panel Board #3-(4) 457-8- Upper Panel Board #6-(4) 457-9- Upper Panel Board #7-(4) 457-10- Upper Inside Panel Support-(4) 457-12- Upper Panel Board #1-(4) 457-15- Upper Panel Board #4-(4) 457-9 457-9 45>,8 457-10 457-6 457-15 \$57.70 452.5 457-12 457-4 457-5 75) A 0 ê 457-12 457-3 91-734 427-3 457-8 457-6 'A-457-10


Treehouse Panel

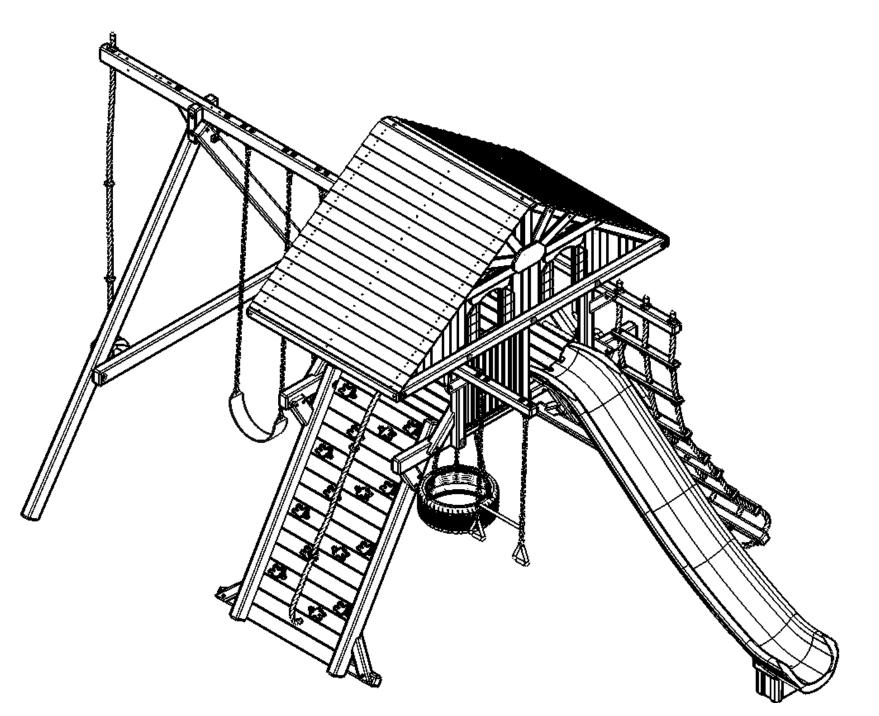

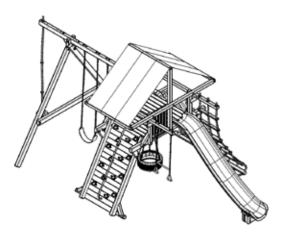

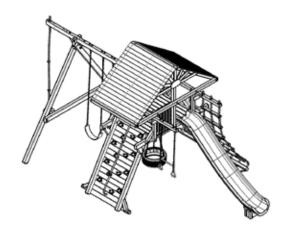



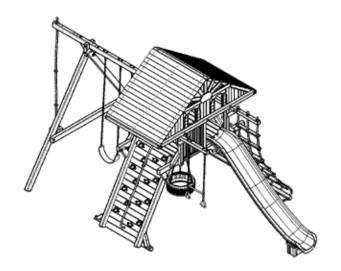

Universal Monkey Bar Installation Manual





4465 West Sam Houston Parkway N. Houston, Texas 77041 WWW.TREEFROGSSHOWROOMS.COM

© 2018 KID STRUCTURES INC.

Sections

Section 1: Cover & Liability Info Section 2: Product Parts Section 3: Sub-Assemblies Section 4: Main Assebmly

IMPORTANT - PLEASE READ

As fresh lumber acclimates to its new environment, the natural tendencies of the tree can show itself in the form of checks, or "cracks" in the lumber. In almost all cases this is normal and it will not affect the structural integrity of your play set.

Cosmetic defects that do not affect the structural integrity of the product, or natural defects of wood such as warping, checking or any other physical properties of wood that do not present a safety hazard, are not covered by this warranty.

Defects that develop because the product is exposed to extreme climate conditions are not covered by this warranty. Defects that develop as a result of faulty or improper installation of the product are also not covered by this warranty.

Most cracks are not warrantable, however if you believe that the integrity of your play set is compromised by this natural occurrence, please contact the Tree Frogs Swing Set Dealer that you purchased your swing set from.

We appreciate your purchase and know that you will enjoy your play system for many years to come.

Tools Needed for Assembly			
24" Level	Angle Square		
3/8" Cordless Drill or Electric Drill	3/8" Drive Ratchet or Electric Impact Gun		
Pliers or Vise Grips	7/16" Deep Well Socket		
3/4" Deep Well Socket	1/8", 1/4", and 9/16" Drill Bits		
An Adult with two Adult Helpers			
	24" Level 3/8" Cordless Drill or Electric Drill Pliers or Vise Grips 3/4" Deep Well Socket		

Pre-Assembly Hints

- Depending on your experience, assembly of our play sets can take as little as 6 hours up to 24 hours, depending on size, after inventory of parts; therefore, we recommend you set aside a full two days for assembly.
- Identify all of the parts for your play set. Empty each box and lay out boards so you can see each part. Your instruction book will
 have detailed drawings that will make it easy for you to recognize individual parts. Keep all hardware and metal parts separate
 from wooden pieces.
- After everything is laid out, check carefully to ensure all parts are present. Make sure there are no broken boards.
- Find an area to sort your hardware. It is best to open the hardware on a solid surface so that you do not lose any pieces in the grass.

This will save time and familiarize you with all the different pieces in the hardware bag.

Important note: Wood has some natural defects such as knots, surface cracks, etc... We reject parts that are structurally defective. We use a high quality lumber in our structures; however, you should inspect each part for splinters or rough spots and sand them smooth to prevent injury.

- After familiarizing yourself with all of the components, read all instructions thoroughly. Reading instructions after you have studied the parts will help you understand more clearly the installation process, and help to eliminate unnecessary mistakes.
- Pay close attention to the diameter and length of each bolt and screw.
- Never tighten hardware completely at first. It helps to have some adjustment for bolt alignment while you are attaching parts together. After everything is square, tighten each joint.
- After the main unit is assembled it is critical that the floor is level and square. If the main frame is not level, the walls and floor will be out of square.
- After you complete installation, make sure every bolt, screw, and nut is tight, and every board is secure. Wood will expand and contract with the seasons.
- Place the set on level ground, not less than 6ft from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- All 1/4" and 3/8" lag bolts must have pre-drilled holes 1-1/2" to 2" deep. Use a 1/8" drill bit for the 1/4" lag bolts and 1/4" drill bit for 3/8" lag bolts. Use pre-drilled holes in facias as a reference for placing lag bolt pilot holes.
- If a board lifts or rises causing a gap between boards when running in lag bolts or screws, back out the screw or lag bolt and press
 or apply pressure (but not enough to crack or break board) while re¬running in the lag bolt or screw in the same hole.
- Do not over tighten bolts, lag bolts or screws. You can damage boards, break hardware, and/or strip out the hardware.
- When using hammer do not beat on the hardware, but gently tap it in. Never beat on the wood as it will leave marks.

Leveling Your Swing Set During Assembly

- Complete the steps which will be the basic frame of the fort {i.e. four corner posts with base (sand box boards) and deck supports}
- Position in the most level area chosen for the play set, keeping in mind the location and size of the swing beam, ladder, slides, etc. that extend off the fort.
- Once the frame is in the final position, check for vertical and horizontal levelness to determine which side(s) will need to be dug into the ground to level the play set.
- With a shovel, score the ground around the outside edges of the sandbox boards on the 'high' side of the fort. This is the area that will be dug in. Make sure to score deep enough; the scored lines will be your digging template.
- Push the frame off and away from the scored area, far enough to dig and remove dirt to reach the appropriate depth.
- Dig a channel along the scored line(s) for the base of the fort (corner post and sandbox boards) to rest into. Dig the channel(s) to the same level depth. The bottom of the channel(s) should be level to each other so your frame doesn't teeter or rock because the channel(s) are uneven.
- Once you have removed enough grass and dirt, slide/push the frame into the channel(s). Place a level on the vertical and horizontal boards of the frame to determine if enough soil, or too much, was removed.
- Repeat this process until the basic frame is plumb and level and in its final position before completing the rest of the assembly.
- Measure to make sure fort is square.
- ** Important: if you require a channel depth of more than 6", then we recommend you have your play set area professionally graded before completing assembly. **

Choosing A Location For Your Playset

When choosing a location for your swing set, always keep your child or children's safety in mind. Here are some recommendations to help you locate and install a safe play area.

- This play set is designed for the use of 4 occupants who have a combined weight not exceeding 800 pounds on the elevated floor; 3 occupants who have a combined weight of 525 pounds on the swing area; for a total Unit capacity of 5 occupants who have a combined weight of 1325. (this weight is not including the picnic table area)
- On-site adult supervision is required.
- The swing set should be located on level ground. The stationary components such as ladders and slides are required to be a minimum of six feet from any structure or obstruction such as a fence, garage, house, tree, overhanging branches, electrical wires, clotheslines, etc. Any swinging equipment is also required to be a minimum distance twice the height of the swing beam away from these obstructions or structures as well. The swing set should be located a safe distance from any water hazards, such as a lake, river, bayou, swimming pool, etc.
- Do not install this residential swing set in a commercial setting. This swing set is not manufactured for commercial usage and will void all warranties. Tree Frogs Wooden Swing Set Factory is not responsible for any damages or injuries resulting from this swing set being used in a commercial setting.
- Never install this swing set indoors; or over concrete, asphalt, packed earth, grass, carpet or any other hard surface. A fall onto a hard surface can result in serious or fatal injury.
- The U.S. Consumer Product Safety Commission (CPSC) recommends that you install and maintain a resilient surface under your swing set. The CPSC's Consumer Information Sheet for Playground Surfacing Materials is on the next page. A resilient surface, should be installed after the swing set has been completely assembled according to these instructions. The swing set must rest on solid ground. Please note that this swing set has a maximum fall height of 7'.

Maintaining Your Swing Set

Here are some maintenance tips required to insure safe play on your swing set for years of fun.

• At the beginning of each usage season and every two weeks during, check: nuts and bolts and tighten as needed, swing seats, chains, ladders, slides, rope and wood components for sign of deterioration and replace if necessary.

• On a yearly basis, we recommend that you coat your swing set with a sealant or preservative. You may also wantto spot sand any areas prior to sealing.

** Special note: Although we recommend that you reseal your swing set annually, you may have to touch up the high traffic areas and/or areas that have a high exposure to direct sunlight.**

• Be sure that the sealant you select is non-toxic and child safe. Your local Tree Frogs Wooden Swing Set Factory dealer may offer a complete power wash and reseal and maintenance program.

• Do not use line trimmers or "weed eaters" around your swing set. The line will remove both paint and wood from uprights and base pieces. Any damage resulting from this type of abuse is not covered under our limited warranty.

• Remove plastic swing seats and take in doors or do not use when temperature drops below 0°F.

Please keep this install manual for future reference.

To insure SAFE PLAY adults must teach children:

- Not to walk close to, in front of, behind, or between moving items.
- Not to swing empty swing seats.
- Not to swing sideways into the path of adjacent swings.
- Not to use the swing set in a manner other than that for which it is intended.
- Not to get off the equipment while it is in motion.
- Not to jump off the tower.
- Not to stand in the swing seats.
- Not to swing so high that chains become slack, or above the height of the swing support.
- Not to jump on a slide.
- Not to climb on top of the swing support.
- Not to attach to the swing set any item that is not specifically designed for use with the equipment, such as (but not limited to) jump ropes, clotheslines, pet leashes, cables, and chains. These may become strangulation hazards.
- To hold on to swings and climbers with both hands.
- To slide feet first, never head first.
- To watch for other children while swinging or playing near the swing set.

To also insure SAFE PLAY adults must:

- Limit climbing and swinging heights to each child's ability.
- Verify that suspended climbing ropes are secured at both ends.
- Verify that suspended climbing ropes cannot be looped back on themselves.
- Dress children appropriately for play. Use well-fitted shoes that do not have slippery soles.
- Avoid ponchos, scarves, hoods, loose fitting clothing, neckties, and any clothing with a drawstring. Serious injury could result should any part of the children's clothing become entangled in the swing set.
- Do not allow children to play wearing helmets.
- Remember that children are inventive. When they develop games that are unsafe, be alert and change the rules.

Weight limits for Treefrogs Swingsets

Fort Platform: 800 Lbs.Total Weight.	<u>Swing Belts</u> : 175 Lbs.
<u>Trapeze</u> : 125 Lbs.	Full Bucket Swing: 50 Lbs.
Toddler Bucket Swing: 50 Lbs.	<u>Tire Swing</u> : 125 Lbs. Total Weight
<u>Rope Ladder</u> : 75 Lbs.	<u>Rock Wall</u> : 150 Lbs.

<u>All Slides</u>: 125 Lbs.

Tree Frogs recommends that the weight limits for all components must not be exceeded. Failure to adhere to these and other safety guidelines could result in damage to the swing set. and/or injury to the users.

CONSUMER INFORMATION SHEET FOR PLAYGROUND SURFACING MATERIALS

The U.S. Consumer Product Safety Commission (CPSC) estimates that about 100,000 playground equipment related injuries resulting from falls to the ground surface are treated annually in U.S. hospital emergency rooms. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries, and have the potential to be fatal, particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury-causing potential of a fall. It is self-evident that a fall onto a shock-absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. However, it should be recognized that some injuries from falls will occur no matter what playground surfacing material is used.

Playground equipment should never be placed on hard surfaces such as concrete or asphalt. Grass may appear to be acceptable, but can turn to hard packed earth in areas of high traffic. Shredded bark mulch, wood chips, or fine gravel are considered to be acceptable shock absorbing surfaces when installed and maintained at a sufficient depth under and around play equipment.

MATERIAL	UNCOM	IPRESSE	D DEPTH	COMPRESSED DEPTH
	6 Inch	9 Inch	12 Inch	9 inch
Wood Chips	7	10	11	10
Double Shredded Bark Mulch	6	10	11	7
Engineered Wood Fibers	6	7	>12	6
Fine Sand	5	5	9	5
Coarse Sand	5	5	6	4
Fine Gravel	6	7	10	6
Medium Gravel	5	5	6	5
Shredded Tires**	10-12	N/A	N/A	N/A

TABLE 1 -CRITICAL HEIGHTS (in feet) OF TESTED MATERIAL

** This is data from tests conducted by independent testing laboratories on a 6 inch depth of uncompressed shredded tire samples produced by four manufacturers. The test reported critical heights, which varied from 10 feet to greater than 12 feet. It is recommended that persons seeking to install shredded tires as a protective surface request test data from the supplier showing the critical height of the material when it was tested in accordance with ASTM F1292.

Table 1 should be read as follows: If, for example, uncompressed wood chips are used at a minimum of 6 inches, the Critical Height is 7 feet. If 9 inches of uncompressed wood chips are used, the Critical Height is 10 feet. It should be noted that, for some materials, the Critical Height decreases when the material is compressed. It is recommended that a shock absorbing material should extend a minimum of 6 feet in all directions from the perimeter of stationary equipment such as climbers and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of 2 times the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.

This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for your equipment. The choice of a material depends on the type and height of the playground equipment, the availability in your area, and its cost.

This information has been extracted from the CPSC publications "Playground Surfacing-Technical Information Guide" and "Handbook for Public Playground Safety." Copies of these reports can be obtained by sending a postcard to:

Office of Public Affairs U.S. Consumer Product Safety Commission Washington, D.C. 20207 Toll-free Hotline: 1-800-638-2772 or at http://www.cpsc.gov

2018 TREE FROGS Limited Lifetime Warranty Limited 10-Year Warranty, Limited 5-Year Warranty

Tree Frogs Warranties all Jaguar Playcenter Series, Bengal Forts Series, MegaDeck Fort Series Redwood components and Cedar components against structural failure due to warping, wood rot, insect infestation (excluding Carpenter Bees) or decay for the period of 10 Years from the date of original purchase. This warranty does not cover cracks, fissions, checks, fading, knots and weathering that are normal natural characteristics of wood, that do not affect the structural integrity of the product. The Redwood and Cedar components warranty is extended to a Limited Lifetime Warranty to the original owner upon registering this warranty within 90 days of purchase at www.treefrogsswingsets.com.

Tree Frogs Warranties all Parrot Island Fort Series, Parrot Island Playcenter Series, Rainforest Cottage Series Cedar components against structural failure due to warping, wood rot, insect infestation (excluding Carpenter Bees) or decay for a period of 10 Years from the date of original purchase. This warranty does not cover cracks, fissions, checks, fading, knots and weathering that are normal natural characteristics of wood, that do not affect the structural integrity of the product.

Tree Frogs Warranties all Toucan Fort Series, Toucan Playcenter Series, Orangutan Fort Series, Stand Alone Swings Cedar components against structural failure due to warping, wood rot, insect infestation (excluding Carpenter Bees) or decay for a period of 5 Years from the date of original purchase. This warranty does not cover cracks, fissions, checks, fading, knots and weathering that are normal natural characteristics of wood, that do not affect the structural integrity of the product.

In addition, a 10-Year Limited Warranty applies to all roto-molded slides, ductile iron swing hangers, tire swivels, metal climbing rungs and swing beam brackets against failure due to rust or failure in defect in material. Surface rust, fading, weathering, cracks/chips in coatings and corrosion that do not affect structural integrity are not covered by this warranty. Furthermore, a 5-Year Limited Warranty applies to all components & accessories including all swings, chain ladders, gliders, handles, brackets, bubble panels, tarps, steering/ships wheels, telescopes, binoculars, buoy ball, blow molded slides and disc seat that are not covered under the 10-Year Warranty to be free from defects in material and workmanship. Surface rust, fading, weathering, cracks/chips in coatings and corrosion that do not affect structural integrity are not covered by this warranty.

And for a period of 1-Year Tree Frogs warranties all ropes, structural foam molded slides to be free of defects in material and workmanship. Fading is not considered a defect and may occur with seasonal and geographical conditions.

**10-Year Warranty Exclusion: Toucan Fort Series, Toucan Playcenter Series, Orangutan Series, Stand Alone Swings (Limite 5Yr/5Yr/1Yr WARRANTY).

This warranty is limited to a repair or replacement of the defective part. Product covered under this warranty will be shipped at the customer's expense. Tree Frogs is not responsible for any expense associated with freight, or delivery and installation of the warranted part(s). Tree Frogs reserves the right to inspect all warranty claim parts for which a claim has been made.

This limited warranty applies only to the original retail purchaser and for residential use only, non-residential use voids warranty. These warranties void when product is transferred or sold or no longer in possession by original owner. A copy of the original invoice must be presented to initiate warranty claim. This limited warranty does not cover damage from abuse, acts of God, vandalism, maintenance guideline neglect, alterations, normal wear & tear, use other than residential, unauthorized modification, damage due to moving of product or improper installation and or use. Any modification could damage the structural integrity of the play system and voids all warranties.

This warranty is exclusive and expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use. Tree Frogs does not assume, or authorize any person to assume for us, any other liability in connection with the sale of our products.

This warranty gives you specific legal rights, and you also may have other rights that vary from state to state. Register your play system's warranty at www.treefrogsswingsets.com.

Tree Frogs reserves the right at any time to change product specifications or substitute similar components.


See your instruction manual for guidelines on regular maintenance. http://treefrogsshowrooms.com/installation-manuals/ . Your child's play system & perimeter play zone should be inspected regularly for any wear & safety hazards.

Universal Monkey Bar (031)	Description	QTY.
	(CC-220) 031-1 31 1/4" Monkey Bar Bottom	1
	(CC-136) 031-2 26 1/2" Step	4
	(CC-149) 031-3 19" Left Gusset	1
	(CC-148) 031-4 19" Right Gusset	1
	(CC-190) 031-5 16" Left MB Gusset	1
	(CC-191) 031-6 16" Right MB Gusset	1
	031-7 96" Right MB Overhead	1

Universal Monkey Bar (031)	Description	QTY.
	031-8 96" Left MB Overhead	1
	(CC-192) 031-9 103" Right Support Leg	1
	(CC-193) 031-10 103" Left Support Leg	1
(Not In Box)		
	(Not it Box) Parrot Island Fort Center Post Monkey Bar	1
	Parrot Island Playcenter Center Post Monkey Bar	1

UNIVERSAL MONKEY BAR -031-HWR-BAG


INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

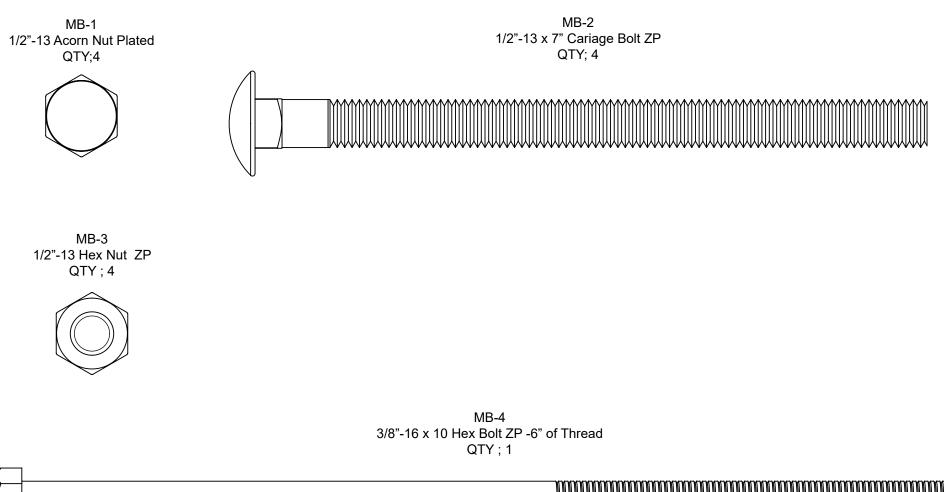

MEASUREMENT TAKEN FROM BOTTOM OF BOLT HEAD TO THE BOTTOM OF BOLT

UNIVERSAL MONKEY BAR -031-HWR-BAG


INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

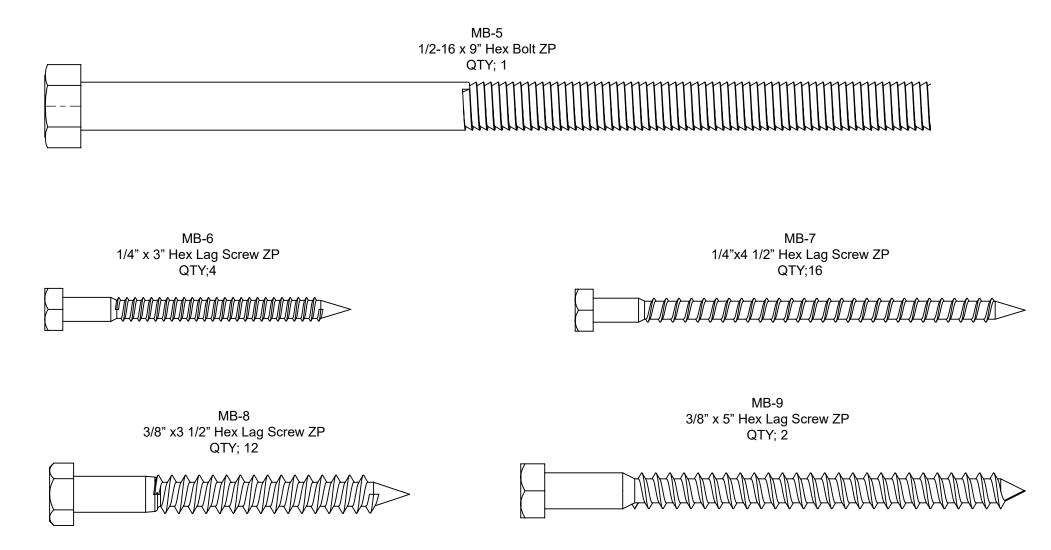

MEASUREMENT TAKEN FROM BOTTOM OF BOLT HEAD TO THE BOTTOM OF BOLT

UNIVERSAL MONKEY BAR -031-HWR-BAG

INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

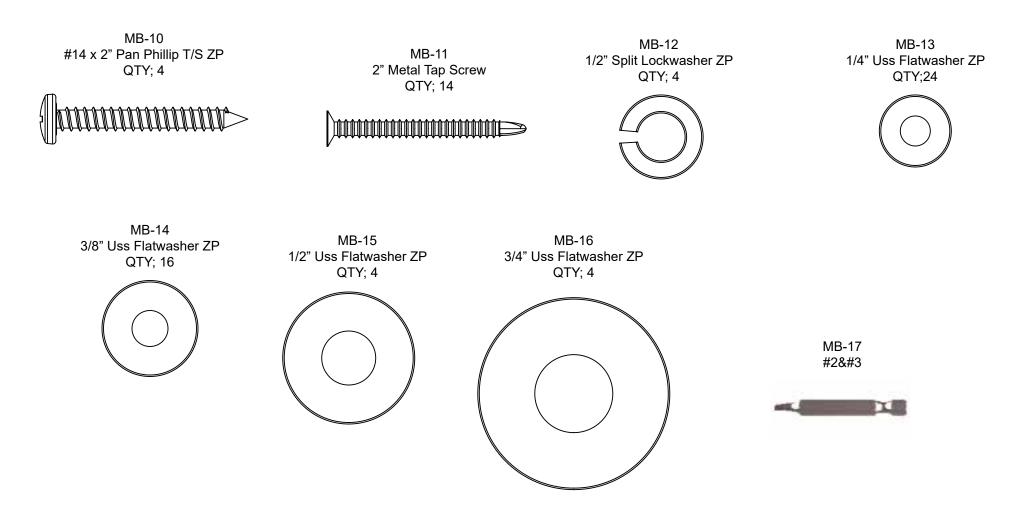


MEASUREMENT TAKEN FROM BOTTOM OF BOLT HEAD TO THE BOTTOM OF BOLT

Universal Monkey Bar-031-HWA-SB	Description	QTY.
	031-A 1 1/4" x 22 1/4" PlayGrip Tube	6
	031-B 1 1/4" x 65 1/2" PlayGrip Ladder Handle	2

Monkey Bar Support - Sub Assemblies


PARTS NEEDED

CC-220- Monkey Bar Bottom-	
CC-136- Step-	
CC-192- Right Support Leg-	
CC-193- Left Support Leg-	
031-B- PlavGrip Ladder Handle-	



HARDWARE NEEDED

- MB-9 3/8" x 5" Hex Lag Screw ZP-(4) (4) (4)
- MB-14 3/8" Uss Flatwasher ZP-
- MB-13 1/4" Uss Flatwasher ZP-

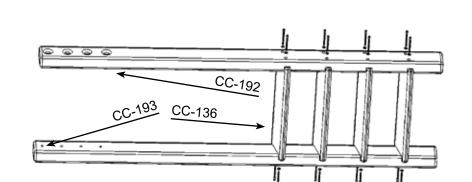


(1)


(4)


(1)

(1) (2)

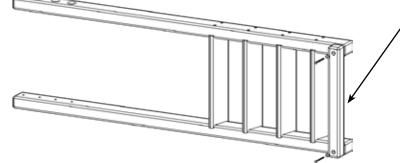



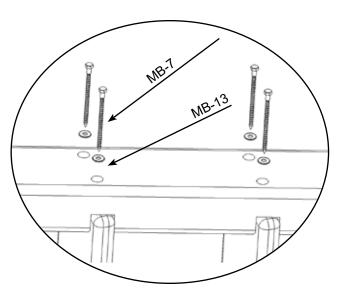


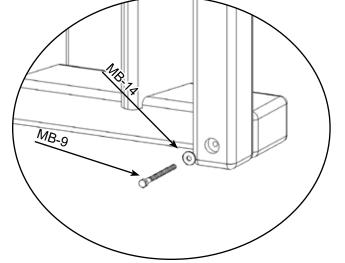

0 0

88

۲

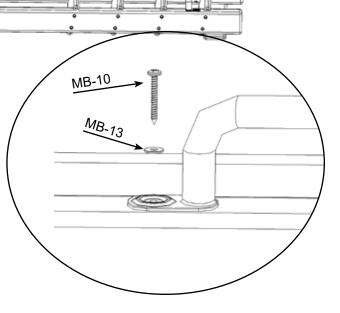

10

Universal Monkey Bar Overhead Sub-Assemblies

PARTS NEEDED


HARDWARE NEEDED


031-7 Right Overhead (1) 031-8 Left Overhead (1) 031-A 1 1/4"Diax 16 ga x22" PlayGrip Tube,PC Coated (6)

031-A 031-A

Place the 22" Playgrip Tubes in the holes and using a rubber mallet, knock them in until they bottom out.

Place the (R) Monkey Bar Overheadon the Playgrip Tubes and using a rubber mallet, knock the board down until it bottoms out. Leaving the assembly at 25" wide.

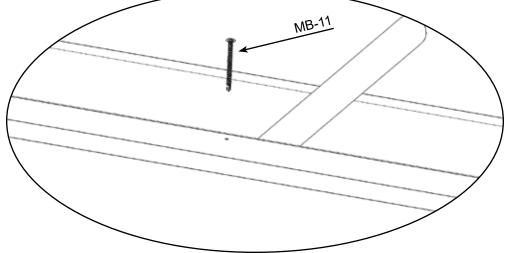

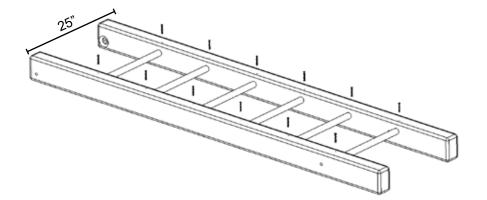

MB-11 2" Metal Tap Screw (12)

Monkey Bar Assembly

MB-1- 1/2"-13 Acorn Nut Plated-

MB-12- 1/2" Split Lockwasher-

MB-15- 1/2" Uss Flatwasher-


MB-8- 3/8" x 3 1/2" Hex Lag Screw-

PARTS NEEDED

Monkey Bar Overhead Assembly (1) Support Assembly (1) CC-190 Left MB Gusset (1) CC-191 Right MB Gusset (1)

HARDWARE NEEDED

- (2) (2) MB-2- 1/2"-13 x 7" Carriage Bolt-(8) (2)
 - MB-3- 1/2"-13 Hex Nut-
- (8) (2) MB-14- 3/8" Uss Flatwasher-
- (2) (2)MB-16- 3/4" Uss Flatwasher-

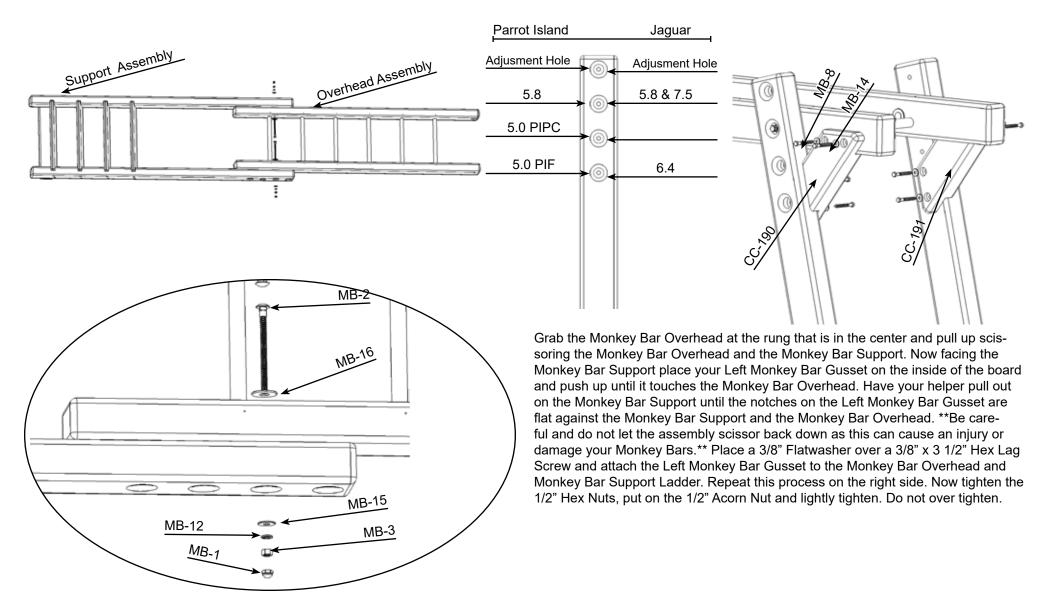

5.8 Jaguar Fort Monkey Bar Assembly

5.8 Jaguar Playcenter Monkey Bar Assembly

PARTS NEEDED


Monkey Bar Assembly CC-149 Left Gusset (1) CC-148 Right Gusset (1)


MB-1- 1/2"-13 Acorn Nut Plated-	(2)	Μ
MB-3- 1/2"-13 Hex Nut-	(2)	Μ
MB-8- 3/8" x 3 1/2" Hex Lag Screw-	(4)	Μ
MB-14- 3/8" Uss Flatwasher-	(4)	Μ
MB-16- 3/4" Uss Flatwasher-	(1)	A
C- 1/2"-13 Hex Nut-	(1)	Μ
P- 1/2" Uss Flatwasher-	(1)	

HARDWARE NEEDED

2)	MB-2- 1/2"-13 x 7" Carriage Bolt-	(2)
2)	MB-5- 1/2"-16 x 9" Hex Bolt-	(1)
1)	MB-12- 1/2" Split Lockwasher-	(2)
1)	MB-15- 1/2" Uss Flatwasher-	(2)
1)	A-2- 1/2"-13 Acorn Nut Plated-	(1)
1)	M- 1/2" Split Lockwasher-	(1)
	-	• • •

On the other side place a 3/4" Flatwasher over a 1/2" x 7" Carriage Bolt and then insert thru the hole into the countersunk hole in the Monkey Bar Overhead. Place a 1/2" Washer, 1/2" Lockwasher over the 1/2" x 7" Carriage Bolt end inside the Monkey Bar Overhead. Thread the 1/2" Hex Nut on to the 1/2" x 7" Carriage Bolt. Now tighten the 1/2" Hex Nuts, put on the 1/2" Acorn Nut and lightly tighten. Do not over tighten. Place Left Gusset Bracket and attach with 2 - 3/8" x 3 1/2" Hex Lag Screw with 3/8" Flatwashers on them.

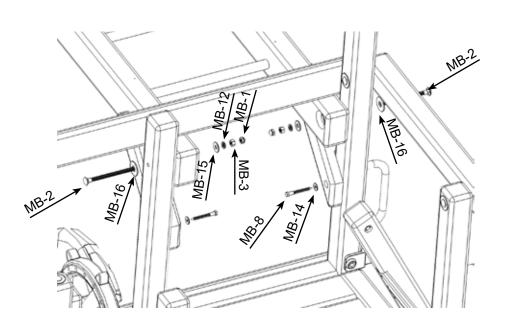

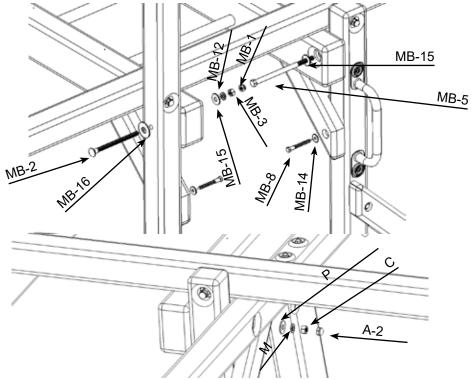

This step is only if you purchased a 5 or 5.8 Fort. Line up Monkey Bar Overhead countersunk holes with the holes below your 6 Hole Facia. Place a 3/4" Flatwasher over a 1/2" x 7" Carriage Bolt and then insert thru the hole into the countersunk hole in the Monkey Bar Overhead. Place a 1/2" Washer, 1/2" Lockwasher over the 1/2" x 7" Carriage Bolt end inside the Monkey Bar Overhead. Thread the 1/2" Hex Nut on to the 1/2" x 7" Carriage Bolt. Repeat this process on the other side. Now tighten the 1/2" Hex Nuts, put on the 1/2" Acorn Nut and lightly tighten. Do not over tighten. Place Left Gusset Bracket and attach with 2 - 3/8" x 3 1/2" Hex Lag Screw with 3/8" Flatwashers on them. Repeat this process for the Right Gusset Bracket on other side.

Remove the 1/2" x 7" Carriage Bolt and Hardware from the Corner Post. Then line up Monkey Bar Overhead countersunk holes with the holes in the Playcenter as seen above. Place a 1/2" Washer over the 1/2" x 9" Hex Bolt and then insert thru the Front Beam, then thru the Corner Post, and into the countersunk hole in the Monkey Bar Overhead. Place a 1/2" Washer, 1/2" Lockwasher over the 1/2" x 9" Hex Bolt end inside the Monkey Bar Overhead. Thread the 1/2" Hex Nut on to the 1/2" x 9" Hex Bolt. Place Right Gusset Bracket and attach with 2 - 3/8" x 3 1/2" Hex Lag Screw with 3/8" Flatwashers on them.


6.5 & 7.5 Monkey Bar Assambly

HARDWARE NEEDED

MB-1- 1/2"-13 Acorn Nut Plated-	(2)	MB-2- 1/2"-13 x 7" Cariage Bolt-	(2)
MB-3- 1/2"-13 Hex Nut-	(2)	MB-12- 1/2" Split Lockwasher-	(2)

- MB-12- 1/2" Split Lockwasher-(2)
- (2) MB-16- 3/4" Uss Flatwasher-

(2)

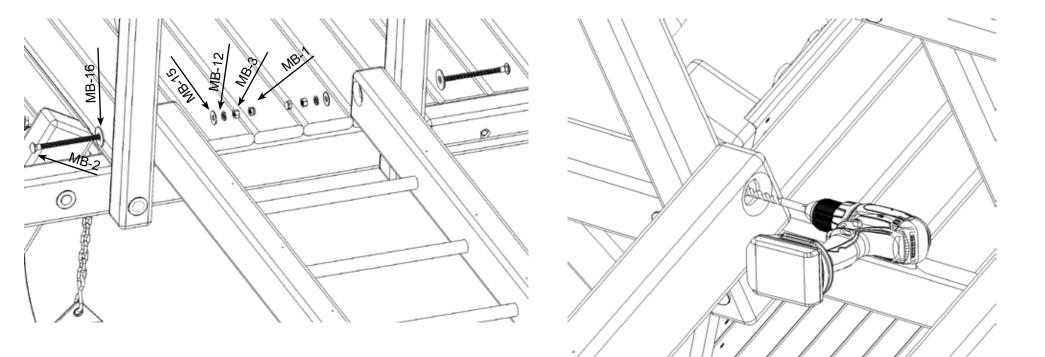


Set the Monkey Bar overhead on the deck(Fort) or line up the bottom of the Monkey Bar Overhead with the top of the Deck(Playcenter) and insert Monkey Bar Overhead in between the Corner Post and the Center Post. Make sure the ends of the Monkey Bar Overhead is flush with the inside of Corner Post and Center Post and then drill (see Figure 2) thru the Monkey Bar Overhead countersinks thru the Corner Post and Center Post. (On a playcenter swingset you will need to remove the Gusset on the Corner Post prior to drilling and then put the Gusset back on once all the Hardware is installed and tightened.) Place a 3/4" Flatwasher over a 1/2" x 7" Carriage Bolt and then insert thru the hole into the countersunk hole in the Monkey Bar Overhead. Place a 1/2" Washer, 1/2" Lockwasher over the 1/2" x 7" Carriage Bolt end inside the Monkey Bar Overhead. Thread the 1/2" Hex Nut on to the 1/2"x 7" Carriage Bolt. Repeat this process on the other side. Now tighten the 1/2" Hex Nuts, put on the 1/2" Acorn Nut and lightly tighten. Do not over tighten.


MB-15- 1/2" Uss Flatwasher-

5.8 Jaguar Fort-Monkey Bar


7.5 Jaguar Playcenter-Monkey Bar

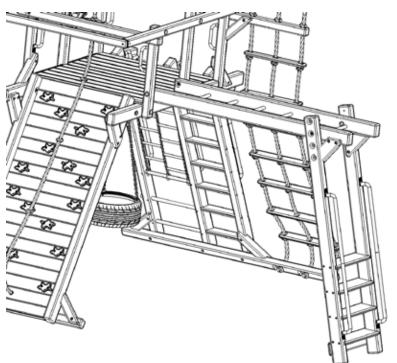

5.8Jaguar Playcenter-Monkey Bar

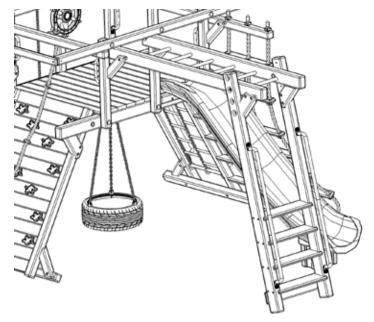


6.4 Jaguar Playcenter-Monkey Bar

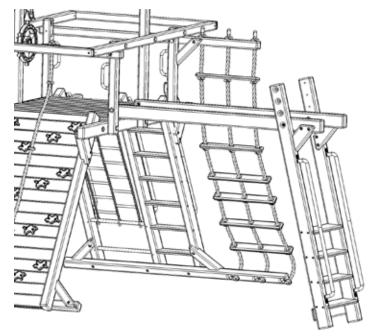

Parrot Island Fort

PARTS NEEDED

PIF- Center Post-UMB (1) 306-D Small 90 Degree Bracket (1) CC-149 Left Gusset (1) CC-148 Right Gusset (1)

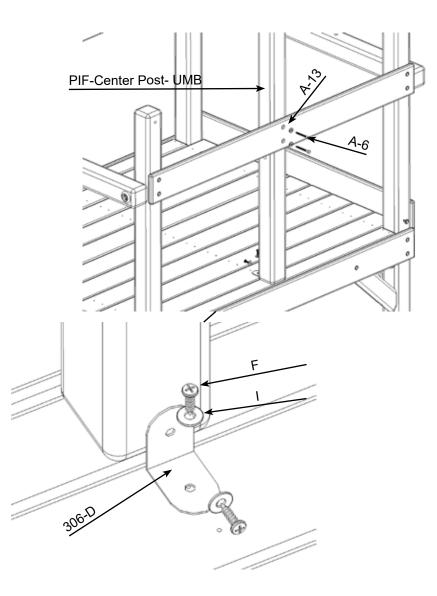

HARDWARE NEEDED

 MB-1 1/2"-13 Acorn Nut Plated
 (2)

 MB-3 1/2"-13 Hex Nut ZP
 (2)

 MB-12 1/2" Split Lockwasher ZP
 (2)

 MB-15 1/2" Uss Flatwasher ZP
 (2)

 MB-6 1/4" x 3" Hex Lag Screw ZP
 (2)

 F- #14 x 1" Pan Phillips T/S
 (2)

 MB-2 1/2"-13 x 7" Cariage Bolt ZP
 (2)

 MB-10 #14 x 2" Pan Phillip T/S ZP
 (4)


 MB-13 1/4" Uss Flatwasher ZP
 (4)

 MB-16 3/4" Uss Flatwasher ZP
 (2)

 MB-13 1/4" Uss Flatwasher ZP
 (2)


 MB-13 1/4" Uss Flatwasher ZP
 (2)

 I- 1/4" Uss Flatwasher
 (2)

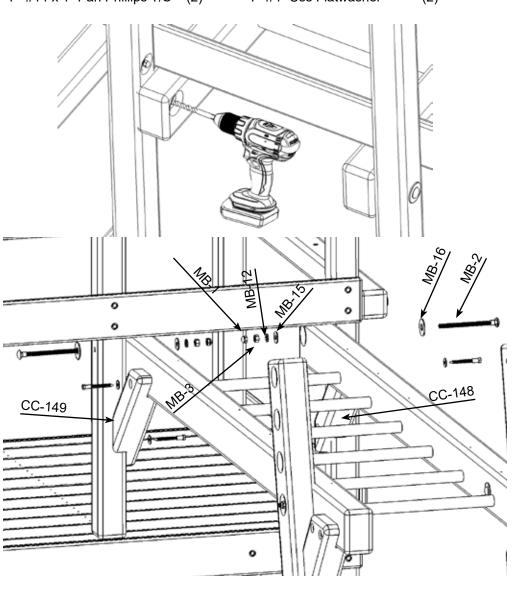

5.0 Parrot Island Fort

5.8 Parrot Island Fort

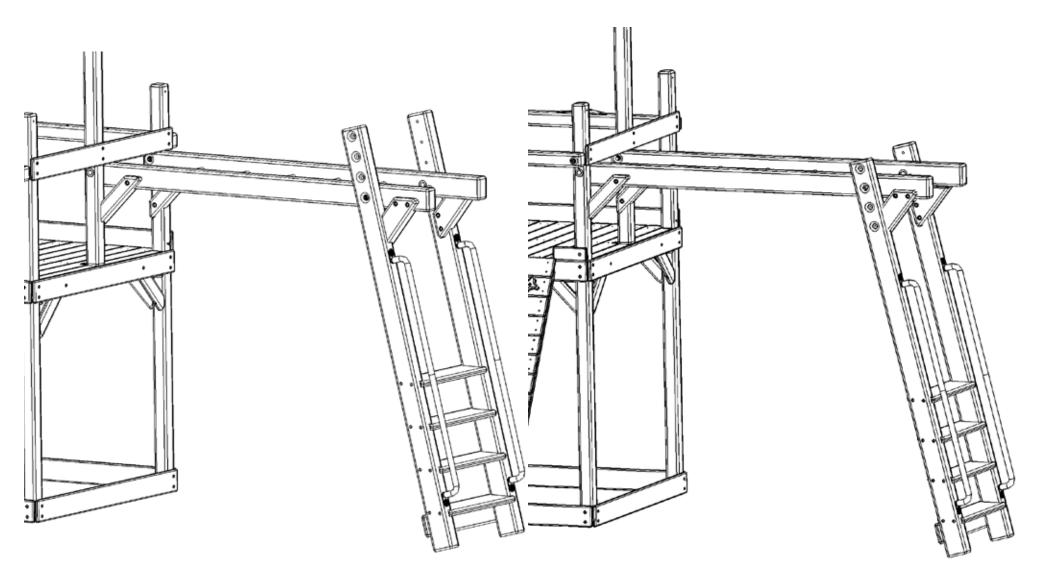

Parrot Island Playcenter Center Post - UMB


PARTS NEEDED

PIPC Center Post - UMB (1) 356-A 90Degree Bracket (1)

HARDWARE NEEDED

 MB-9 3/8" x 5" Hex Lag Screw ZP
 (1)
 MB-14 3/8" Uss Flatwasher ZP
 (1)

 J- #14 x 1" Pan Phillips T/S ZP
 (2)
 Q- 1/4"Uss Flatwasher ZP
 (2)

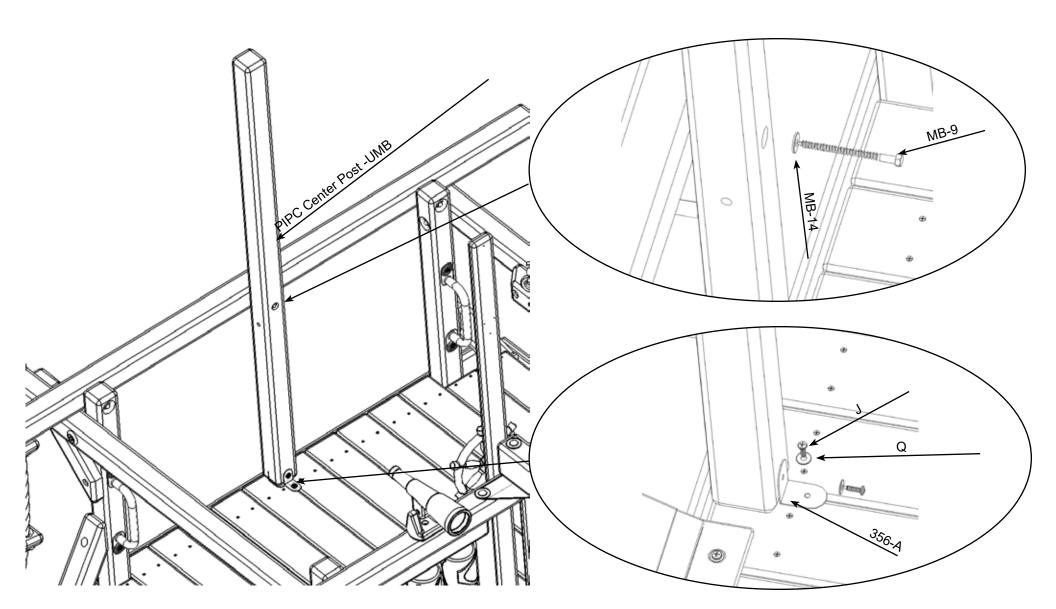

Parrot Island Playcenter - Monkey Bar

MB-1 1/2"-13 Acorn Nut Plated

MB-12 1/2" Split Lockwasher ZP

MB-16 3/4" Uss Flatwasher ZP

MB-14 3/8" Uss Flatwasher ZP

P- 3/8" Split Lockwasher ZP (1)

MB-3 1/2"-13 Hex Nut ZP

A-9 3/8" Bolt Cup

PARTS NEEDED

UMB-Assembly CC-149 Left Gusset (1) CC-148 Right Gusset (1)

HARDWARE NEEDED

(1)

(1)


(1)

(1)

(4)


(1)


- MB-2 1/2"-13 x 7" Cariage Bolt ZP (1)
- MB-4 3/8"-16 x 10 Hex Bolt ZP -6" of Thread (1) (2)
 - MB-15 1/2" Uss Flatwasher ZP (4)
- MB-8 3/8" x 3 1/2" Hex Lag Screw ZP
- A-1 3/8" Acorn Nut Plated (1)
- E- 3/8" Hex Nut ZP (1)
- R 3/8" Uss Flatwasher ZP (1)

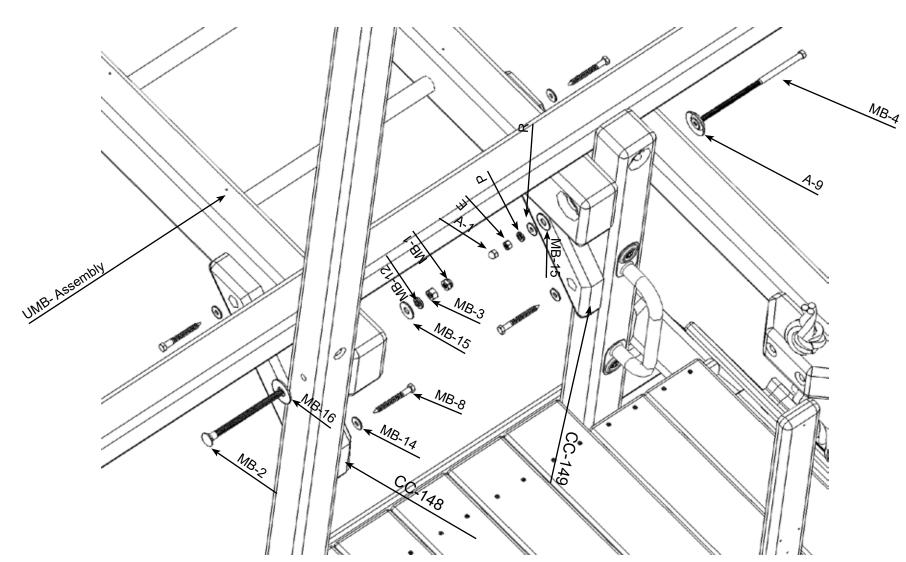


5.0 PI PLaycenter Monkey Bar

5.8 PI Playcenter Monkey Bar

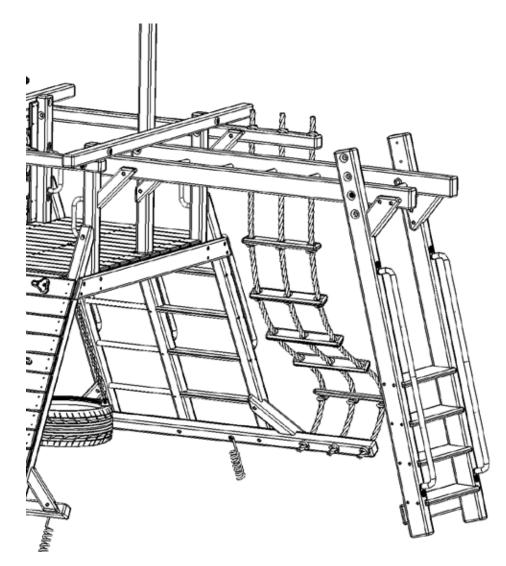

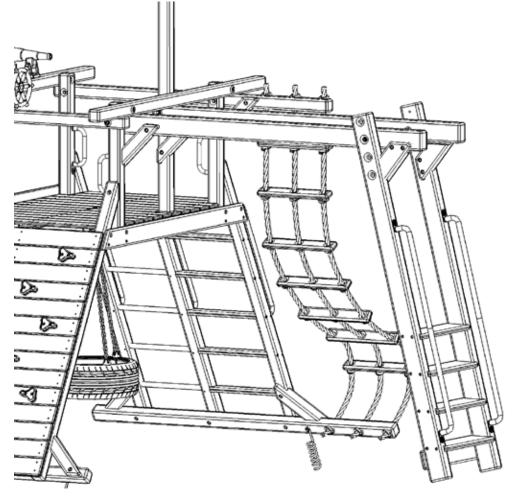

UNIVERSAL LOFT INSTALLATION MANUAL

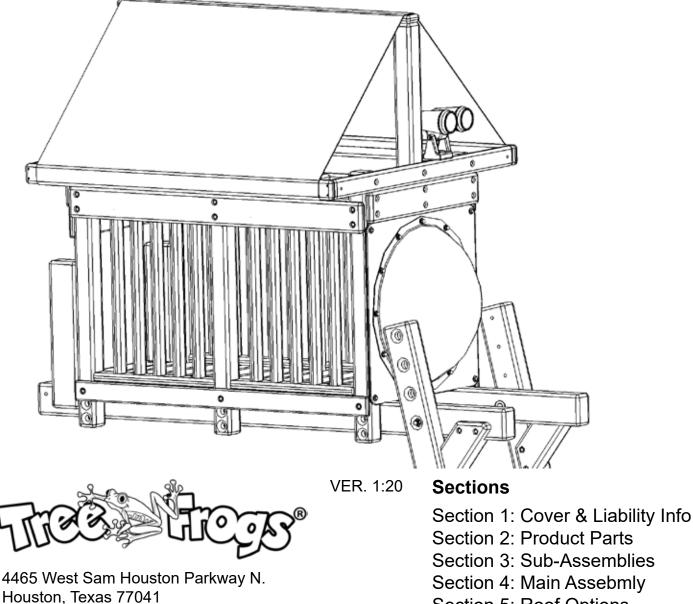

Section 5: Roof Options

© 2019 KID STRUCTURES INC.

WWW.TREEFROGSSHOWROOMS.COM

IMPORTANT - PLEASE READ

As fresh lumber acclimates to its new environment, the natural tendencies of the tree can show itself in the form of checks, or "cracks" in the lumber. In almost all cases this is normal and it will not affect the structural integrity of your play set.

Cosmetic defects that do not affect the structural integrity of the product, or natural defects of wood such as warping, checking or any other physical properties of wood that do not present a safety hazard, are not covered by this warranty.

Defects that develop because the product is exposed to extreme climate conditions are not covered by this warranty. Defects that develop as a result of faulty or improper installation of the product are also not covered by this warranty.

Most cracks are not warrantable, however if you believe that the integrity of your play set is compromised by this natural occurrence, please contact the Tree Frogs Swing Set Dealer that you purchased your swing set from.

We appreciate your purchase and know that you will enjoy your play system for many years to come.

Tools Needed for Assembly				
be Measure	24" Level	Angle Square		
illips Screw Driver	3/8" Cordless Drill or Electric Drill	3/8" Drive Ratchet or Electric Impact Gun		
w Hammeror Rubber Mallet	Pliers or Vise Grips	7/16" Deep Well Socket		
6" Deep Well Socket	3/4" Deep Well Socket	1/8", 1/4", and 9/16" Drill Bits		
llips Head Screw Bits	An Adult with two Adult Helpers			

Pre-Assembly Hints

- Depending on your experience, assembly of our play sets can take as little as 6 hours up to 24 hours, depending on size, after inventory of parts; therefore, we recommend you set aside a full two days for assembly.
- Identify all of the parts for your play set. Empty each box and lay out boards so you can see each part. Your instruction book will have detailed drawings that will make it easy for you to recognize individual parts. Keep all hardware and metal parts separate from wooden pieces.
- After everything is laid out, check carefully to ensure all parts are present. Make sure there are no broken boards.
- Find an area to sort your hardware. It is best to open the hardware on a solid surface so that you do not lose any pieces in the grass.

This will save time and familiarize you with all the different pieces in the hardware bag.

Important note: Wood has some natural defects such as knots, surface cracks, etc... We reject parts that are structurally defective. We use a high quality lumber in our structures; however, you should inspect each part for splinters or rough spots and sand them smooth to prevent injury.

- After familiarizing yourself with all of the components, read all instructions thoroughly. Reading instructions after you have studied the parts will help you understand more clearly the installation process, and help to eliminate unnecessary mistakes.
- Pay close attention to the diameter and length of each bolt and screw.
- Never tighten hardware completely at first. It helps to have some adjustment for bolt alignment while you are attaching parts together. After everything is square, tighten each joint.
- After the main unit is assembled it is critical that the floor is level and square. If the main frame is not level, the walls and floor will be out of square.
- After you complete installation, make sure every bolt, screw, and nut is tight, and every board is secure. Wood will expand and contract with the seasons.
- Place the set on level ground, not less than 6ft from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
- All 1/4" and 3/8" lag bolts must have pre-drilled holes 1-1/2" to 2" deep. Use a 1/8" drill bit for the 1/4" lag bolts and 1/4" drill bit for 3/8" lag bolts. Use pre-drilled holes in facias as a reference for placing lag bolt pilot holes.
- If a board lifts or rises causing a gap between boards when running in lag bolts or screws, back out the screw or lag bolt and press
 or apply pressure (but not enough to crack or break board) while re¬running in the lag bolt or screw in the same hole.
- Do not over tighten bolts, lag bolts or screws. You can damage boards, break hardware, and/or strip out the hardware.
- When using hammer do not beat on the hardware, but gently tap it in. Never beat on the wood as it will leave marks.

Leveling Your Swing Set During Assembly

- Complete the steps which will be the basic frame of the fort {i.e. four corner posts with base (sand box boards) and deck supports}
- Position in the most level area chosen for the play set, keeping in mind the location and size of the swing beam, ladder, slides, etc. that extend off the fort.
- Once the frame is in the final position, check for vertical and horizontal levelness to determine which side(s) will need to be dug into the ground to level the play set.
- With a shovel, score the ground around the outside edges of the sandbox boards on the 'high' side of the fort. This is the area that will be dug in. Make sure to score deep enough; the scored lines will be your digging template.
- Push the frame off and away from the scored area, far enough to dig and remove dirt to reach the appropriate depth.
- Dig a channel along the scored line(s) for the base of the fort (corner post and sandbox boards) to rest into. Dig the channel(s) to the same level depth. The bottom of the channel(s) should be level to each other so your frame doesn't teeter or rock because the channel(s) are uneven.
- Once you have removed enough grass and dirt, slide/push the frame into the channel(s). Place a level on the vertical and horizontal boards of the frame to determine if enough soil, or too much, was removed.
- Repeat this process until the basic frame is plumb and level and in its final position before completing the rest of the assembly.
- Measure to make sure fort is square.
- ** Important: if you require a channel depth of more than 6", then we recommend you have your play set area professionally graded before completing assembly. **

Choosing A Location For Your Playset

When choosing a location for your swing set, always keep your child or children's safety in mind. Here are some recommendations to help you locate and install a safe play area.

- This play set is designed for the use of 4 occupants who have a combined weight not exceeding 800 pounds on the elevated floor; 3 occupants who have a combined weight of 525 pounds on the swing area; for a total Unit capacity of 5 occupants who have a combined weight of 1325. (this weight is not including the picnic table area)
- On-site adult supervision is required.
- The swing set should be located on level ground. The stationary components such as ladders and slides are required to be a minimum of six feet from any structure or obstruction such as a fence, garage, house, tree, overhanging branches, electrical wires, clotheslines, etc. Any swinging equipment is also required to be a minimum distance twice the height of the swing beam away from these obstructions or structures as well. The swing set should be located a safe distance from any water hazards, such as a lake, river, bayou, swimming pool, etc.
- Do not install this residential swing set in a commercial setting. This swing set is not manufactured for commercial usage and will void all warranties. Tree Frogs Wooden Swing Set Factory is not responsible for any damages or injuries resulting from this swing set being used in a commercial setting.
- Never install this swing set indoors; or over concrete, asphalt, packed earth, grass, carpet or any other hard surface. A fall onto a hard surface can result in serious or fatal injury.
- The U.S. Consumer Product Safety Commission (CPSC) recommends that you install and maintain a resilient surface under your swing set. The CPSC's Consumer Information Sheet for Playground Surfacing Materials is on the next page. A resilient surface, should be installed after the swing set has been completely assembled according to these instructions. The swing set must rest on solid ground. Please note that this swing set has a maximum fall height of 7'.

Maintaining Your Swing Set

Here are some maintenance tips required to insure safe play on your swing set for years of fun.

• At the beginning of each usage season and every two weeks during, check: nuts and bolts and tighten as needed, swing seats, chains, ladders, slides, rope and wood components for sign of deterioration and replace if necessary.

• On a yearly basis, we recommend that you coat your swing set with a sealant or preservative. You may also wantto spot sand any areas prior to sealing.

** Special note: Although we recommend that you reseal your swing set annually, you may have to touch up the high traffic areas and/or areas that have a high exposure to direct sunlight.**

• Be sure that the sealant you select is non-toxic and child safe. Your local Tree Frogs Wooden Swing Set Factory dealer may offer a complete power wash and reseal and maintenance program.

• Do not use line trimmers or "weed eaters" around your swing set. The line will remove both paint and wood from uprights and base pieces. Any damage resulting from this type of abuse is not covered under our limited warranty.

• Remove plastic swing seats and take in doors or do not use when temperature drops below 0°F.

Please keep this install manual for future reference.

To insure SAFE PLAY adults must teach children:

- Not to walk close to, in front of, behind, or between moving items.
- Not to swing empty swing seats.
- Not to swing sideways into the path of adjacent swings.
- Not to use the swing set in a manner other than that for which it is intended.
- Not to get off the equipment while it is in motion.
- Not to jump off the tower.
- Not to stand in the swing seats.
- Not to swing so high that chains become slack, or above the height of the swing support.
- Not to jump on a slide.
- Not to climb on top of the swing support.
- Not to attach to the swing set any item that is not specifically designed for use with the equipment, such as (but not limited to) jump ropes, clotheslines, pet leashes, cables, and chains. These may become strangulation hazards.
- To hold on to swings and climbers with both hands.
- To slide feet first, never head first.
- To watch for other children while swinging or playing near the swing set.

To also insure SAFE PLAY adults must:

- Limit climbing and swinging heights to each child's ability.
- Verify that suspended climbing ropes are secured at both ends.
- Verify that suspended climbing ropes cannot be looped back on themselves.
- Dress children appropriately for play. Use well-fitted shoes that do not have slippery soles.
- Avoid ponchos, scarves, hoods, loose fitting clothing, neckties, and any clothing with a drawstring. Serious injury could result should any part of the children's clothing become entangled in the swing set.
- Do not allow children to play wearing helmets.
- Remember that children are inventive. When they develop games that are unsafe, be alert and change the rules.

Weight limits for Treefrogs Swingsets

Fort Platform: 800 Lbs.Total Weight.	<u>Swing Belts</u> : 175 Lbs.
<u>Trapeze</u> : 125 Lbs.	Full Bucket Swing: 50 Lbs.
Toddler Bucket Swing: 50 Lbs.	<u>Tire Swing</u> : 125 Lbs. Total Weight
<u>Rope Ladder</u> : 75 Lbs.	<u>Rock Wall</u> : 150 Lbs.

<u>All Slides</u>: 125 Lbs.

Tree Frogs recommends that the weight limits for all components must not be exceeded. Failure to adhere to these and other safety guidelines could result in damage to the swing set. and/or injury to the users.

CONSUMER INFORMATION SHEET FOR PLAYGROUND SURFACING MATERIALS

The U.S. Consumer Product Safety Commission (CPSC) estimates that about 100,000 playground equipment related injuries resulting from falls to the ground surface are treated annually in U.S. hospital emergency rooms. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries, and have the potential to be fatal, particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury-causing potential of a fall. It is self-evident that a fall onto a shock-absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. However, it should be recognized that some injuries from falls will occur no matter what playground surfacing material is used.

Playground equipment should never be placed on hard surfaces such as concrete or asphalt. Grass may appear to be acceptable, but can turn to hard packed earth in areas of high traffic. Shredded bark mulch, wood chips, or fine gravel are considered to be acceptable shock absorbing surfaces when installed and maintained at a sufficient depth under and around play equipment.

MATERIAL	UNCOM	IPRESSE	D DEPTH	COMPRESSED DEPTH
	6 Inch	9 Inch	12 Inch	9 inch
Wood Chips	7	10	11	10
Double Shredded Bark Mulch	6	10	11	7
Engineered Wood Fibers	6	7	>12	6
Fine Sand	5	5	9	5
Coarse Sand	5	5	6	4
Fine Gravel	6	7	10	6
Medium Gravel	5	5	6	5
Shredded Tires**	10-12	N/A	N/A	N/A

TABLE 1 -CRITICAL HEIGHTS (in feet) OF TESTED MATERIAL

** This is data from tests conducted by independent testing laboratories on a 6 inch depth of uncompressed shredded tire samples produced by four manufacturers. The test reported critical heights, which varied from 10 feet to greater than 12 feet. It is recommended that persons seeking to install shredded tires as a protective surface request test data from the supplier showing the critical height of the material when it was tested in accordance with ASTM F1292.

Table 1 should be read as follows: If, for example, uncompressed wood chips are used at a minimum of 6 inches, the Critical Height is 7 feet. If 9 inches of uncompressed wood chips are used, the Critical Height is 10 feet. It should be noted that, for some materials, the Critical Height decreases when the material is compressed. It is recommended that a shock absorbing material should extend a minimum of 6 feet in all directions from the perimeter of stationary equipment such as climbers and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of 2 times the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.

This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for your equipment. The choice of a material depends on the type and height of the playground equipment, the availability in your area, and its cost.

This information has been extracted from the CPSC publications "Playground Surfacing-Technical Information Guide" and "Handbook for Public Playground Safety." Copies of these reports can be obtained by sending a postcard to:

Office of Public Affairs U.S. Consumer Product Safety Commission Washington, D.C. 20207 Toll-free Hotline: 1-800-638-2772 or at http://www.cpsc.gov

2018 TREE FROGS Limited Lifetime Warranty Limited 10-Year Warranty, Limited 5-Year Warranty

Tree Frogs Warranties all Jaguar Playcenter Series, Bengal Forts Series, MegaDeck Fort Series Redwood components and Cedar components against structural failure due to warping, wood rot, insect infestation (excluding Carpenter Bees) or decay for the period of 10 Years from the date of original purchase. This warranty does not cover cracks, fissions, checks, fading, knots and weathering that are normal natural characteristics of wood, that do not affect the structural integrity of the product. The Redwood and Cedar components warranty is extended to a Limited Lifetime Warranty to the original owner upon registering this warranty within 90 days of purchase at www.treefrogsswingsets.com.

Tree Frogs Warranties all Parrot Island Fort Series, Parrot Island Playcenter Series, Rainforest Cottage Series Cedar components against structural failure due to warping, wood rot, insect infestation (excluding Carpenter Bees) or decay for a period of 10 Years from the date of original purchase. This warranty does not cover cracks, fissions, checks, fading, knots and weathering that are normal natural characteristics of wood, that do not affect the structural integrity of the product.

Tree Frogs Warranties all Toucan Fort Series, Toucan Playcenter Series, Orangutan Fort Series, Stand Alone Swings Cedar components against structural failure due to warping, wood rot, insect infestation (excluding Carpenter Bees) or decay for a period of 5 Years from the date of original purchase. This warranty does not cover cracks, fissions, checks, fading, knots and weathering that are normal natural characteristics of wood, that do not affect the structural integrity of the product.

In addition, a 10-Year Limited Warranty applies to all roto-molded slides, ductile iron swing hangers, tire swivels, metal climbing rungs and swing beam brackets against failure due to rust or failure in defect in material. Surface rust, fading, weathering, cracks/chips in coatings and corrosion that do not affect structural integrity are not covered by this warranty. Furthermore, a 5-Year Limited Warranty applies to all components & accessories including all swings, chain ladders, gliders, handles, brackets, bubble panels, tarps, steering/ships wheels, telescopes, binoculars, buoy ball, blow molded slides and disc seat that are not covered under the 10-Year Warranty to be free from defects in material and workmanship. Surface rust, fading, weathering, cracks/chips in coatings and corrosion that do not affect structural integrity are not covered by this warranty.

And for a period of 1-Year Tree Frogs warranties all ropes, structural foam molded slides to be free of defects in material and workmanship. Fading is not considered a defect and may occur with seasonal and geographical conditions.

**10-Year Warranty Exclusion: Toucan Fort Series, Toucan Playcenter Series, Orangutan Series, Stand Alone Swings (Limite 5Yr/5Yr/1Yr WARRANTY).

This warranty is limited to a repair or replacement of the defective part. Product covered under this warranty will be shipped at the customer's expense. Tree Frogs is not responsible for any expense associated with freight, or delivery and installation of the warranted part(s). Tree Frogs reserves the right to inspect all warranty claim parts for which a claim has been made.

This limited warranty applies only to the original retail purchaser and for residential use only, non-residential use voids warranty. These warranties void when product is transferred or sold or no longer in possession by original owner. A copy of the original invoice must be presented to initiate warranty claim. This limited warranty does not cover damage from abuse, acts of God, vandalism, maintenance guideline neglect, alterations, normal wear & tear, use other than residential, unauthorized modification, damage due to moving of product or improper installation and or use. Any modification could damage the structural integrity of the play system and voids all warranties.

This warranty is exclusive and expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use. Tree Frogs does not assume, or authorize any person to assume for us, any other liability in connection with the sale of our products.

This warranty gives you specific legal rights, and you also may have other rights that vary from state to state. Register your play system's warranty at www.treefrogsswingsets.com.

Tree Frogs reserves the right at any time to change product specifications or substitute similar components.

See your instruction manual for guidelines on regular maintenance. http://treefrogsshowrooms.com/installation-manuals/ . Your child's play system & perimeter play zone should be inspected regularly for any wear & safety hazards.

KSI-045 Universal Loft Lumber	Description	QTY.
	(CC-021) 045-1 28" Spiral Slide Filler	2
	045-2 60 1/8" 3- Hole Facia	2
	(CC-062) 045-3 32" Entrapment Facia	1
	(CC-088) 045-4 27 1/2" Rail Spindle	20
	(CC-099) 045-5 25" Universal Rail Top	4
	(CC-101) 045-6 25" Universal Filler	4
	(CC-102) 045-7 25" Deck Runner	4

KSI-045 Universal Loft Lumber	Description	QTY.
	(CC-100) 045-8 25" Rail Bottom	4
	(CC-109) 045-9 32" Deck Board	2
	(CC-112) 045-10 53" Top Joist	2
	045-11 60 1/8" Tarp Center	1
	045-12 62 7/8" Tarp Side Facia	2
	(CC-138) 045-13 25" Entrapment Board	1
	(CC-139) 045-14 32" Deck Board	8


KSI-045 Universal Loft Lumber	Description	QTY.
	(CC-140) 045-15 32" 6-Hole Facia	2
	045-16 60 1/8" 6-Hole Facia	2
	(CC-141) 045-17 25" Entrapment Board	1
	(CC-181) 045-18 32 5/16" Tarp Upright	2
	(CC-180) 045-19 41" Center Upright	2
	(CC-179) 045-20 46" Corner Post	4
	(CC-194) 045-21 25" Entrapment Block	2

KSI-044 Universal Loft Wood Roof Lumber	Description	QTY.
	(CC-197) 044-1 6 5/16" Short Fan Board	4
	(CC-006) 044-2 8 7/16" Center Fan Board	2
	(CC-022) 044-3 28 3/4" Bottom Fan Board	2
	044-4 37" Center Support	2
	(CC-055) 044-5 11 1/16" Peak Support	2
	(CC-056) 044-6 11 7/16" Fan Cap	2
	(CC-110) 044-7 39 3/8" Wood Roof Support	4

KSI-044 Universal Loft Wood Roof Lumber	Description	QTY.
	044-8 62 7/8" Wood Roof Board	18

KSI-045 Universal Loft Hardware


INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

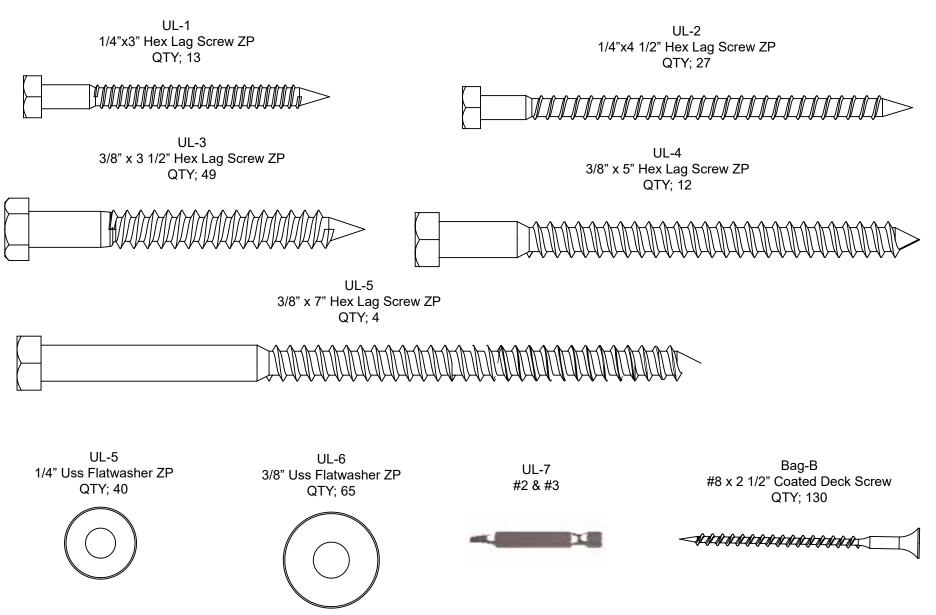

MEASUREMENT TAKEN FROM BOTTOM OF BOLT HEAD TO THE BOTTOM OF BOLT

KSI-044 Universal Loft Wood Roof Hardware

INSTALLER NOTE: (YOU MUST ASSEMBLE THIS PRODUCT IN ACCORDANCE WITH THESE ASSEMBLY INSTRUCTIONS. WHEN COMPLETE GIVE MANUAL TO OWNER.)

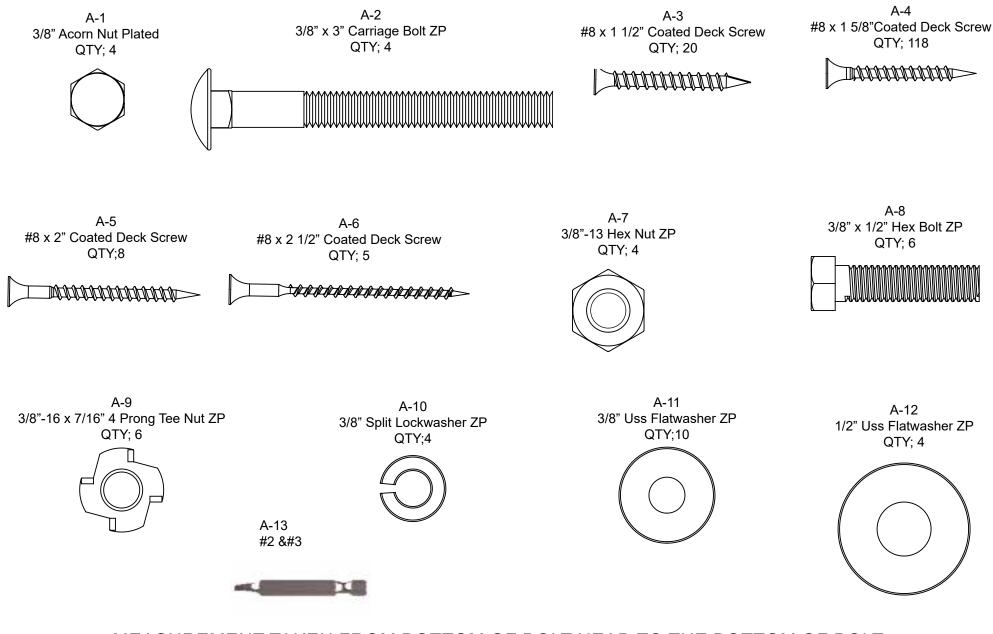

MEASUREMENT TAKEN FROM BOTTOM OF BOLT HEAD TO THE BOTTOM OF BOLT

Universal Loft - 045	Description	QTY.
	045-A Bubble Panel	1
	045-B Binoculars	1

Universal Loft- Sub Assemblies

PARTS NEEDED

Make 2 of these Assemblies

CG-10

CC-088 Rail Spindle (20)

- CC-100 Rail Bottom (4)
- CC-109 Deck Board (2)


CC-099Universal Rail Top(4)CC-102Deck Runner(4)CC-139Deck Board(8)

CC-139

CC-109

HARDWARE NEEDED

B- #8 x 2 1/2" Coated Deck Screw (120)

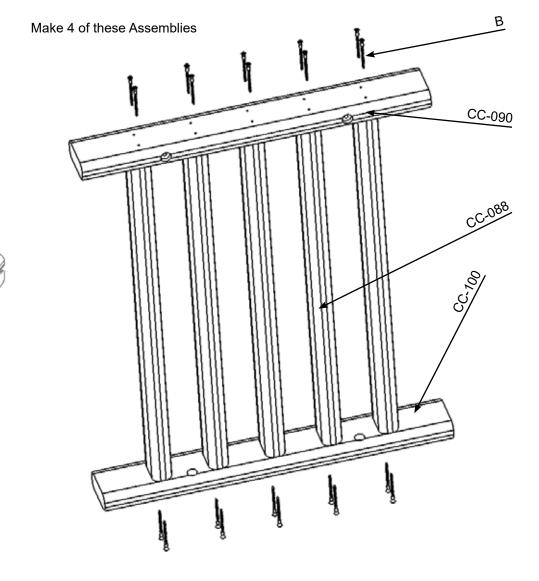

Universal Loft -Sub Assemblies


PARTS NEEDED


- CC-062 Entrapment Board (1) CC-140 6-Hole Facia (2)
- CC-194 Entrapment Block (2)
- CC-112 Top Joist (2) CC-179 Corner Post (4) 045-A Bubble Panel (1)

HARDWARE NEEDED

(24)

- UL-3 3/8" x 3 1/2" Hex Lag Screw ZP (20) UL-6 3/8" Uss Flatwasher ZP
- UL-5 3/8" x 7" Hex Lag Screw ZP (4)

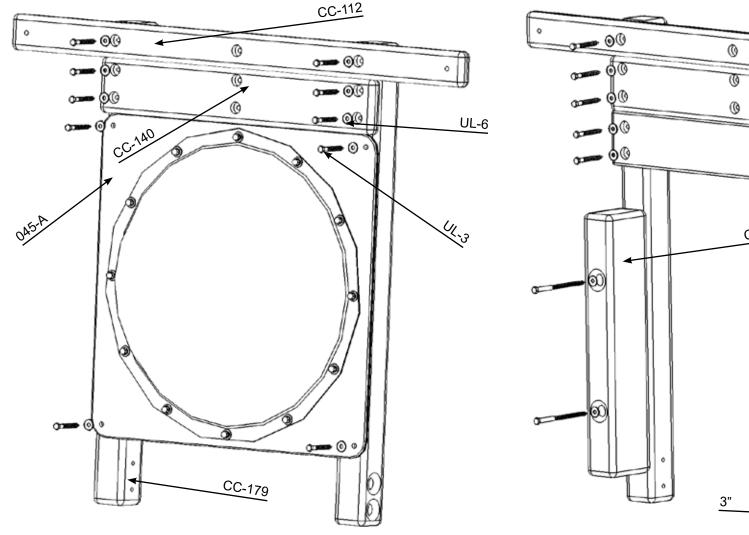

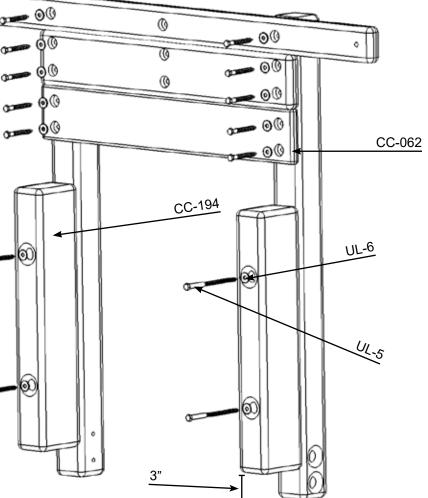


Universal Loft-Assembly

PARTS NEEDED

HARDWARE NEEDED

UL-2 1/4"x 4 1/2" Hex Lag Screw ZP (6) UL-5 1/4" Uss Flatwasher ZP (6)

Deck Assembly (2) CC-101 Universal Filler (3)

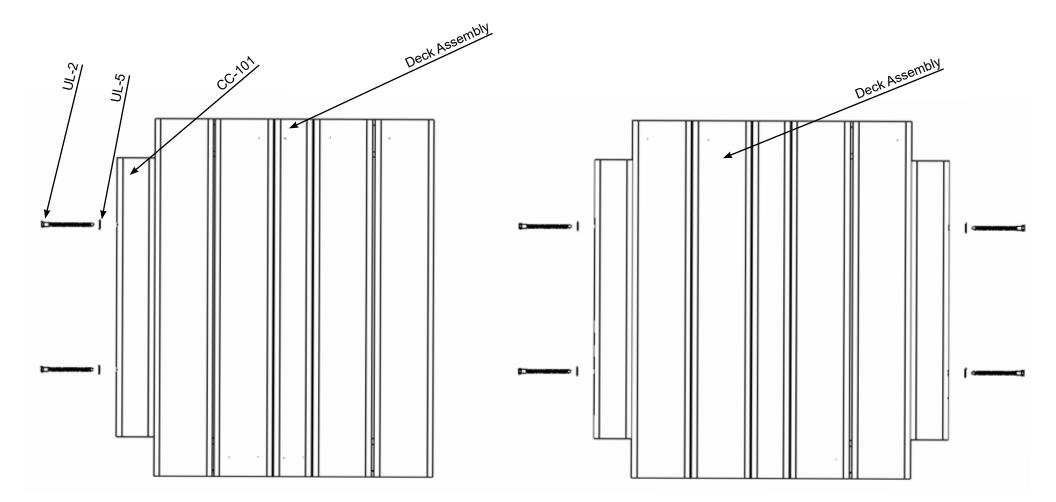

Playcenter 6.5 & 7.5 Loft 5' & 5.8 Loft

PARTS NEEDED

HARDWARE NEEDED


(2)

CC-101 Universal Filler (1) CC-141 Entrapment Board (1) CC-138 Entrapment Board (1)


UL-2 1/4"x4 1/2" Hex Lag Screw ZP (2) UL-5 1/4" Uss Flatwasher ZP

UL-3 3/8" x 3 1/2" Hex Lag Screw ZP (8) UL-6 3/8" Uss Flatwasher ZP

(8)

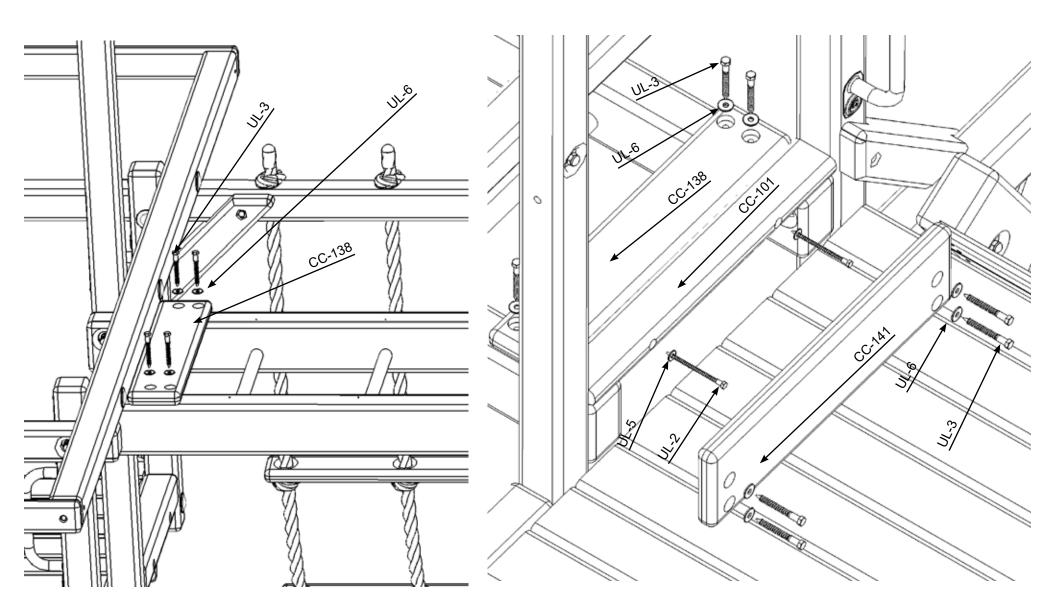

6.4 & 7.5 Playcenter Loft

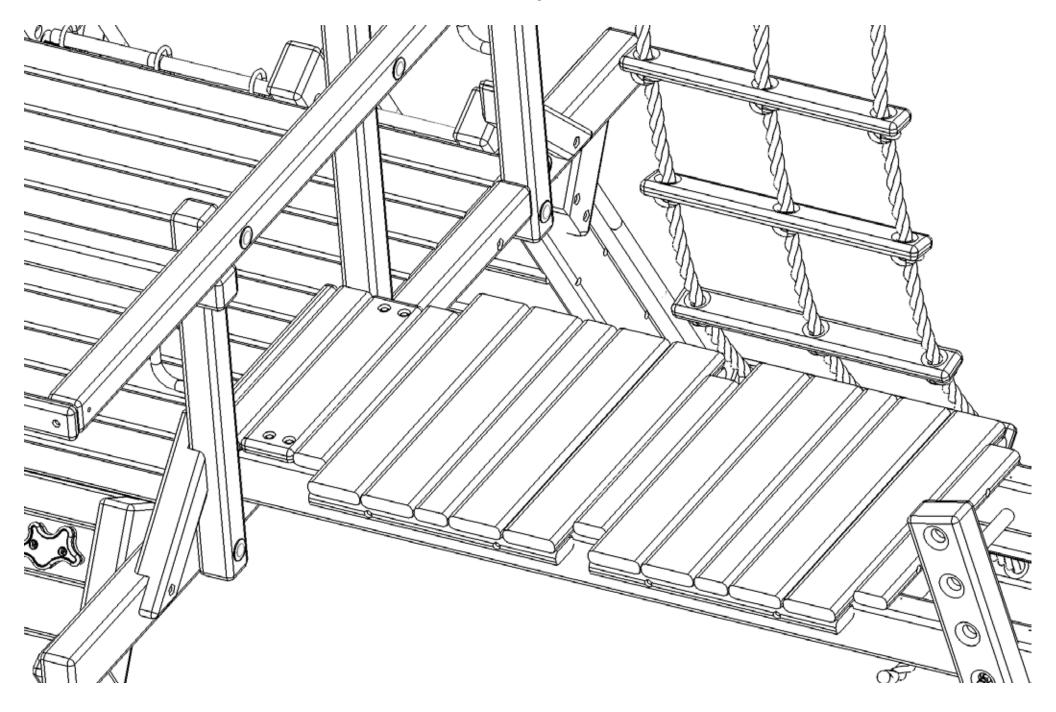

Fort -Loft Assembly


PARTS NEEDED

HARDWARE NEEDED

CC-101 Universal Filler (1) CC-141 Entrapment Board (1) CC-138 Entrapment Board (1) UL-2 1/4"x4 1/2" Hex Lag Screw ZP (2)

UL-2 1/4"x4 1/2" Hex Lag Sci UL-5 1/4" Uss Flatwasher ZP (2) UL-3 3/8" x 3 1/2" Hex Lag Screw ZP (8)
(2) UL-6 3/8" Uss Flatwasher ZP (8)

6.5 & 7.4 Bengal Fort

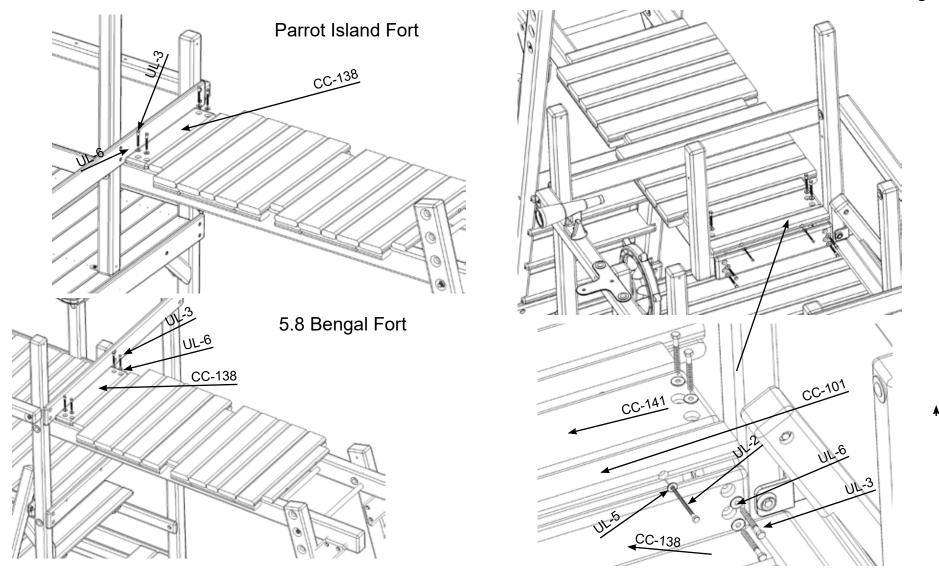


Universal Loft Assembly

PARTS NEEDED

HARDWARE NEEDED

Walls Assembly CC-180 Center Upright (2) UL-2 1/4"x4 1/2" Hex Lag Screw ZP (8) UL-4 3/8" x 5" Hex Lag Screw ZP (12) UL-6 3/8" UL-5 1/4" Uss Flatwasher ZP (8) UL-6 3/8" Uss Flatwasher ZP (12)

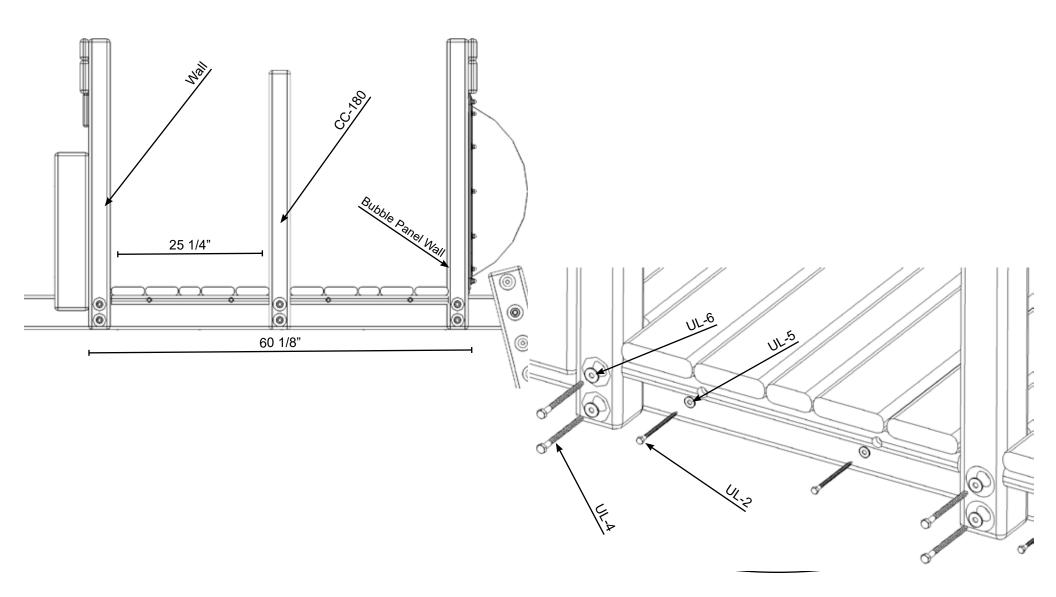


Universal Loft Assembly

HARDWARE NEEDED

PARTS NEEDED

UL-3 3/8" x 3 1/2" Hex Lag Screw ZP (18) UL-6 3/8" Uss Flatwasher ZP (18)

045-2 3-Hole Facia (2) 045-16 6-Hole Facia (2)

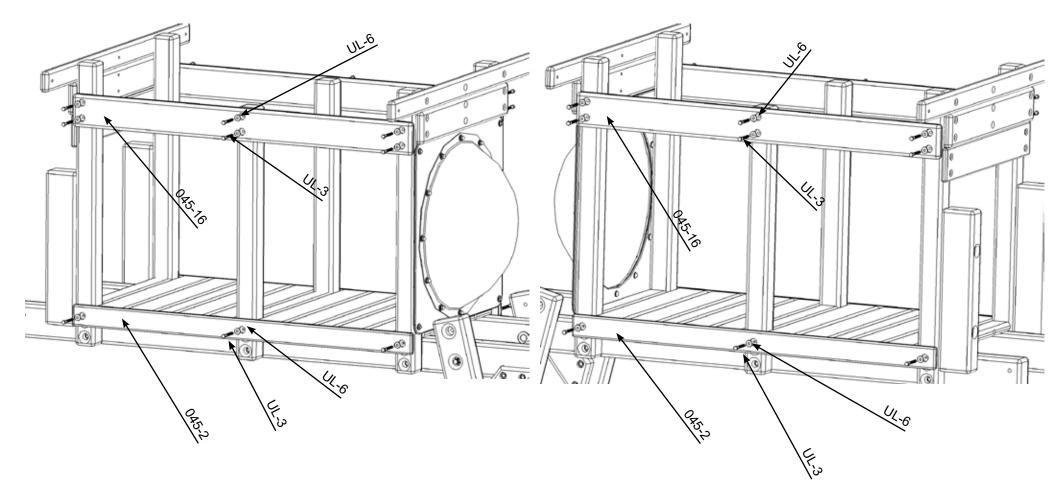


Universal Loft Assembly

PARTS NEEDED

HARDWARE NEEDED

Rails Assembly


UL-2 1/4"x4 1/2" Hex Lag Screw ZP (8) UL-5 1/4" Uss Flatwasher ZP (16) UL-1 1/4"x3" Hex Lag Screw ZP (8)

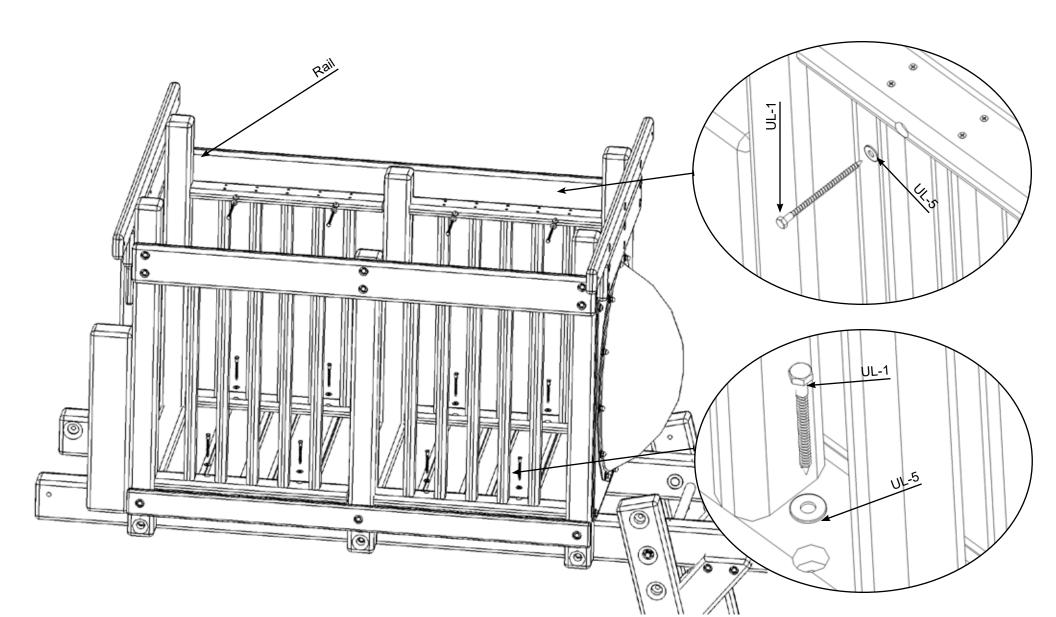

Universal Loft - Tarp Option

PARTS NEEDED

HARDWARE NEEDED

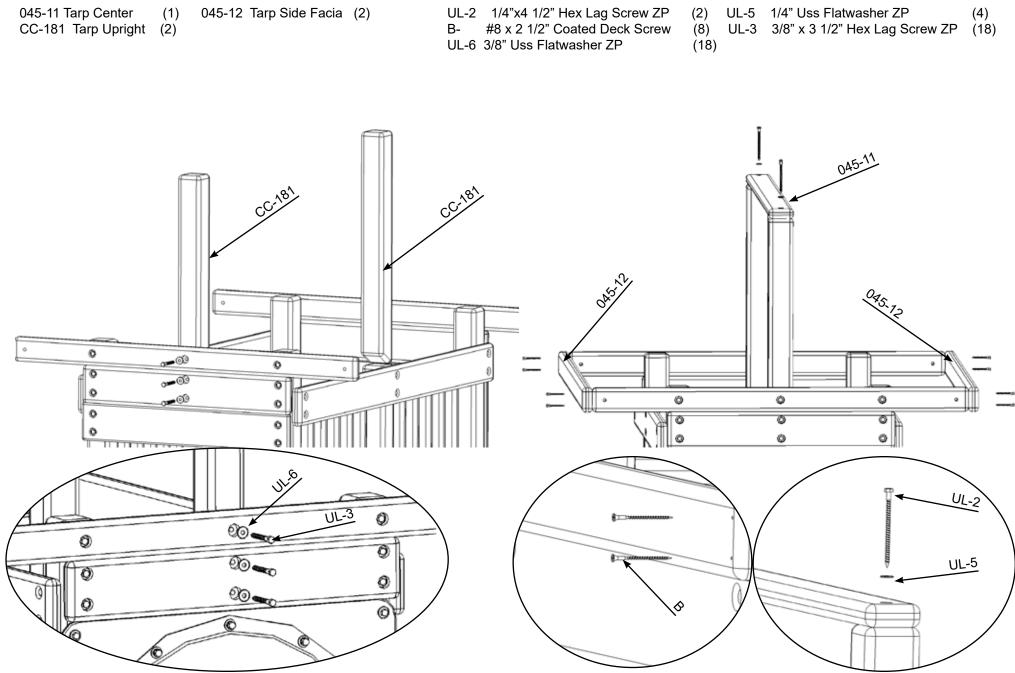


Universal Loft -Tarp Option

HARDWARE NEEDED

PARTS NEEDED

Tarp W /Hdwr Bag


Phillips Screw Snaps (8)

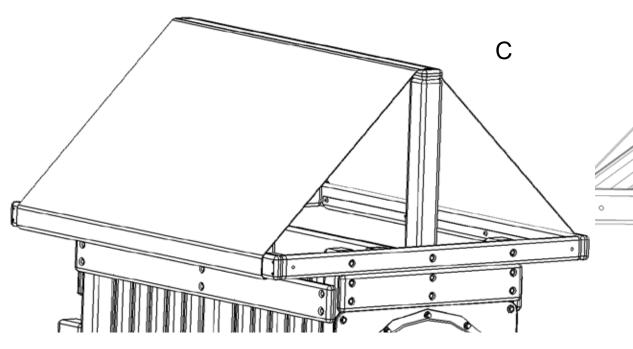

(Figure A.)- Take one corner of the VINYL TARP and place it flush in the corner. Tap the snap with a blunt object, leaving an indention of the snap in the wood. Repeat this process until all the snaps have been indented in the wood on both sides of the Playcenter.

(Figure B.)- Using the indentions you just made with the snaps, take the 5/8" PHILLIPS SCREW SNAPS and drill one into each indention.

(Figure C.)- Take the corner of the VINYL TARP and start placing the snaps on the PHILLIPS SCREW SNAPS. Fold the VINYL TARP over the top of the UNIVERSAL TARP BOARD. Pull tight and place the snaps on the PHILLIPS SCREW SNAPS.

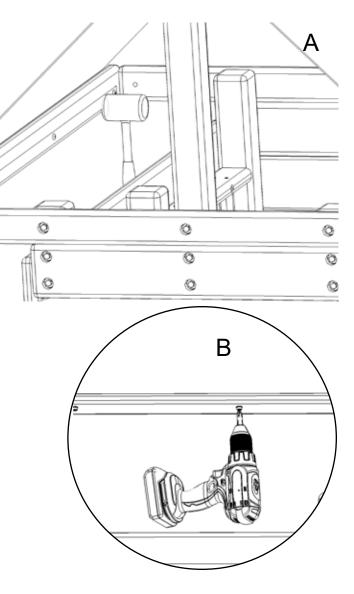

Universal Loft -Wood Roof Option

A-1 3/8" Acorn Nut Plated

A-7 3/8"-13 Hex Nut ZP

A-5 #8 x 2" Coated Deck Screw

A-11 3/8" Uss Flatwasher Zp

A-9 3/8"-16 x7/16" 4 Prong Tee Nut ZP

PARTS NEEDED

CC-055 Peak Support	(2)
CC-110 Wood Roof Support	(4)


HARDWARE NEEDED

(4)

- A-2 3/8"x 3" Carriage Bolt
- (8) A-6 #8 x 2 1/2" Coated Deck Screw (4)
- A-8 3/8" x 1 1/2" Hex Bolt ZP (4) (6) (6)

(4)

- A-10 3/8" Split Lockwasher ZP (4)
- (10) A-12 1/2" Uss Flatwasher ZP (4)

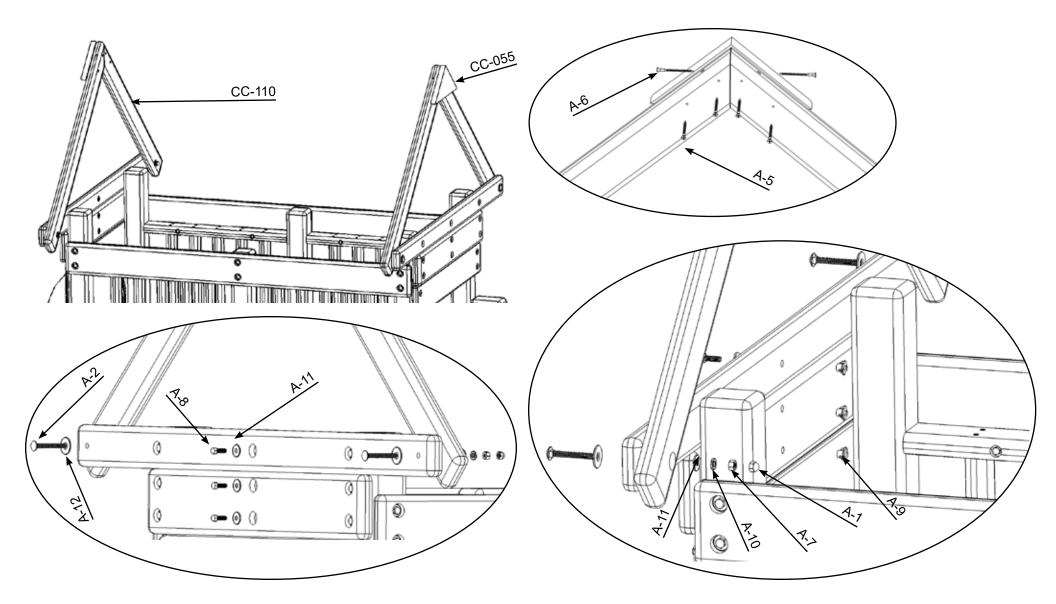

Universal Loft -Wood Roof Option


(2)

PARTS NEEDED

CC-006 Center Fan Board (2) CC-197 Short Fan Board (4) CC-022 Bottom Fan Board CC-056 Fan Cap (2)

HARDWARE NEEDED

A-4 #8 x 1 5/8" Coated Deck Screw (44)

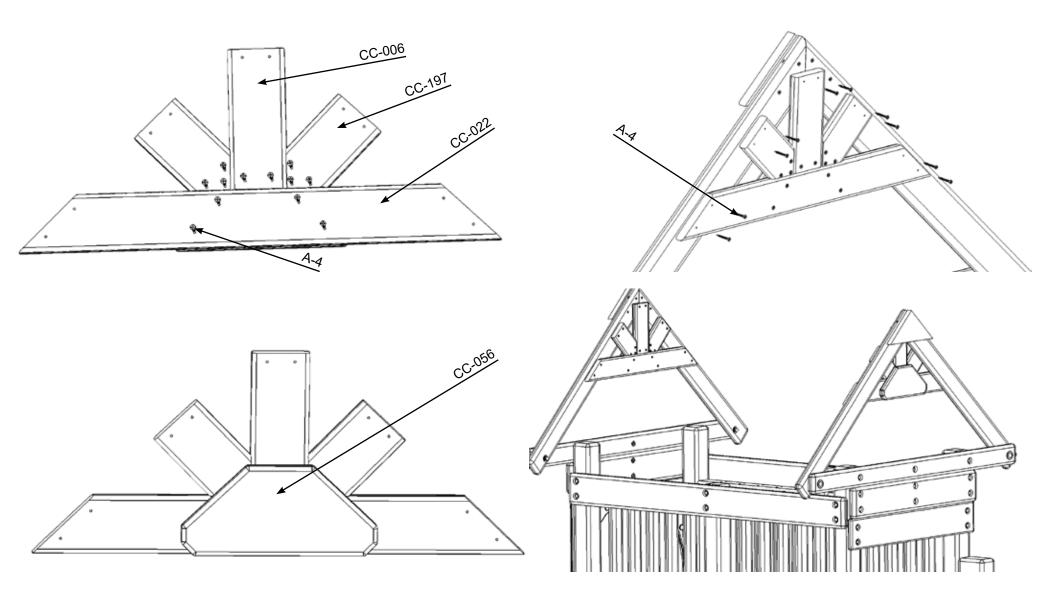

Universal Loft -Wood Roof Option


PARTS NEEDED

HARDWARE NEEDED

A-4 #8 x 1 5/8" Coated Deck Screw (72)


044-4Center Support(2)044-8Wood Roof Board(18)

A-3 #8 x 1 1/2" Coated Deck Screw (18)

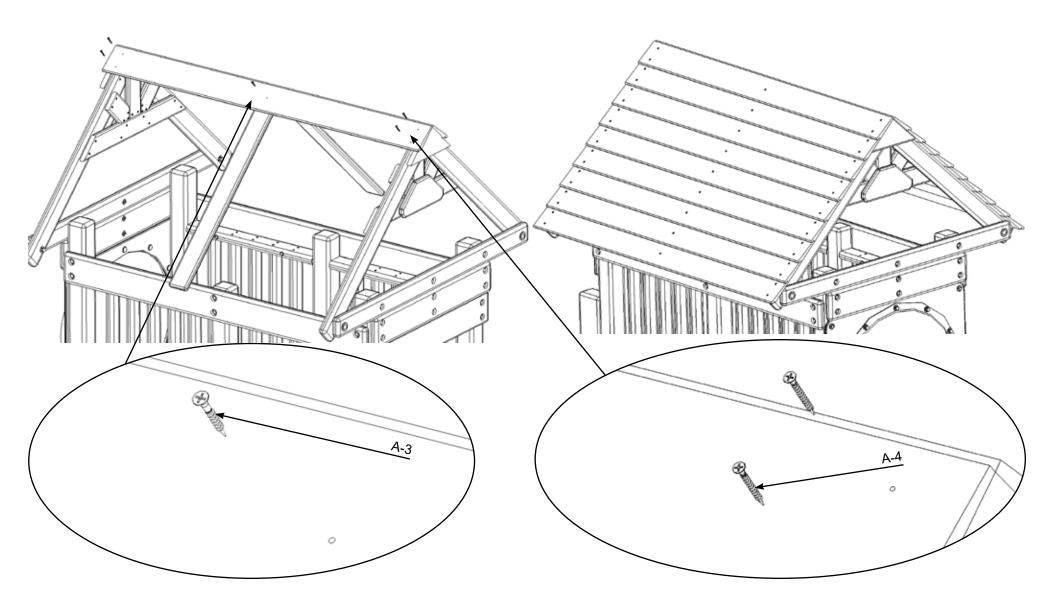


Accesories


Binocular (1)

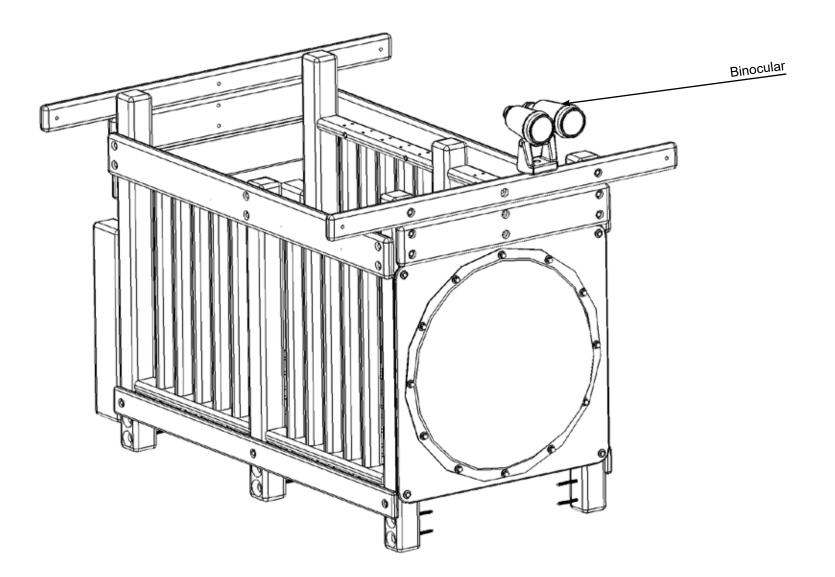


Loft Tarp

Loft Wood Roof

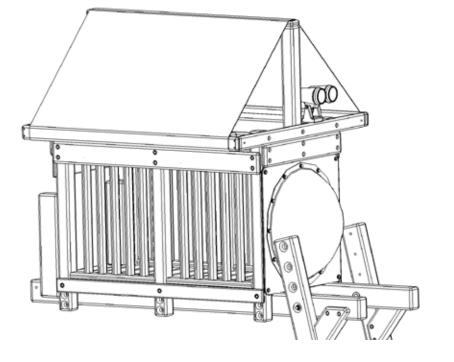

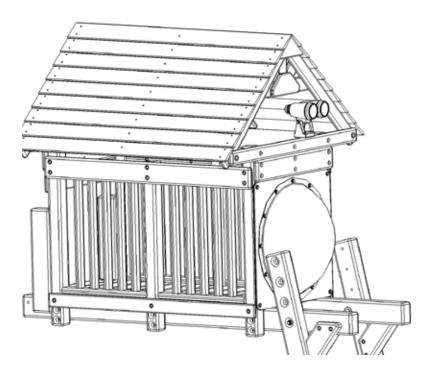

Super 360 Spirell Slide Instellettion Memorell

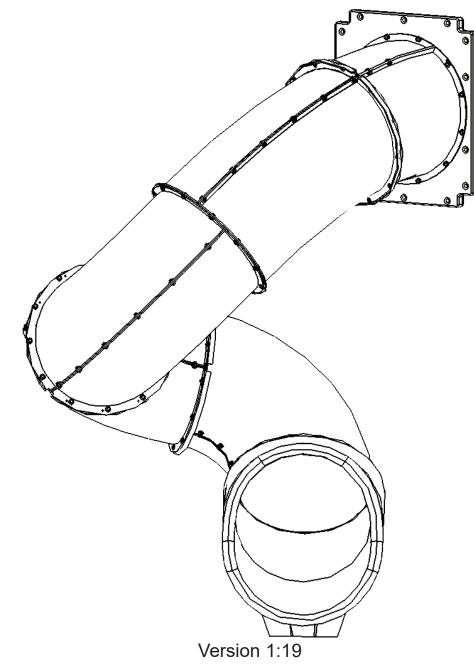



4465 West Sam Houston Parkway N. Houston, Texas 77041 WWW.TREEFROGSSHOWROOMS.COM

© 2019 KID STRUCTURES INC.


Sections


Page 1: Part List

Page 2: 5.8' Deck Height Assembly


Page 3: 5' & 7' Deck Height Assembly

Page 4: 6.5' Deck Height Assembly

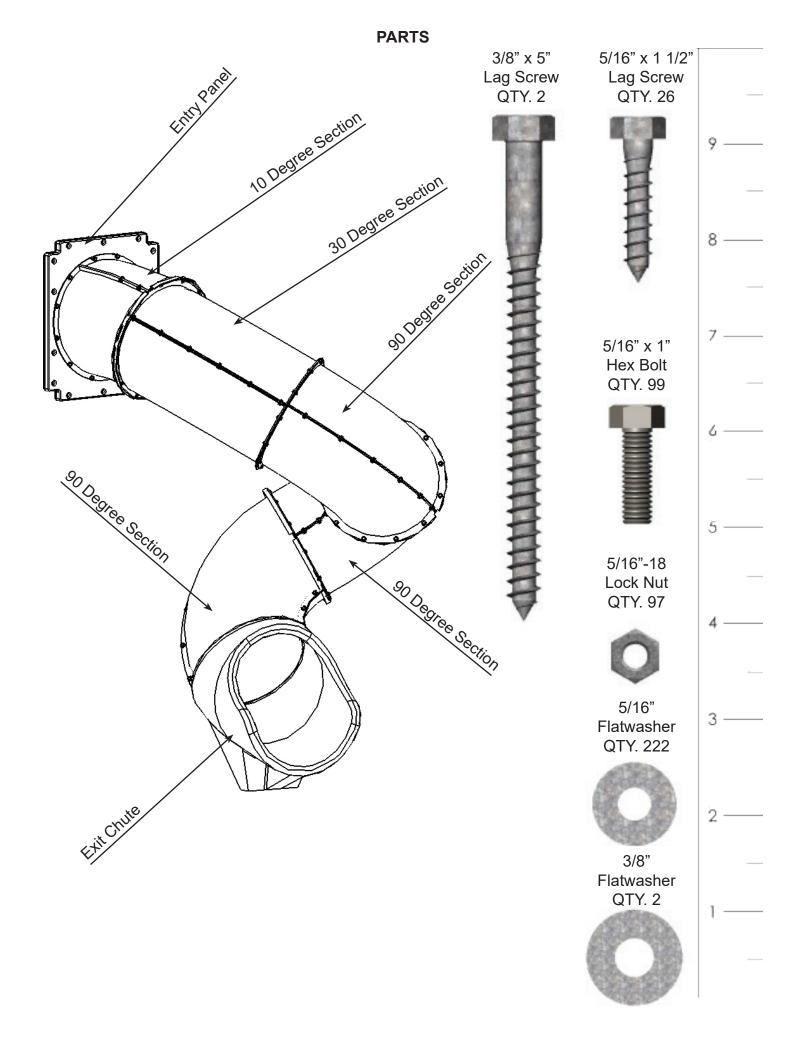

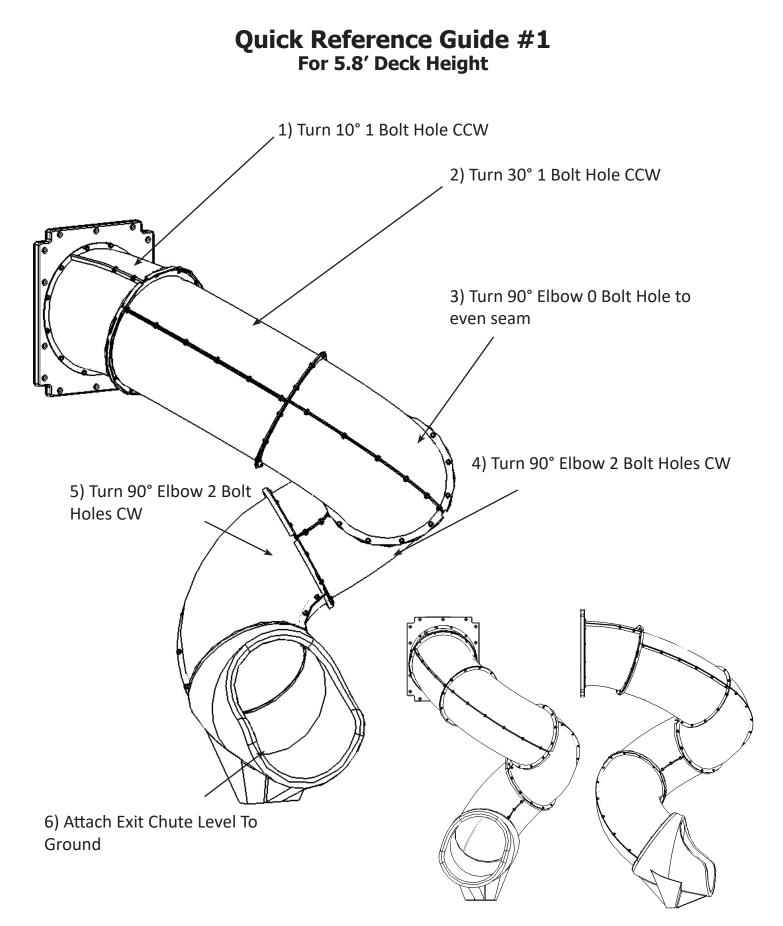


NOTE: To spiral in the opposite direction, apply CW turns instead of CCW and vice versa. Turns may need to be adjusted depending on the level of the land.

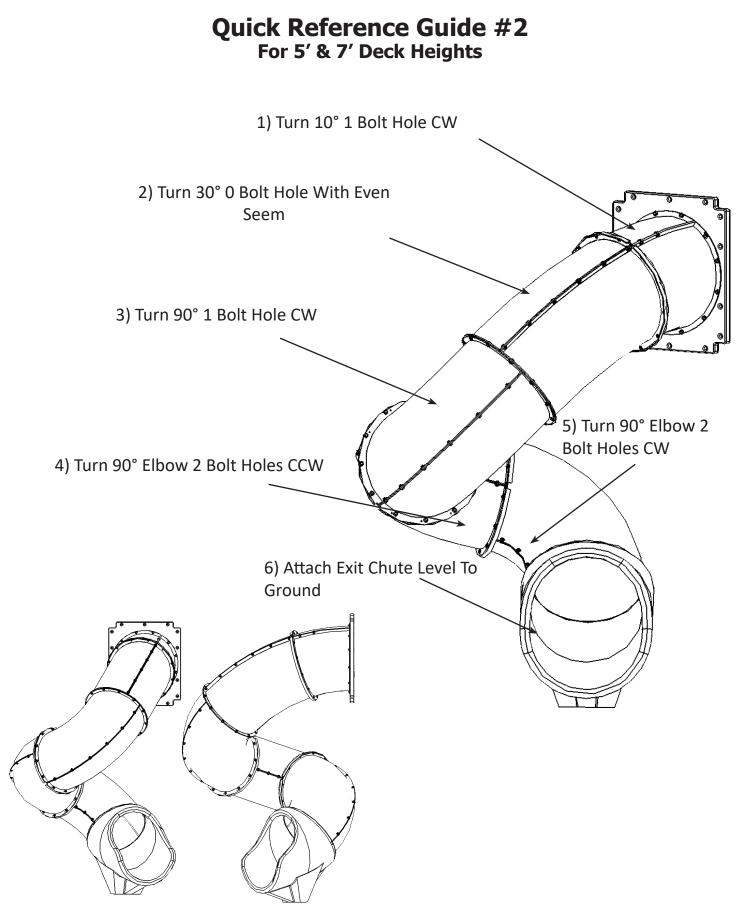

NOTE: To spiral in the opposite direction, apply CW turns instead of CCW and vice versa. Turns may need to be adjusted depending on the level of the land.


Quick Reference Guide #3 For 6.5' Deck Height

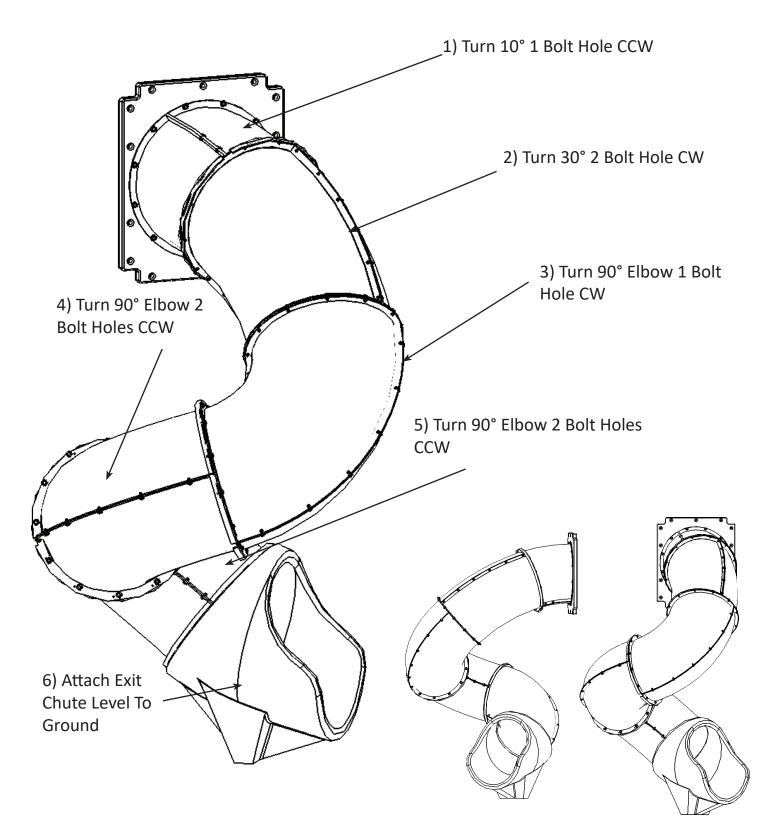


NOTE: To spiral in the opposite direction, apply CW turns instead of CCW and vice versa. Turns may need to be adjusted depending on the level of the land.

<u>Step #1</u>

Assemble the Elbow Section Halves together with the hardware as shown. Note the position of the Overlap Flanges in relation to the direction of the Bolts.

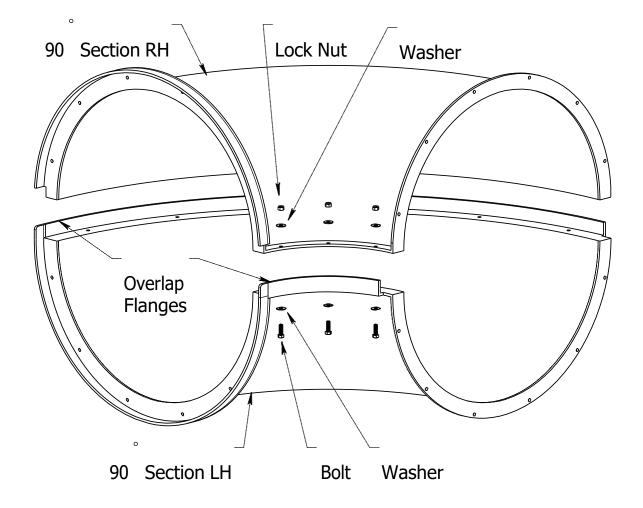

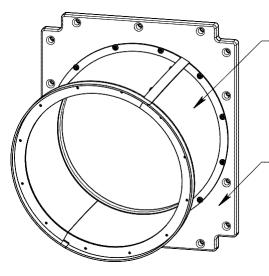


<u>Step #2</u>

Using Nuts, Washers and Bolts, attach the 10 $^\circ$ Elbow to Entry Panel in the "Quick Reference" orientation.

<u>Step #3</u>

After properly blocking the slide entrance on the playset, attach the Entry Chute/first Elbow assembly to the playset with the Lag Screws and Washers provided.

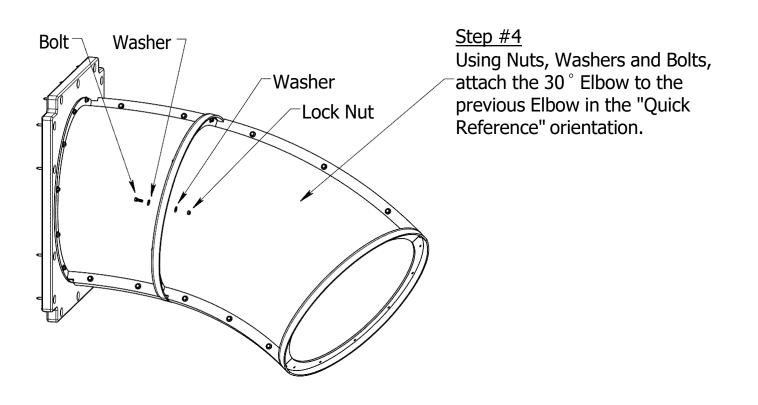

Step #5 Using Nuts, Washers and Bolts, attach the 90° Elbow to the previous Elbow in the "Quick Reference" orientation.
— <u>Step #6</u> Using Nuts, Washers and Bolts, attach the 2nd 90° Elbow to the previous Elbow in the "Quick Reference" orientation.
Step #7 Using Nuts, Washers and Bolts, attach the 3rd 90° Elbow to the previous Elbow in the "Quick Reference" orientation.

Step #8

Place the end of the Exit Chute up against the last Elbow Section and make it level with the ground. If any of the last Elbow bolt holes line up with the Exit Chute attach with Bolts and Washers (possibly 2 Places). For all the holes that don't line up attach with Lag Screws and Washers. (as many as 12 places) Start each Bolt by hand before tightening. Be careful not to overtighten the Lag Screws into the soft plastic.

